








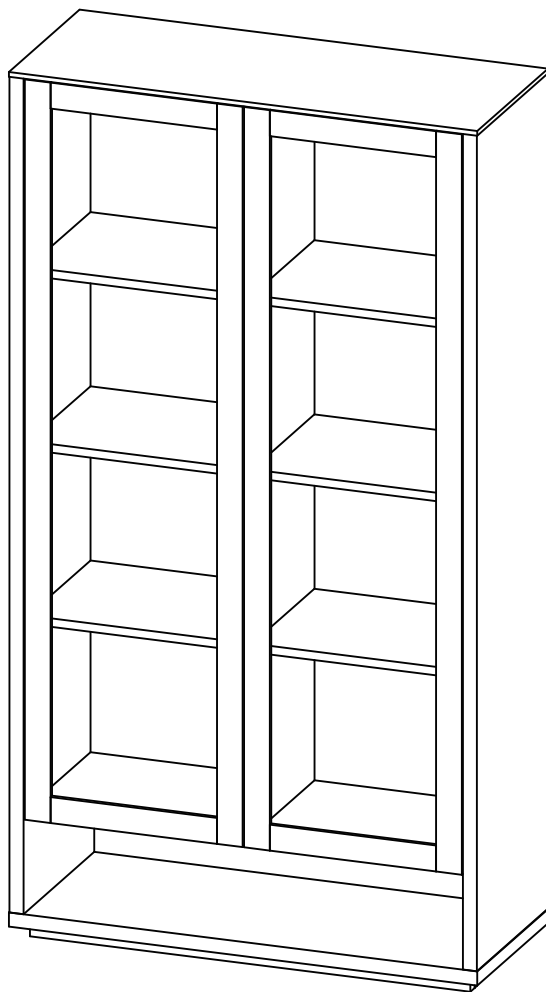


60 min




x1




x2



x1

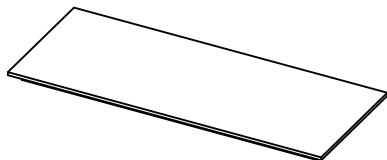

① x1




④ x2

② x1




③ x1




⑤ x1




⑥ x1

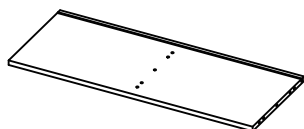


⑦ x1



⑨ x1




⑧ x1



⑩ x6



⑪ x1




Ø7x34mm
Ax45



Ø15x12mm
Bx45



Ø8x30mm
Cx36



M7 x 50mm
Dx9



M8 x 55mm
E x3



M4
Fx1



M5
Gx1




M8 x 30mm
Hx6



M8 x 16mm
I x6



M8
Jx6



Kx8



M8 x 25mm
Lx2



Ø3.5x15mm
Mx48



M8 x 20mm
Nx2



Ø3x25mm
Ox30



Px18



M6
Qx1



M8
Rx2



Sx2



Tx4



Ø3.5x40mm
Ux4




Ø3.5x20mm
Vx4




Wx4








X x6






Yx2

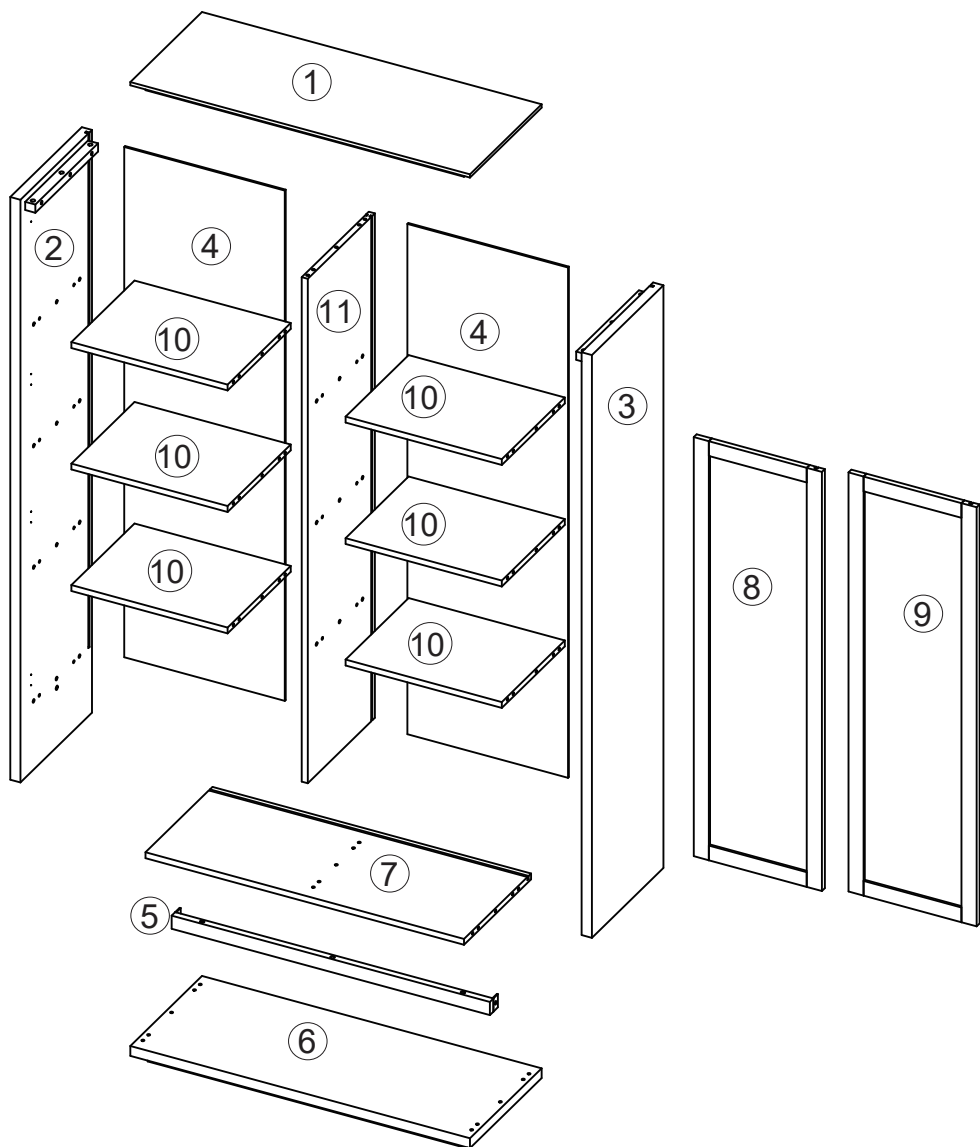


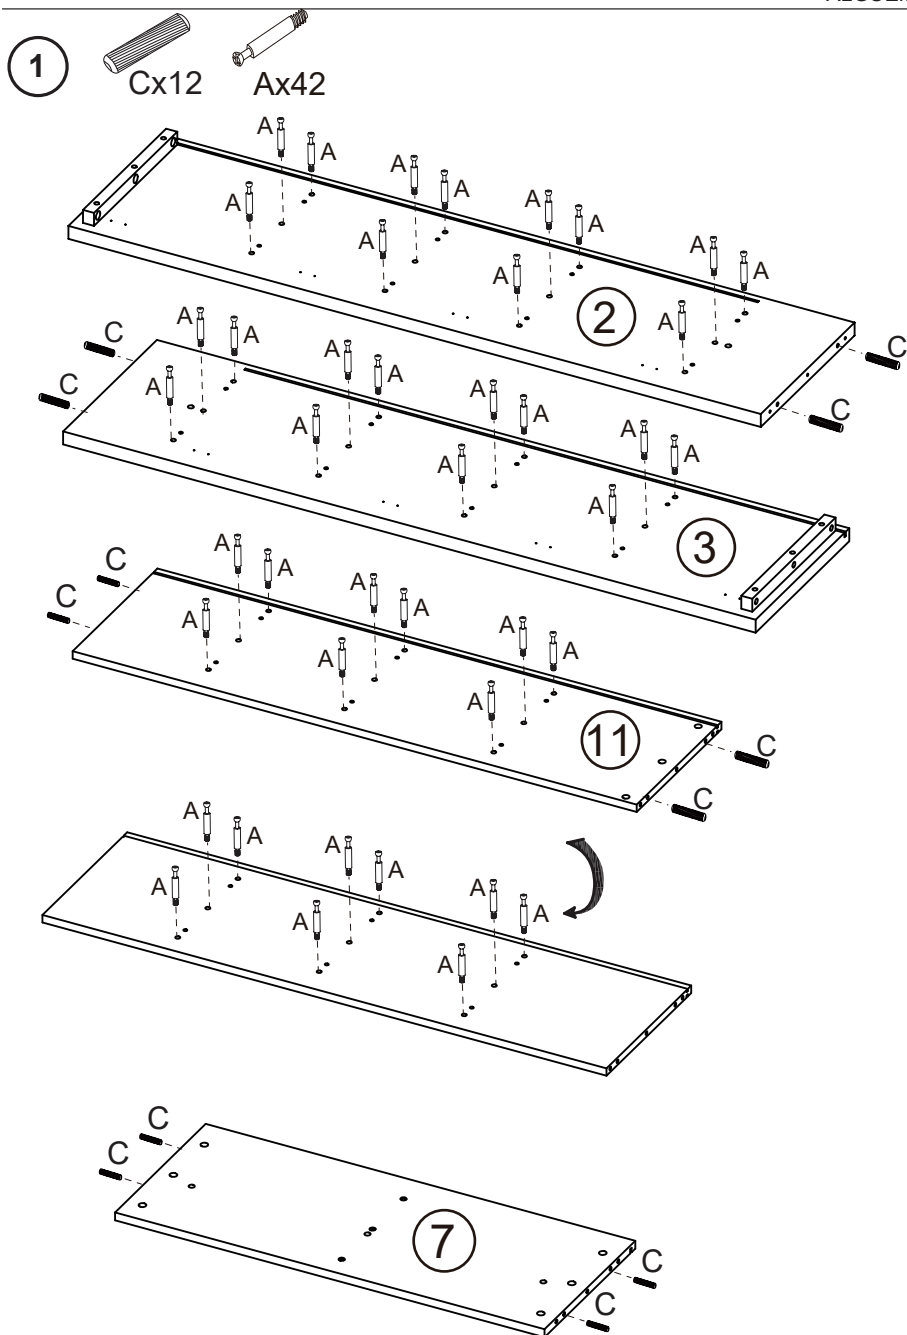

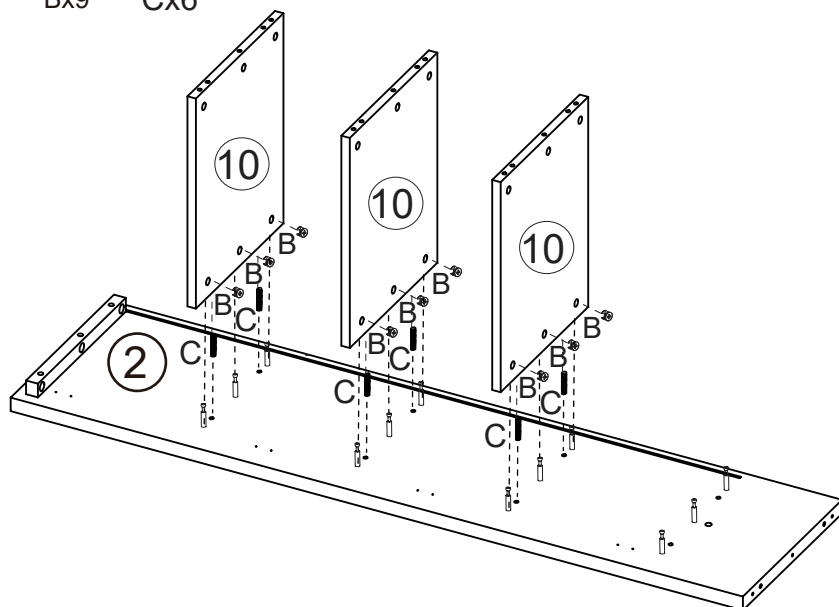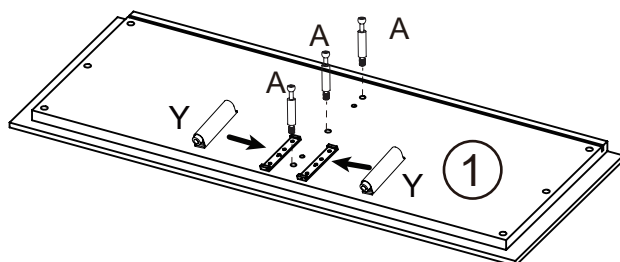

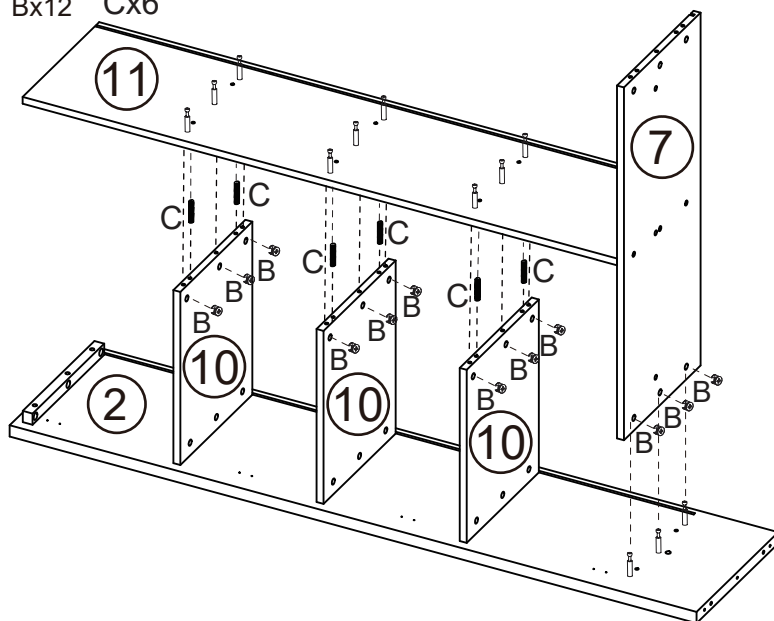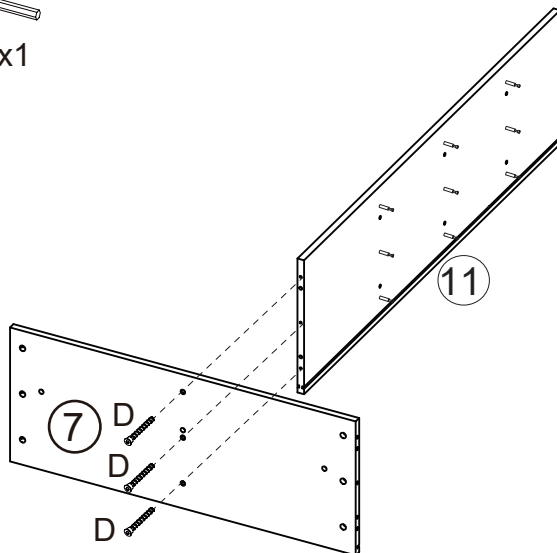

6

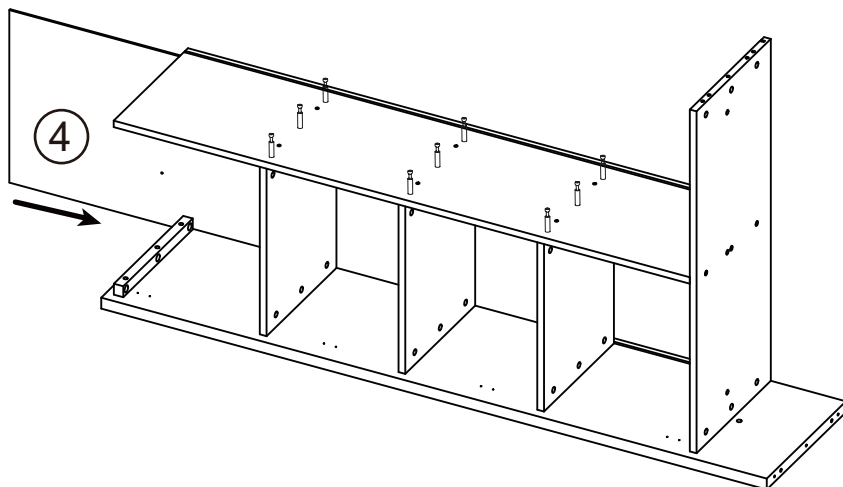


7







Bx9




Cx6

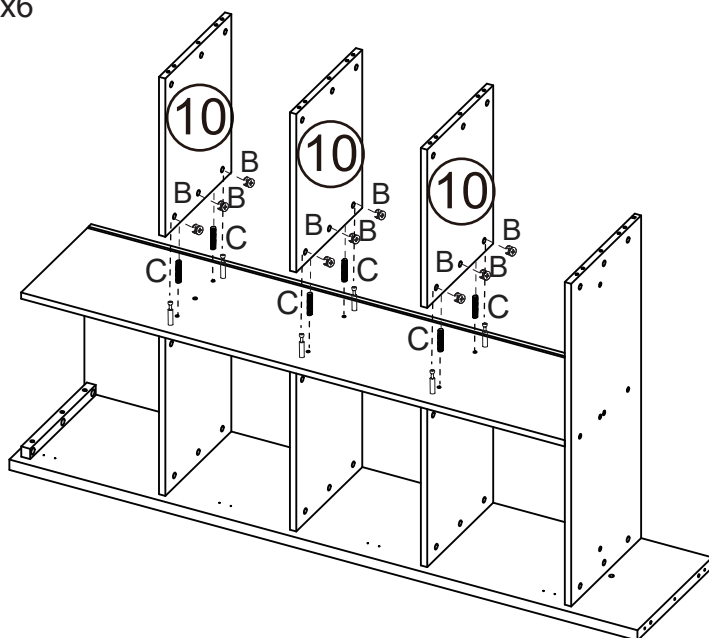

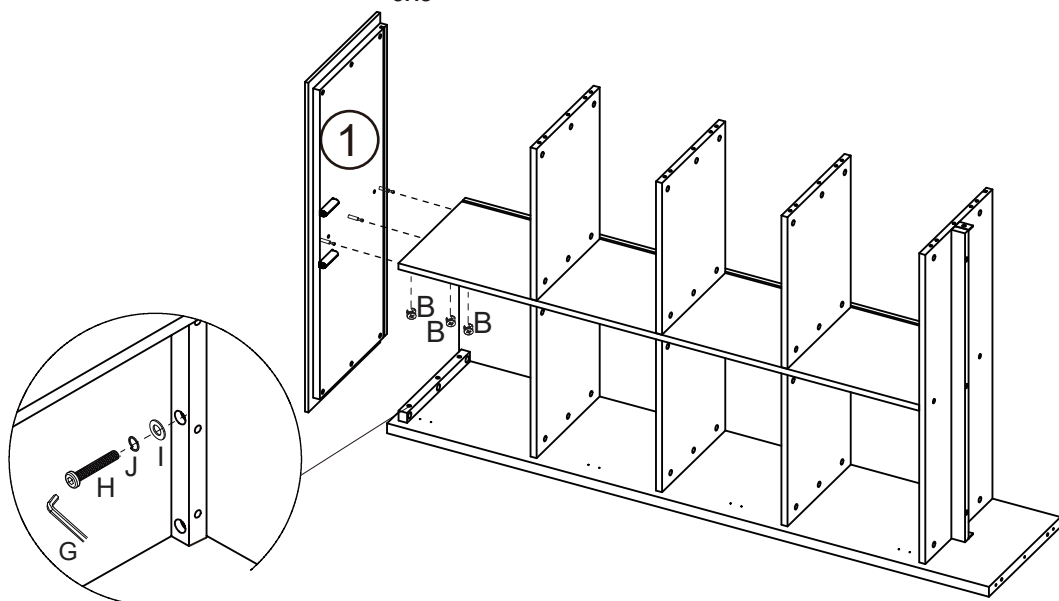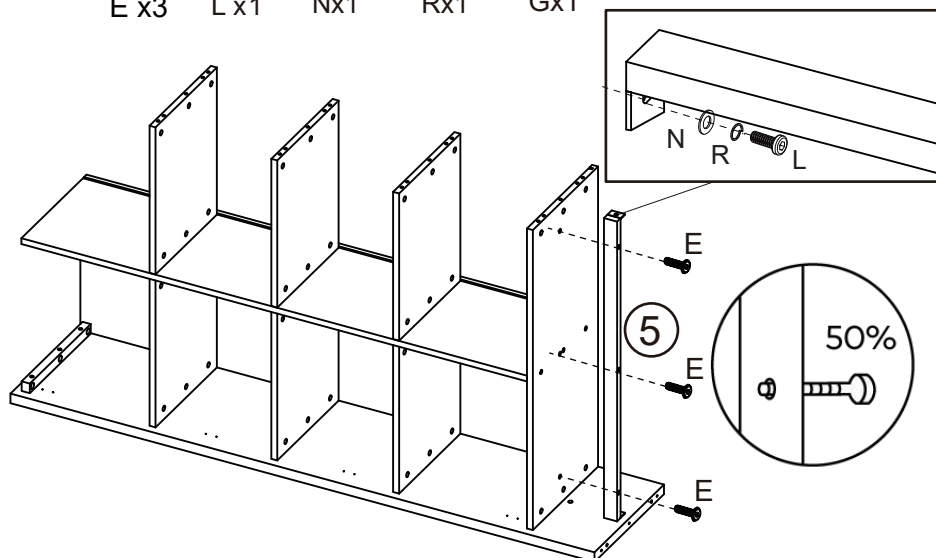

10

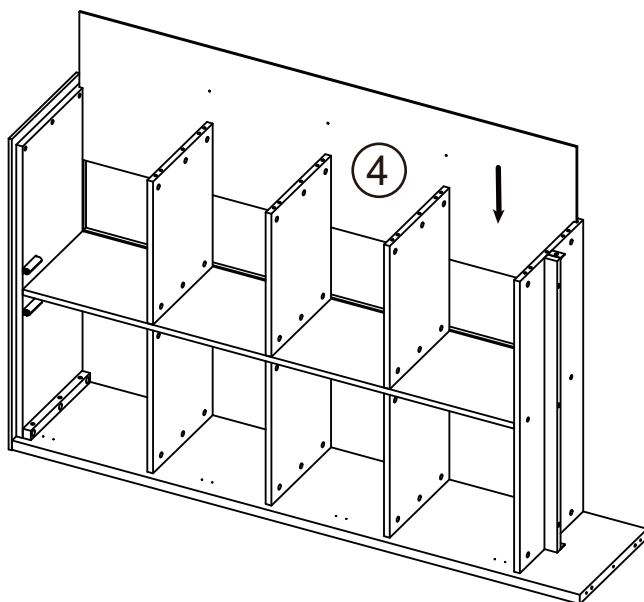

11



Bx12




Hx3



Ix3



Jx3



Gx1



Lx1







Nx1






Rx1





Cx6

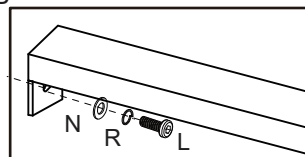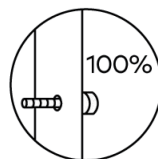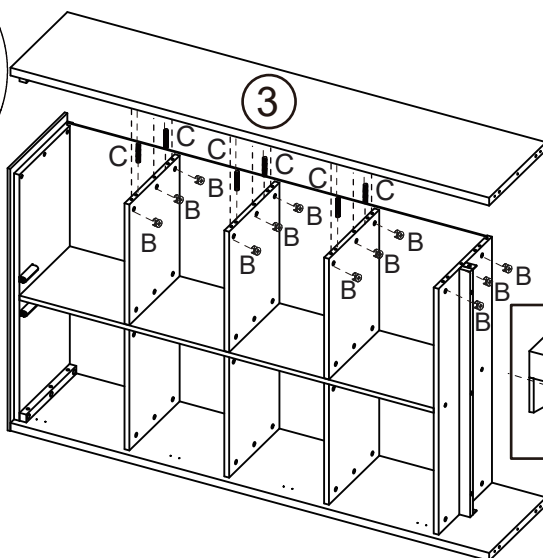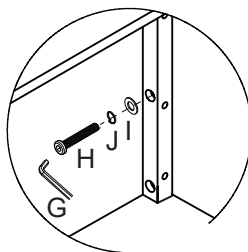


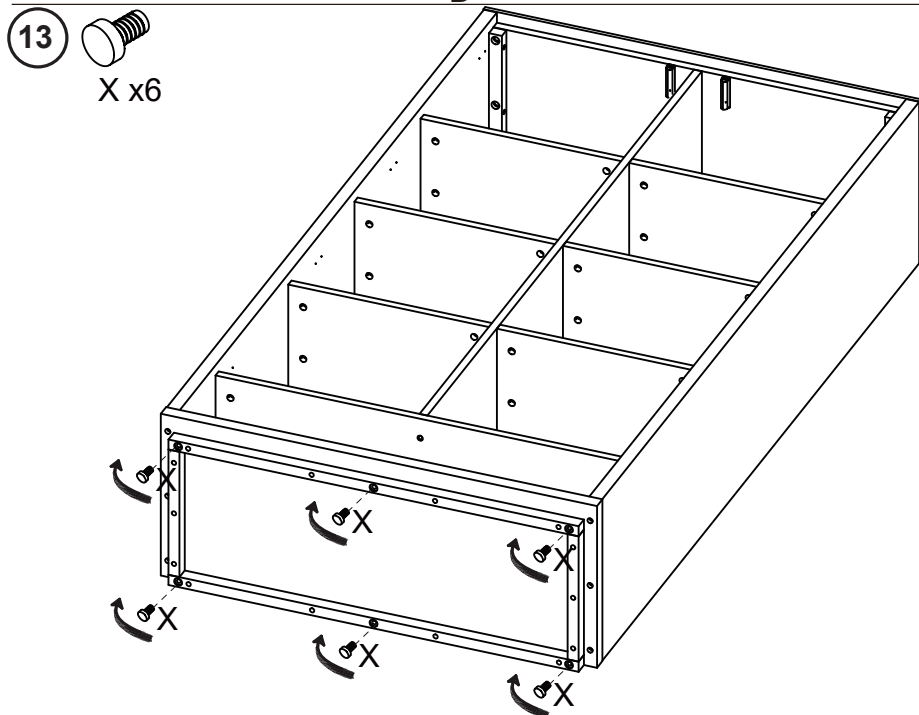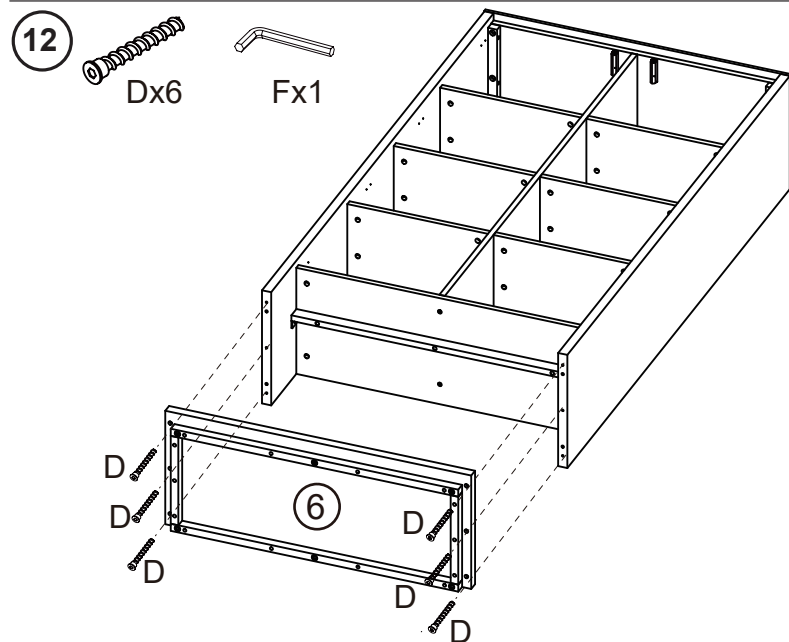

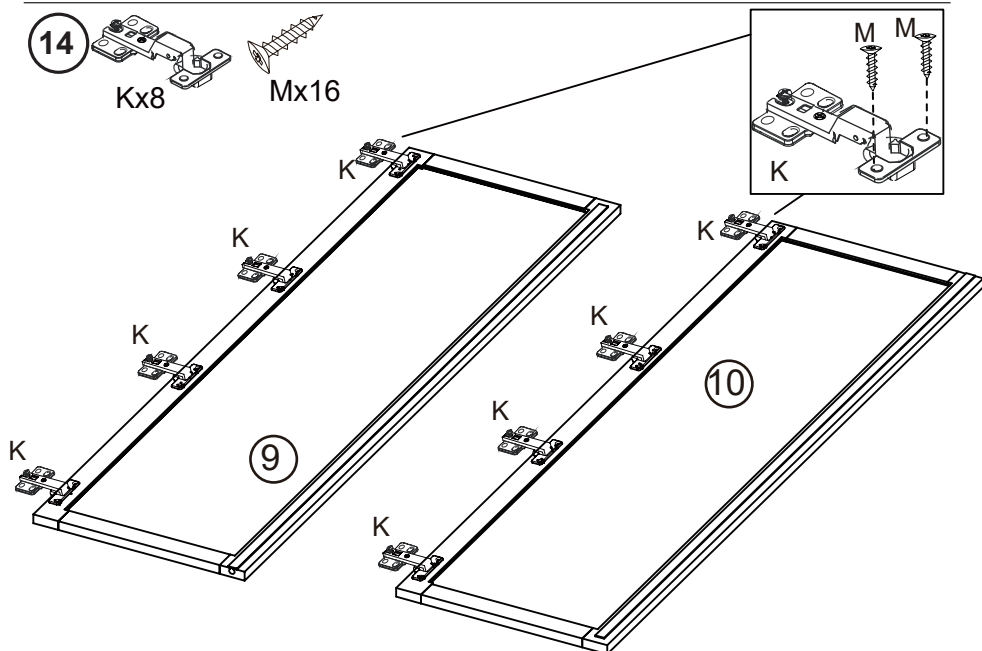

15 Mx32

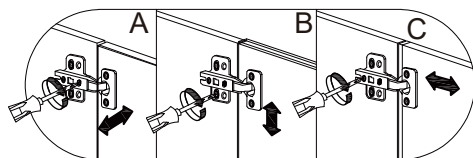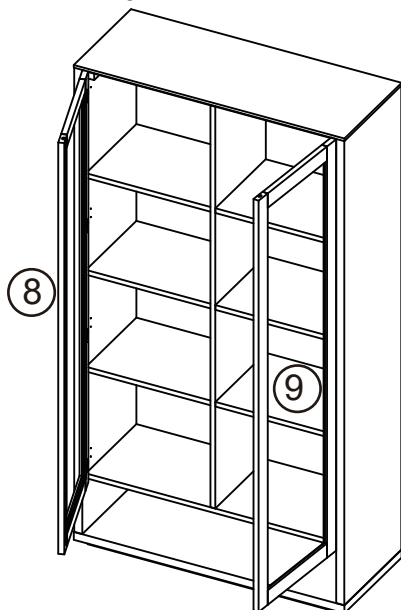

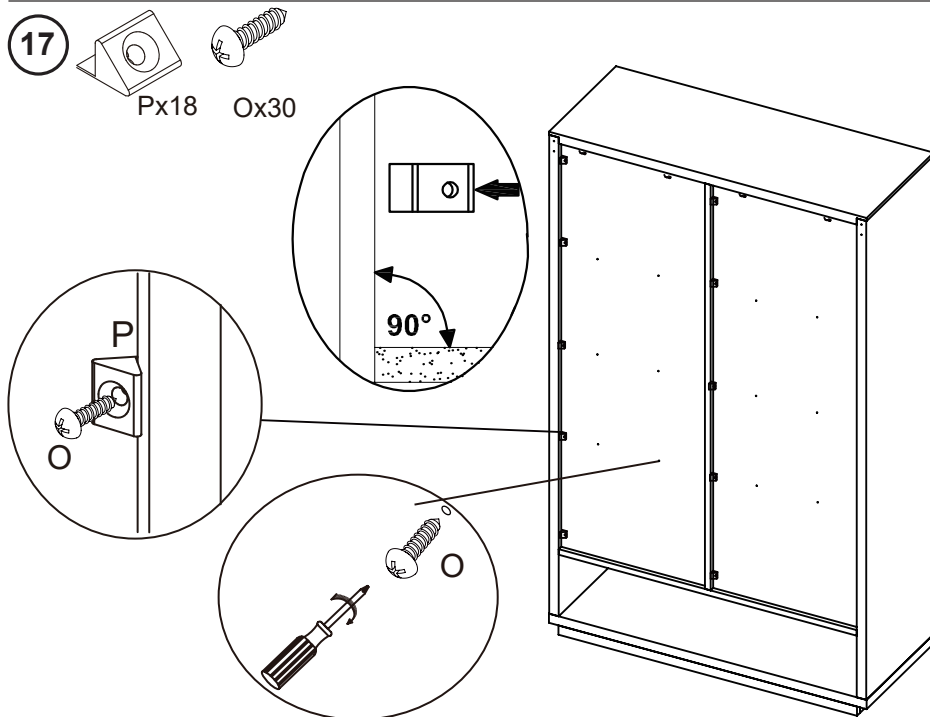

A diagram showing a U-shaped cable with a weight hanging from its left end. The label $Sx2$ is written below the cable.

Sx2



Tx4










Ux4



Vx4



Wx4

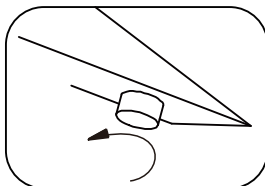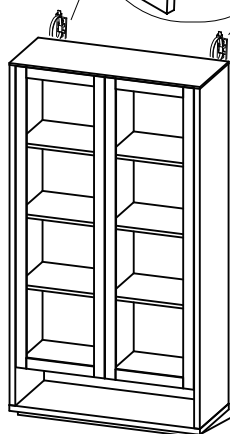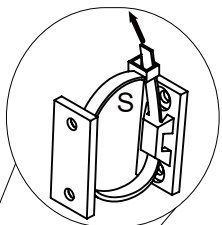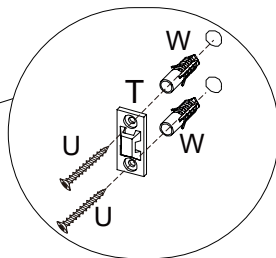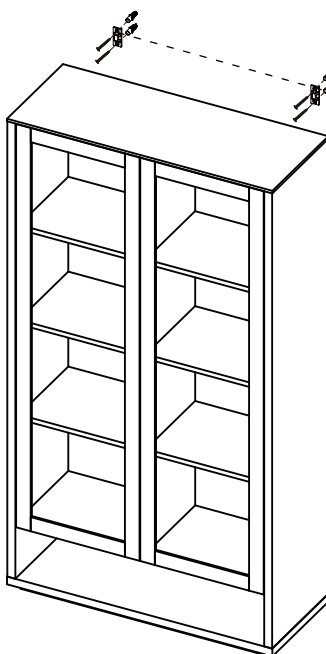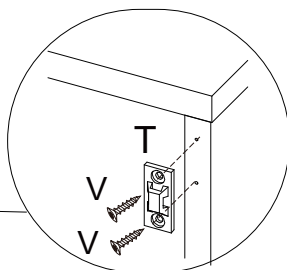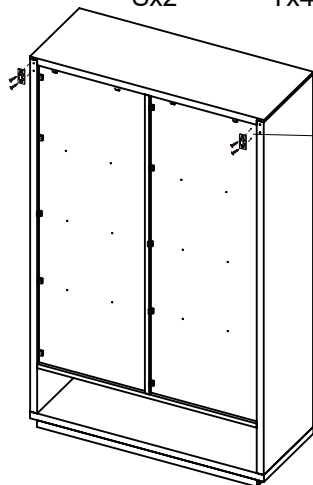



THAT'S ALL FOLKS!

Share your style!

#KaveHome

