



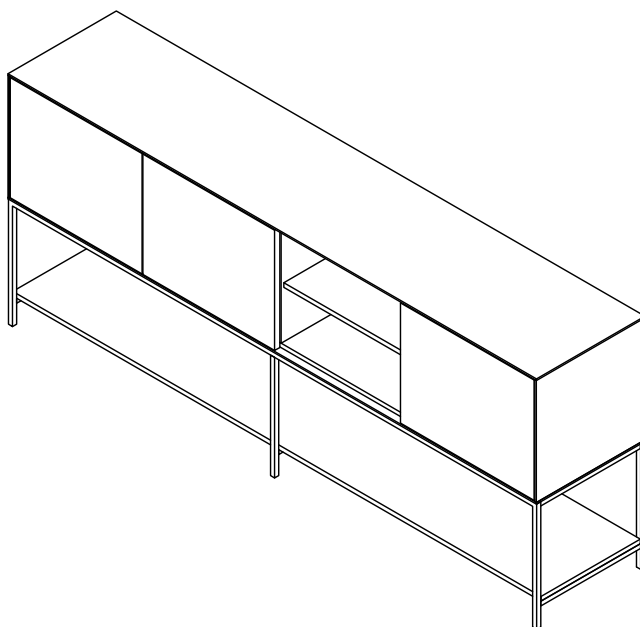
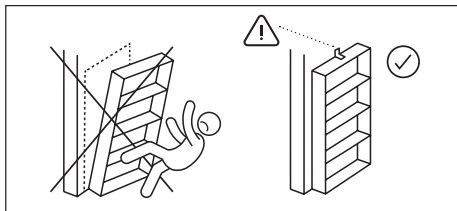
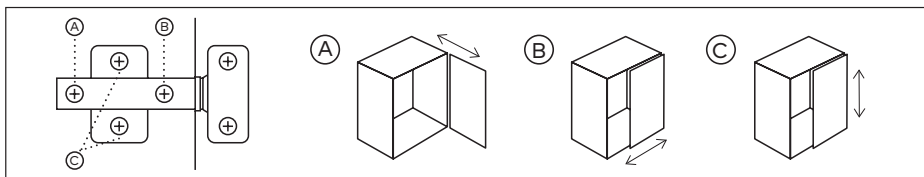
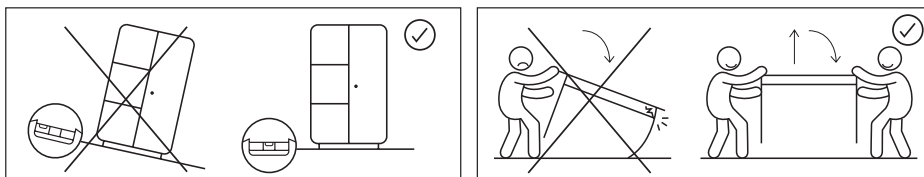


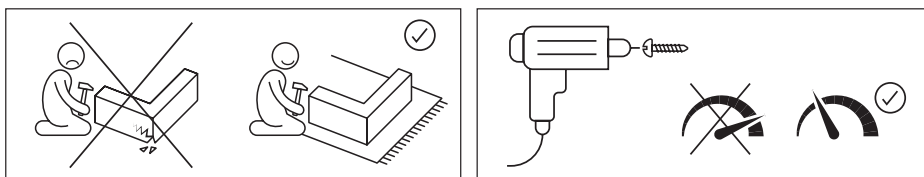

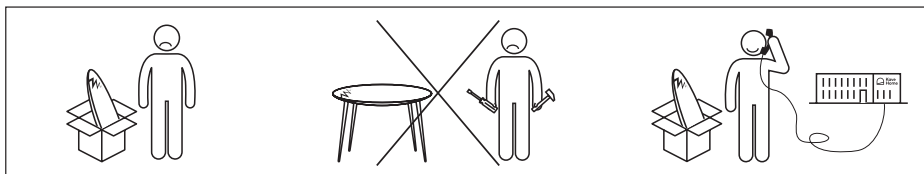


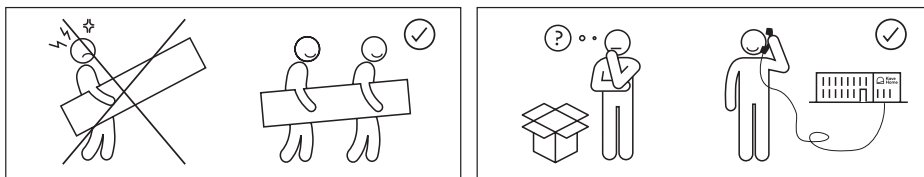


50 min




x1




x2




x1




Ax1




Bx1




Cx1




Dx1




Ex1




Fx1




Gx4




Ix1




Jx1




Lx1



Mx3

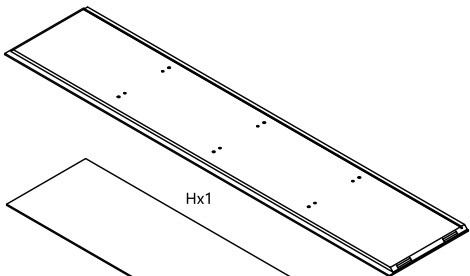

Hx1

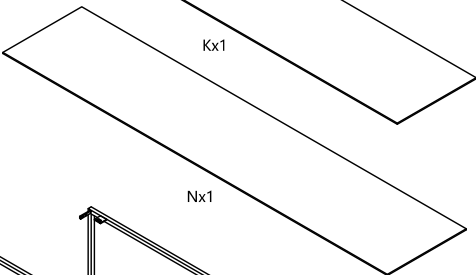


Kx1


Nx1



Ox2

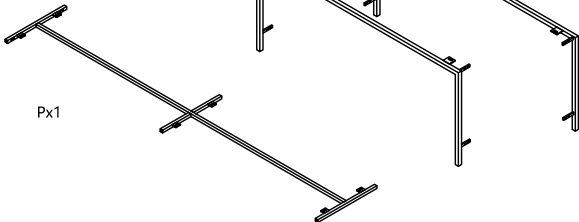

Qx2

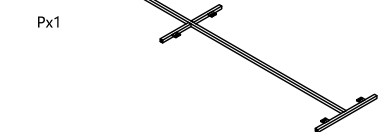

Px1



Rx1(m4)



Sx16(ø15x12)



Tx16(M6x41)



Ux12(ø20)



Vx16(ø8x30)



Wx61(ø3.5x16)



Xx4



Yx2



Zx13



AAx12(ø5x14)


ACx26
(ø12.5xM6x12)

ADx8
(M6x15)


AEx4(ø3.5x16)



AFx4



AGx4(ø3.5x50)



AHx4



Alx2



AJx3
(ø3x10)

AKx3
Ø16mm



ALx3




AMx3

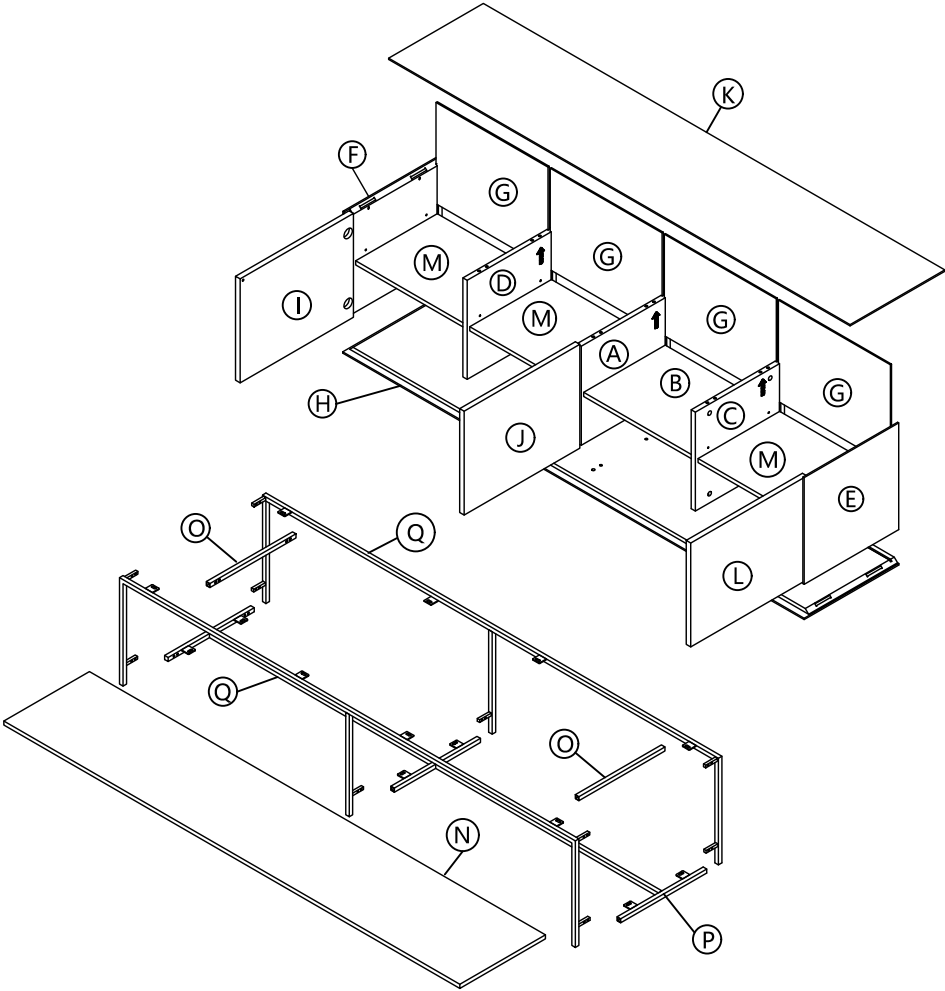


1

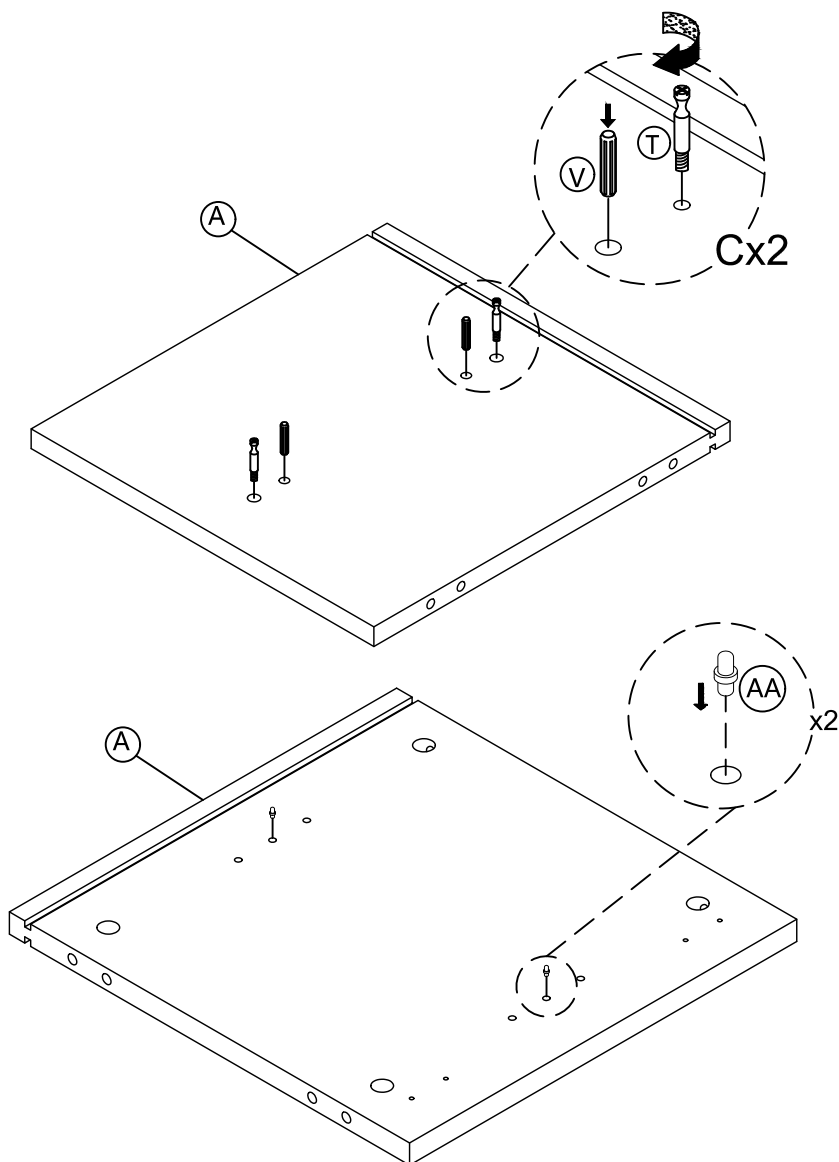


2

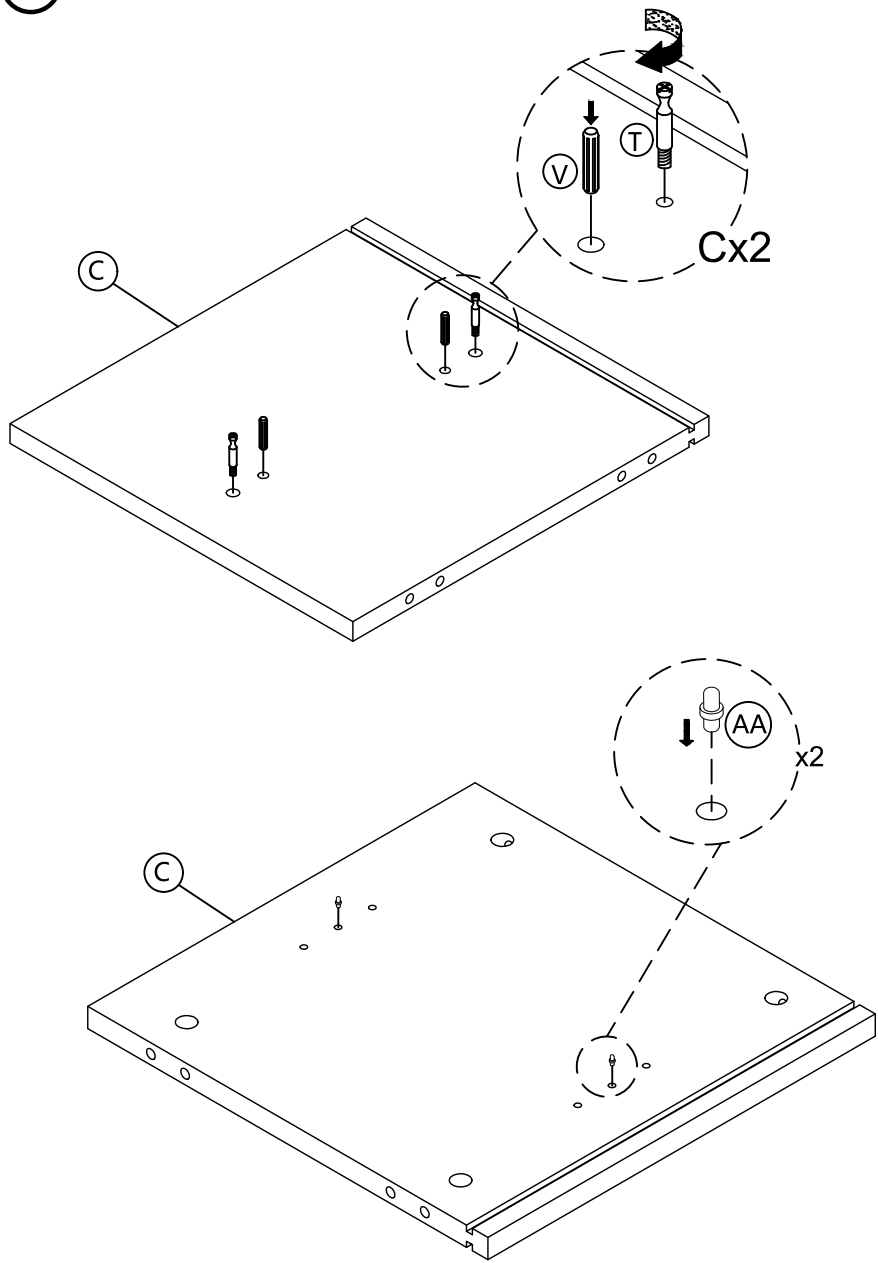


3

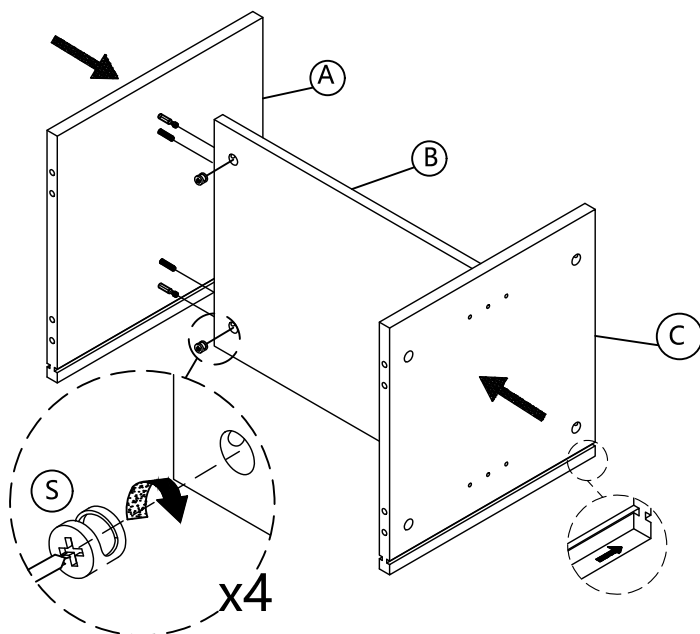


4

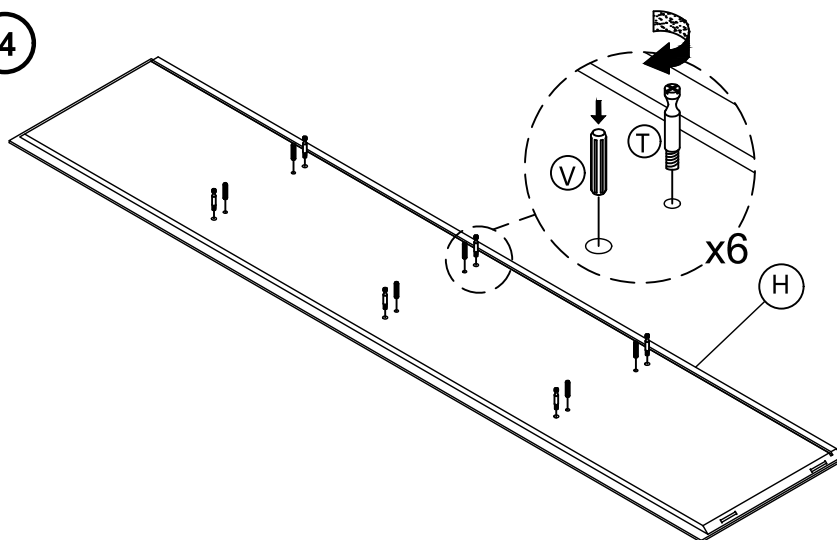



5

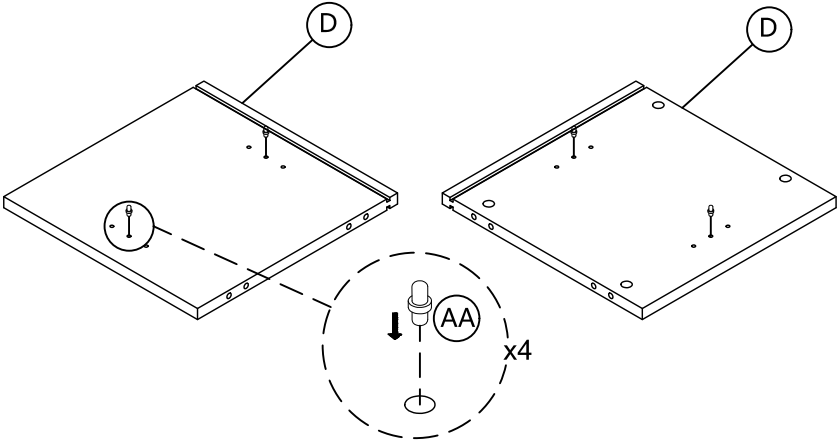


6

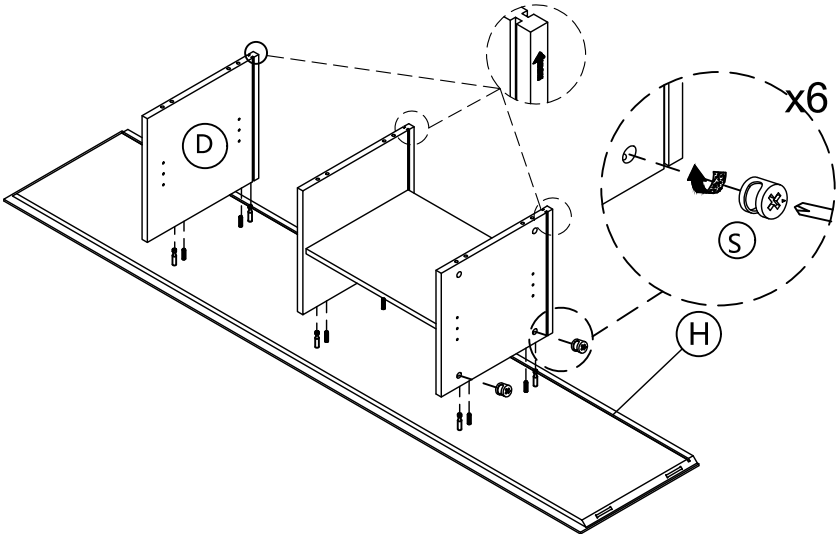


7

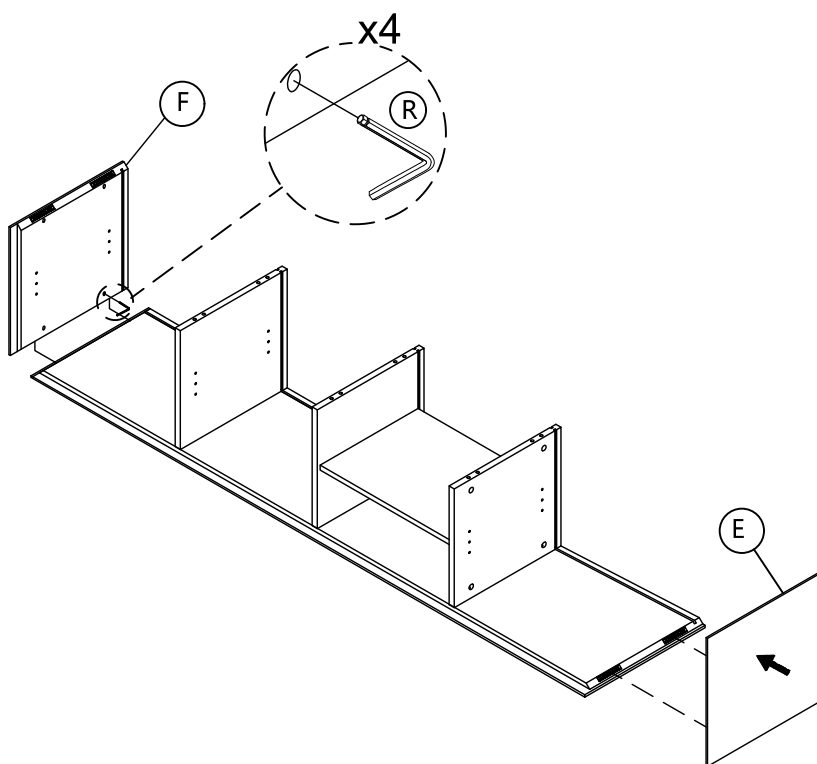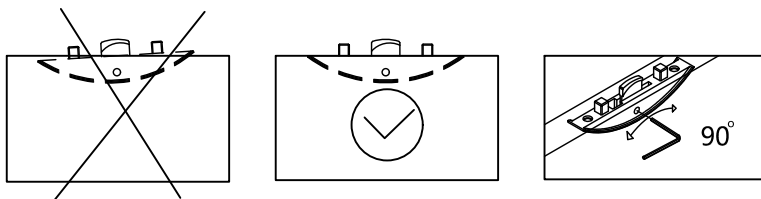


8

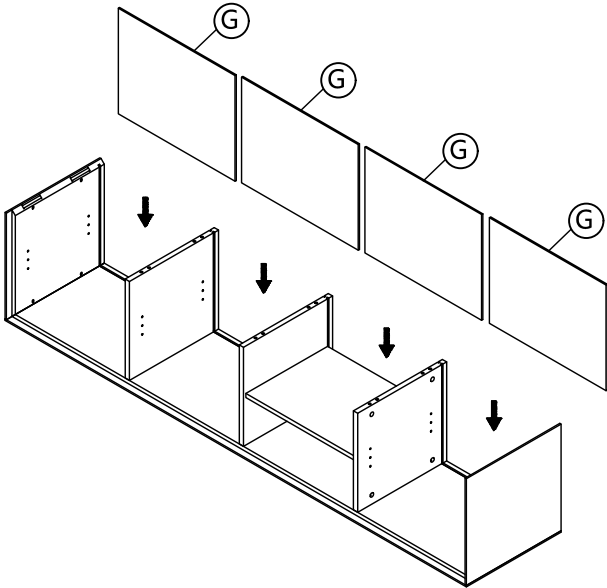


9

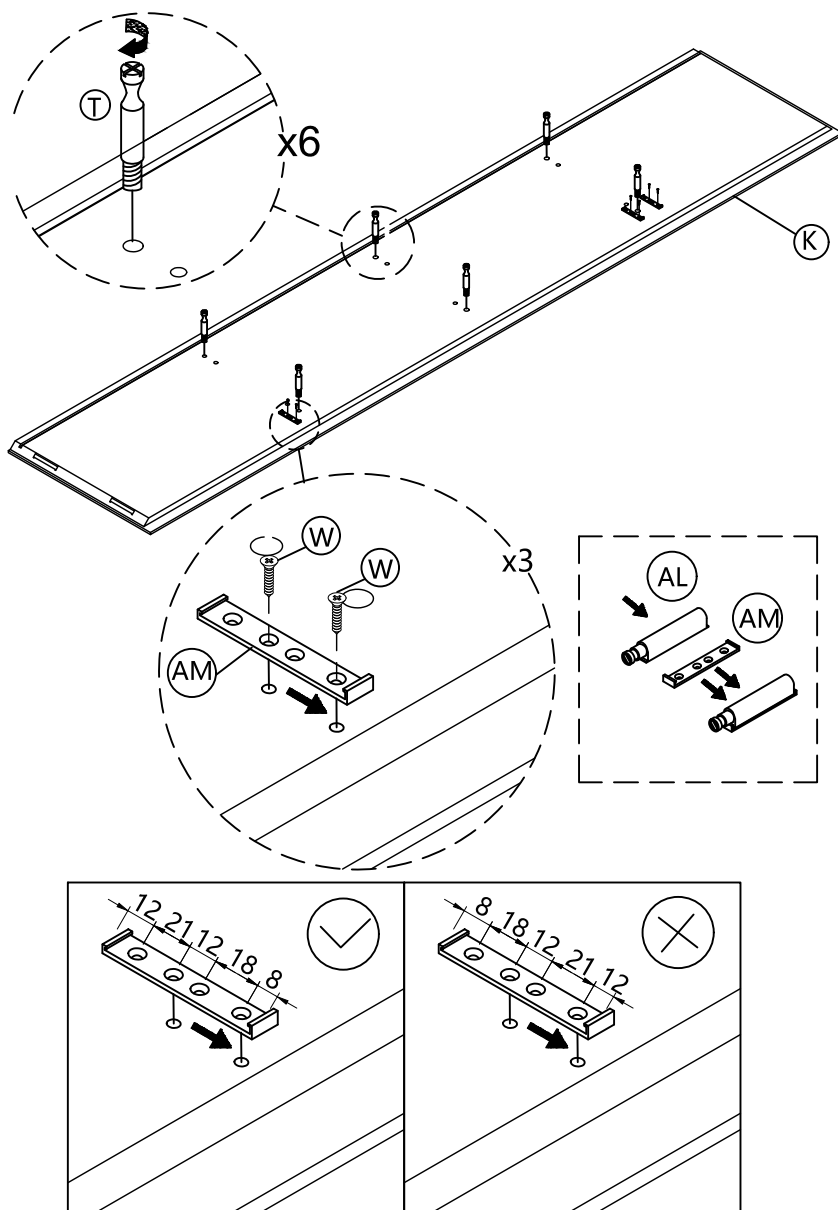


10

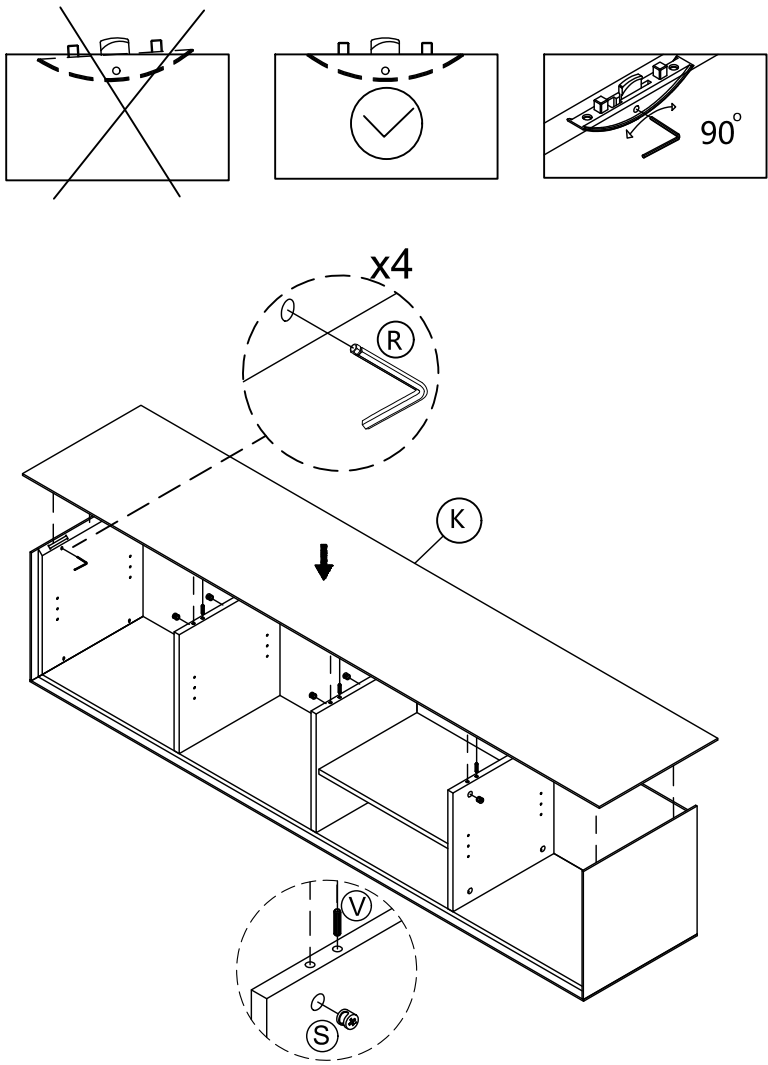


11

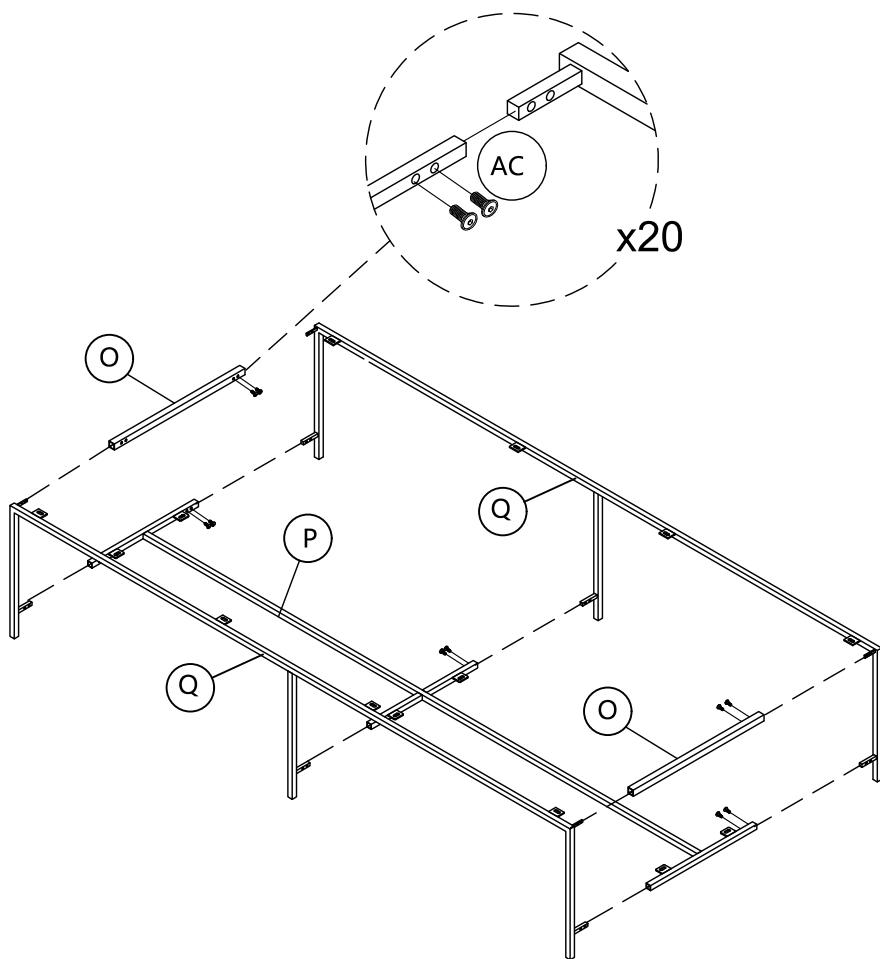


12

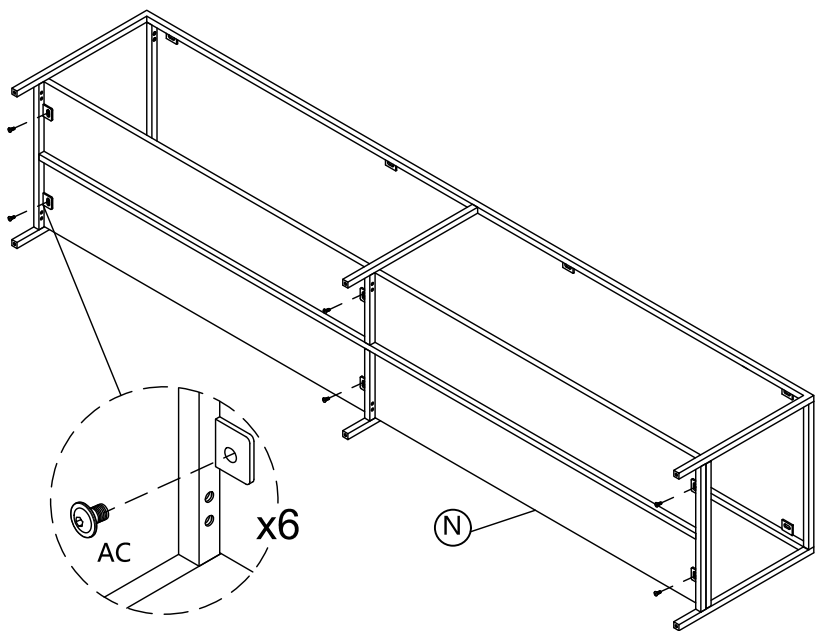


13

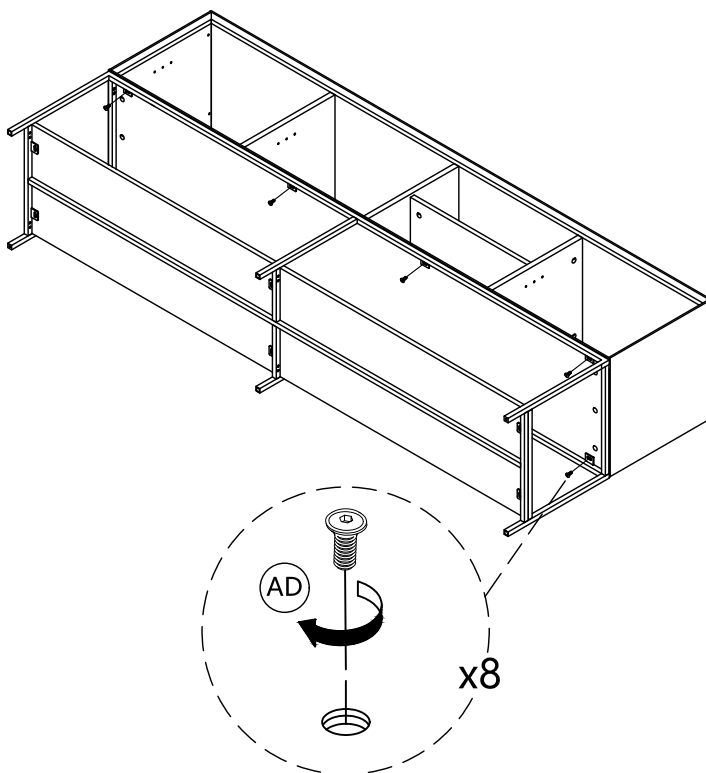


14)

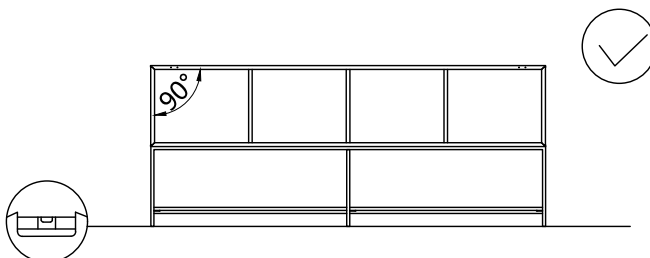


Adjust all feet to make the cabinet alignment

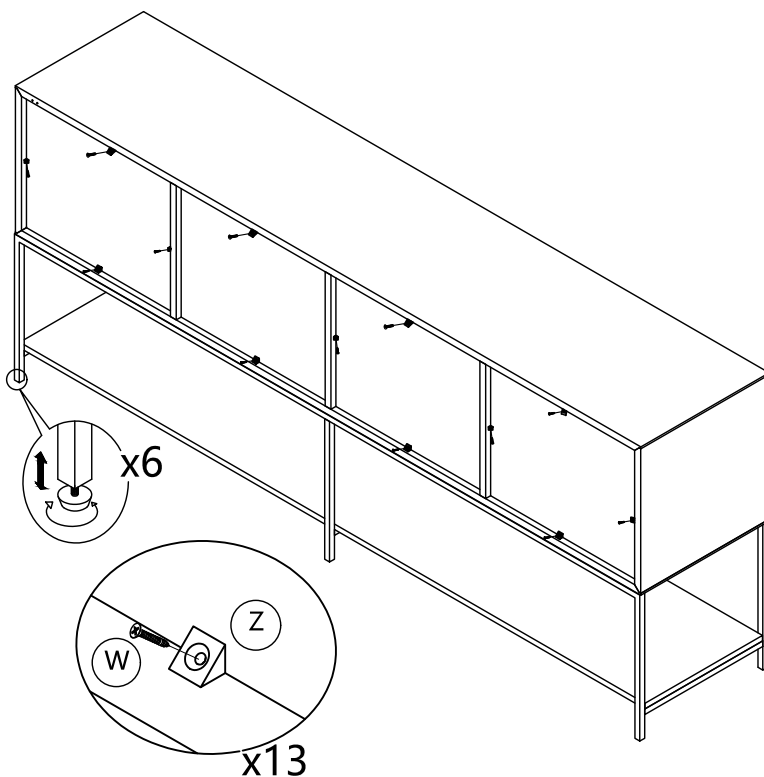


15

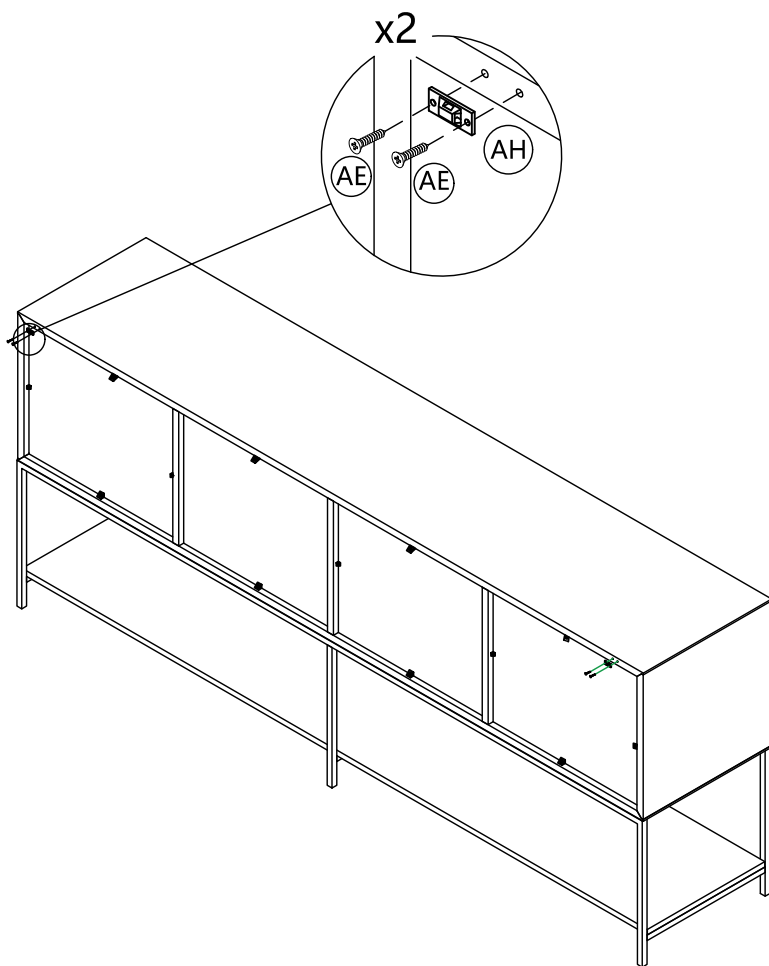


16

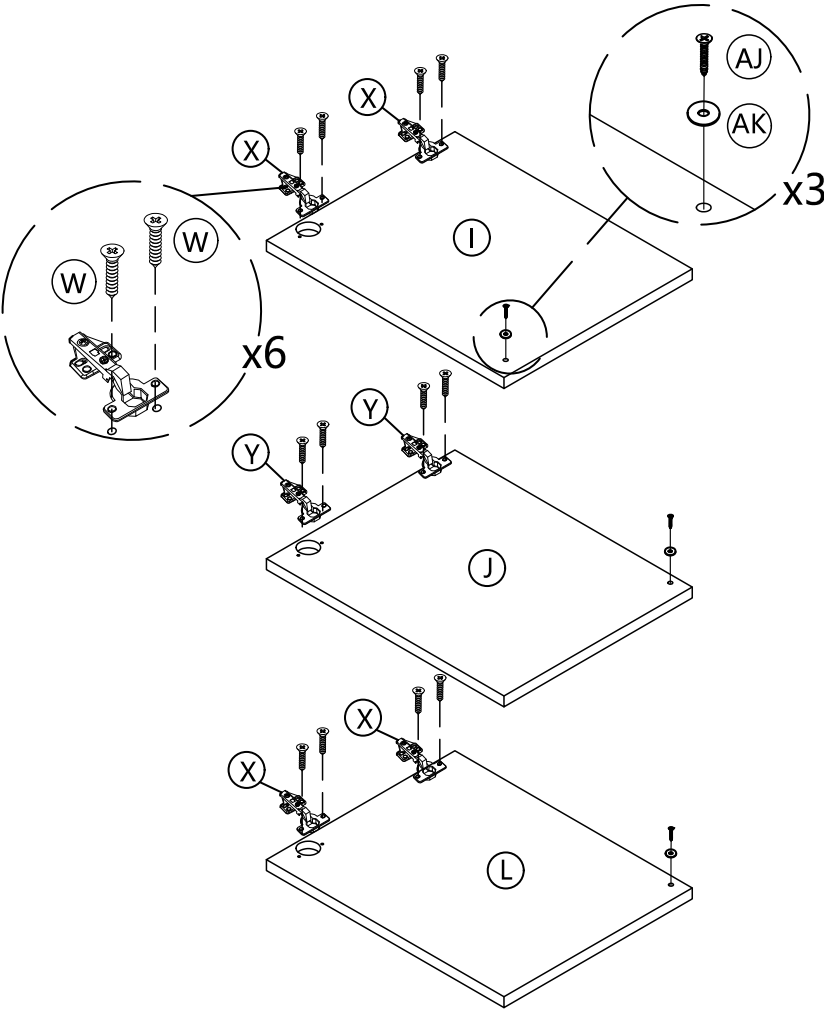


17

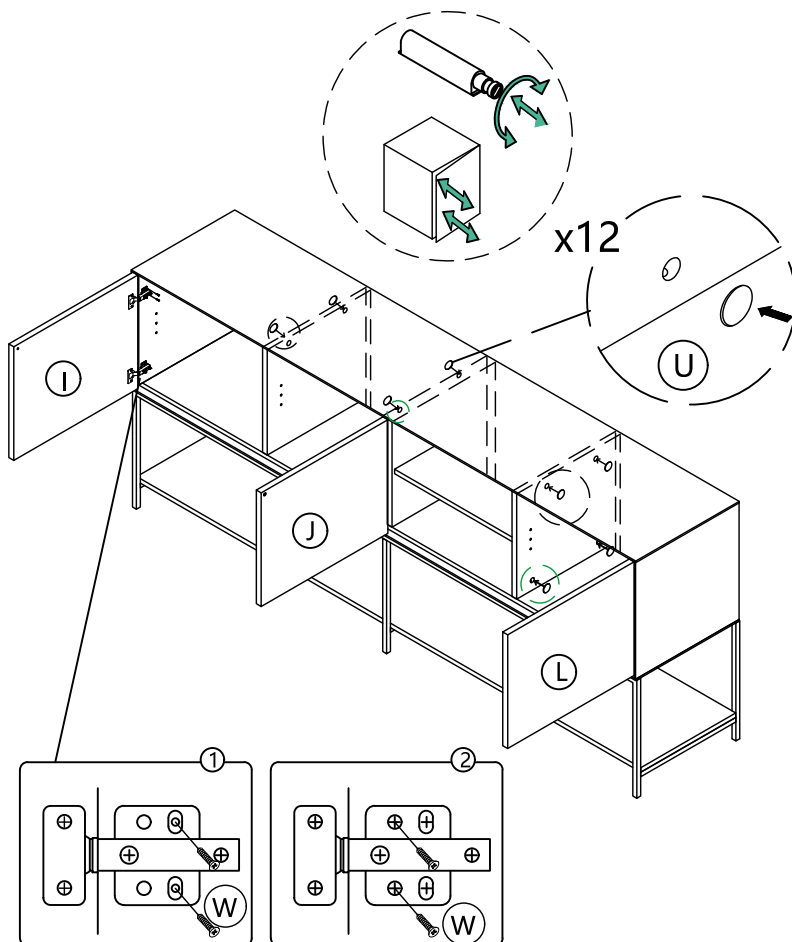


18

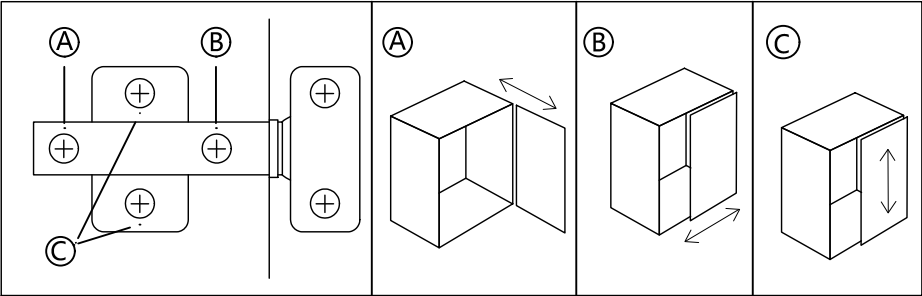


a=a
b=b

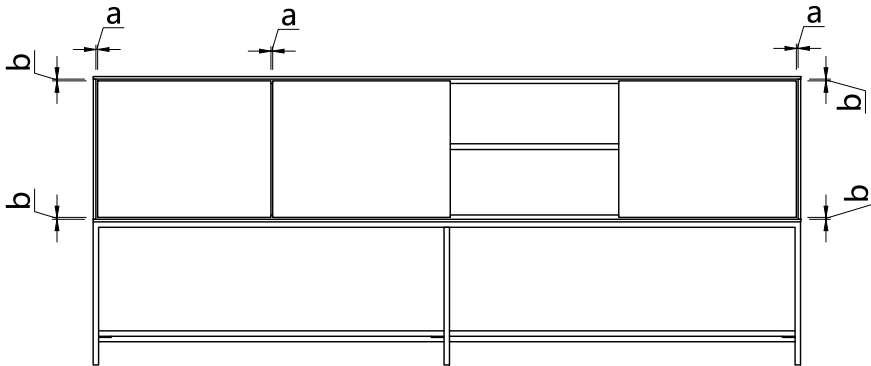


19


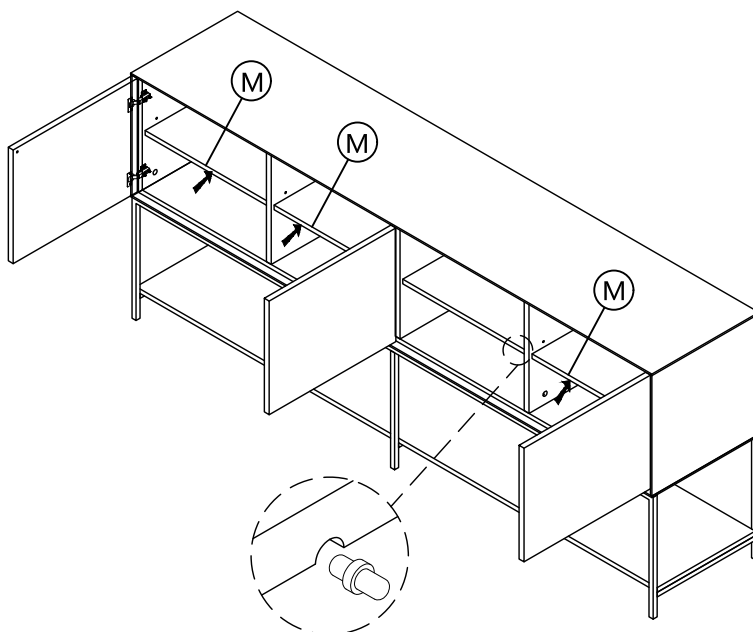


20

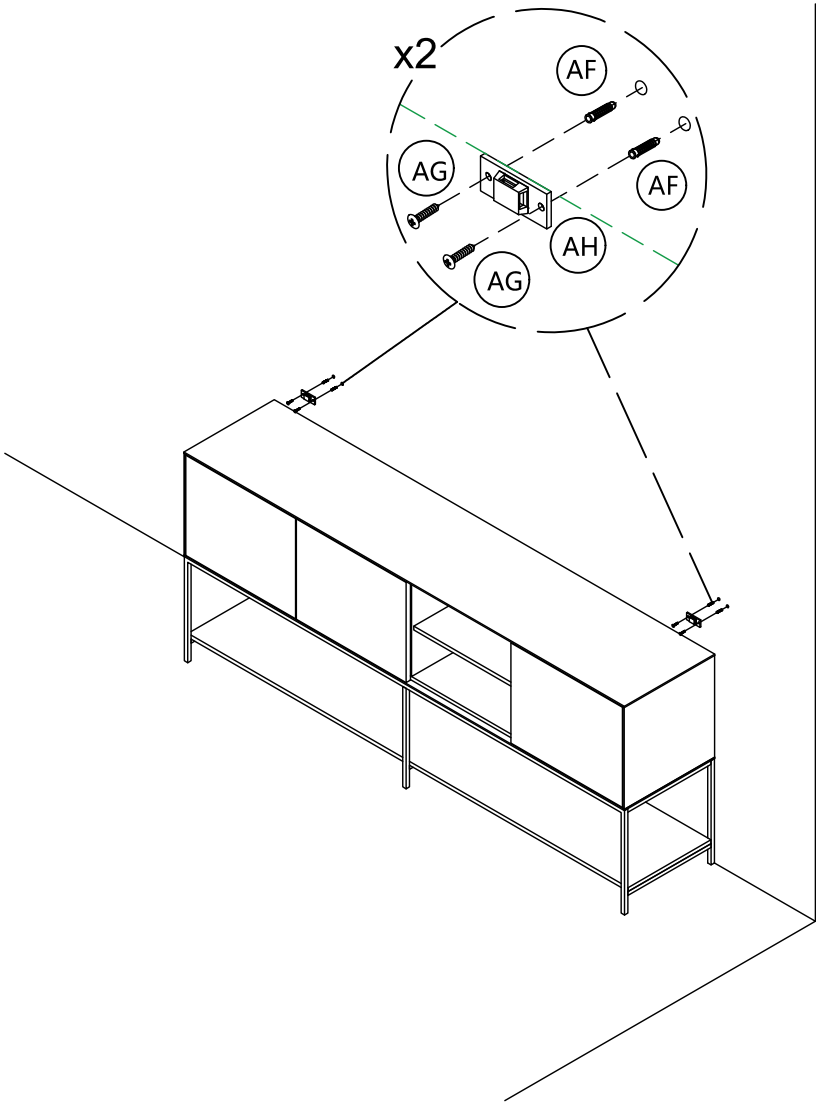

21

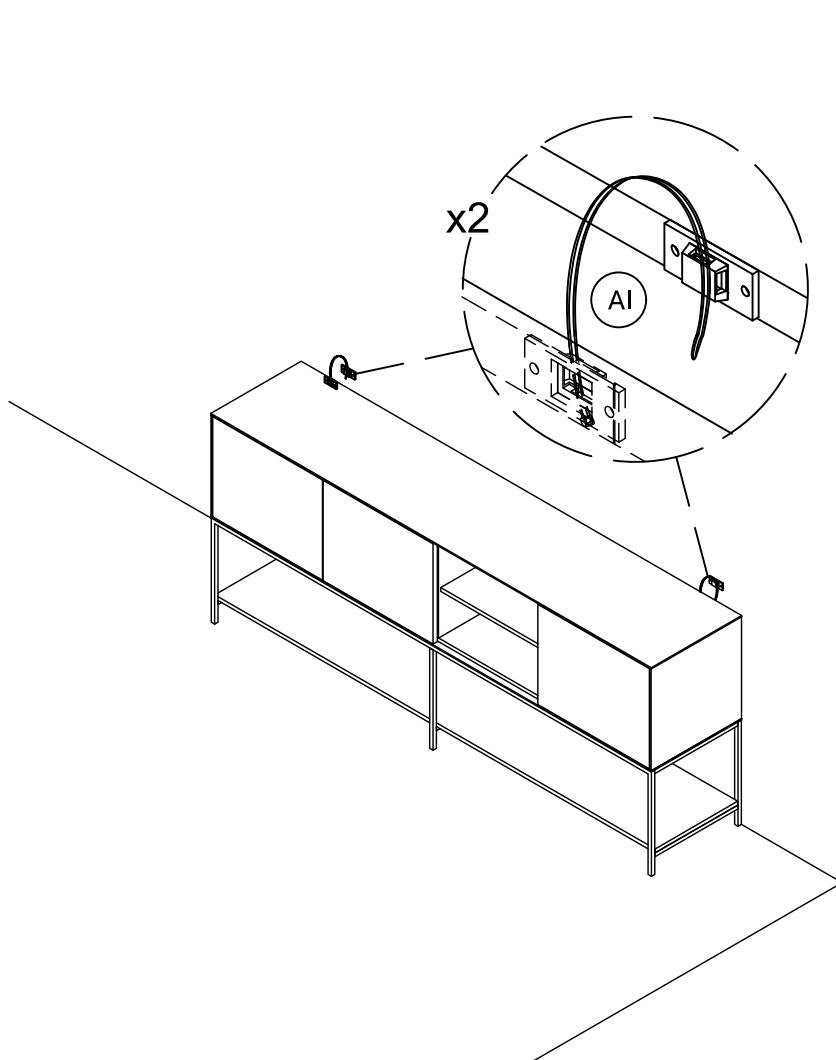

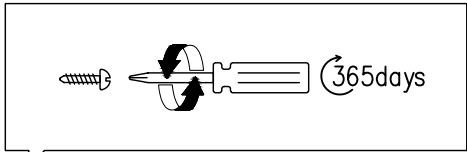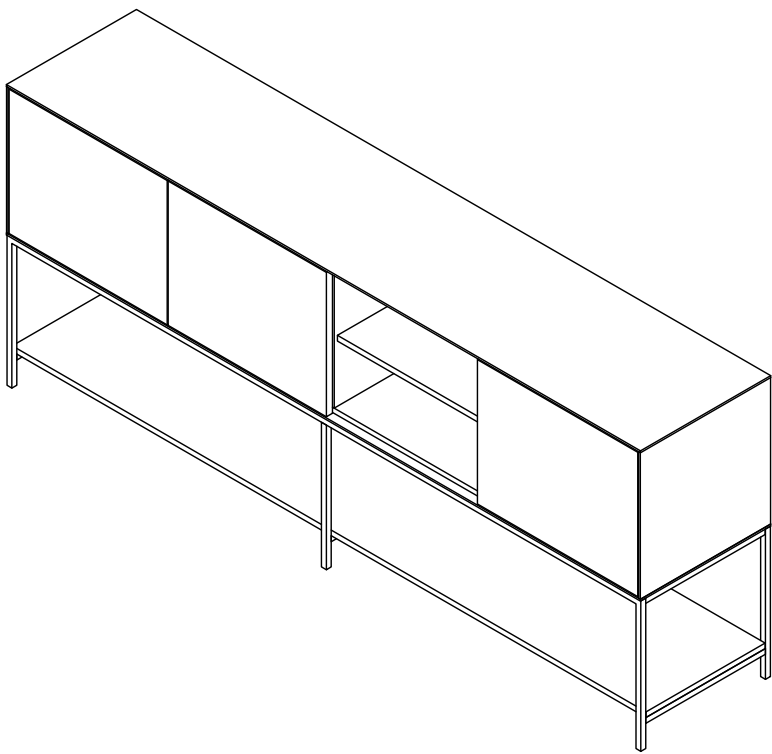



THAT'S ALL FOLKS

Share your style!

#KaveHome

