






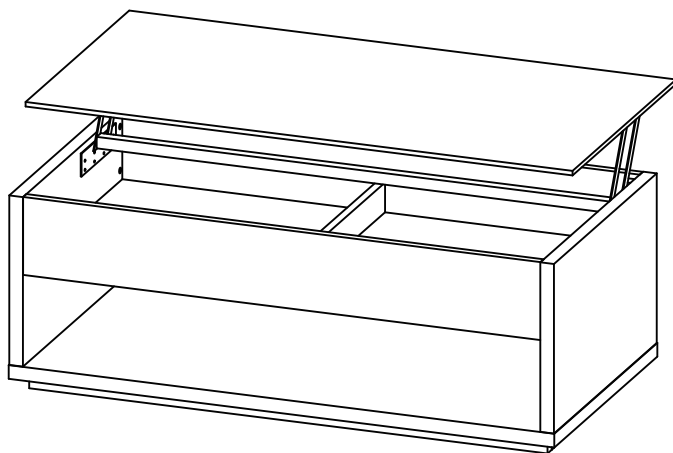

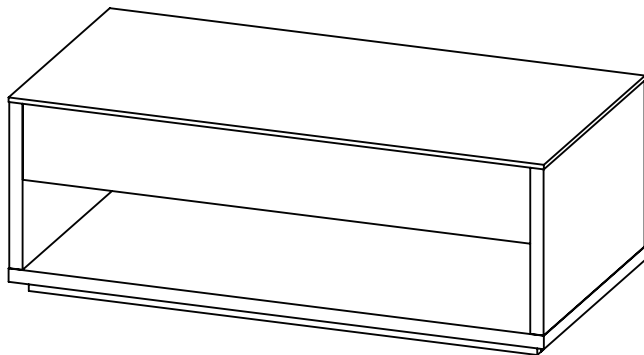

30 min




x2




x2




x1

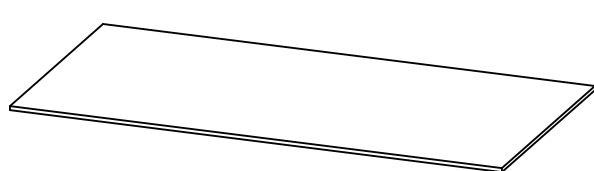


① x1




② x1




③ x1

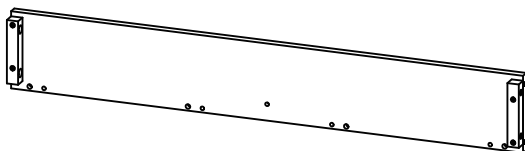


④ x2

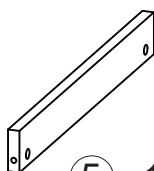

⑤ x1

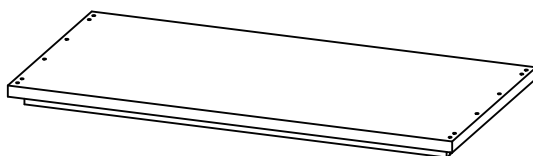

⑥ x1

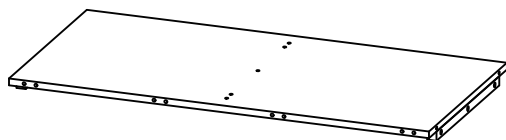

⑦ x1



⑧ x1




Ø7x34mm
Ax10



Ø15x12mm
Bx10



Ø8x30mm
Cx26



M7 x 50mm
Dx11



M8 x 55mm
E x4



M4
Fx1



M5
Gx1



M8 x 30mm
Hx14



M8 x 16mm
I x14




M8
Jx14




K x6



Ø3.5x15mm
Lx18



Mx1

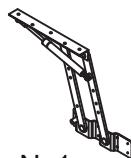

Nx1



M6 x 13mm
Ox4




M6 x 30mm
Px4



Qx8




Rx2


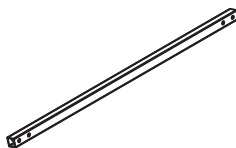





Sx1





M6 x 15mm
T x8

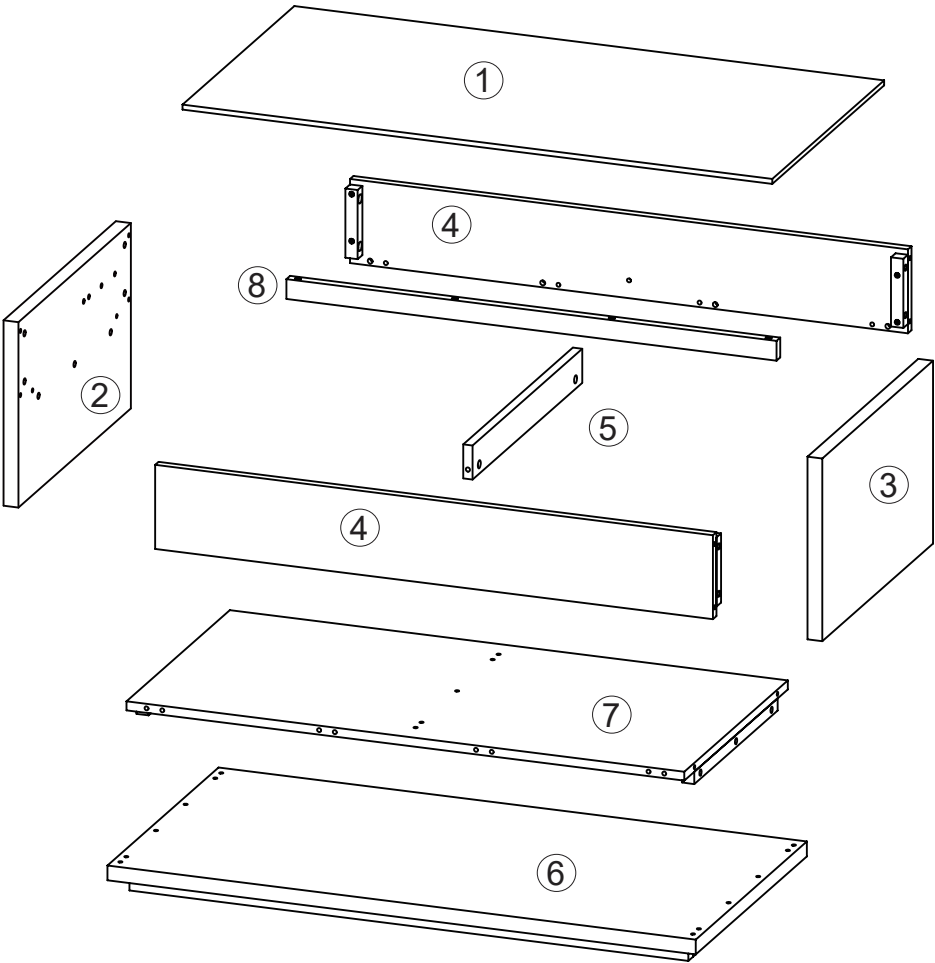

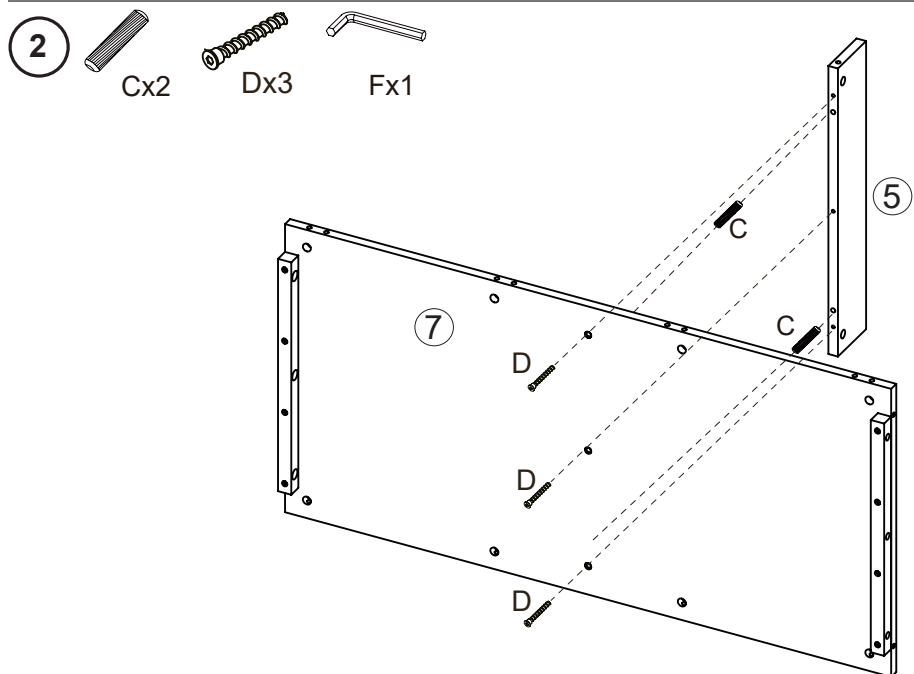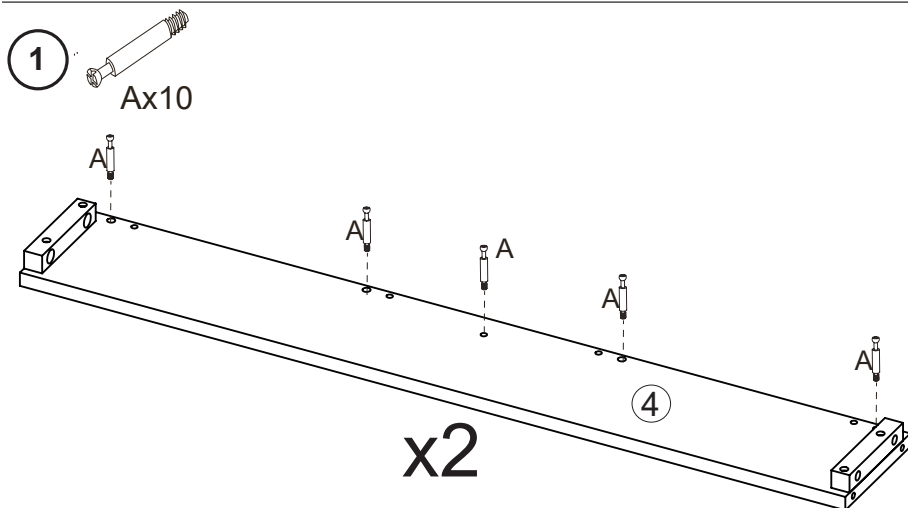

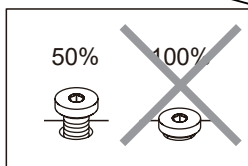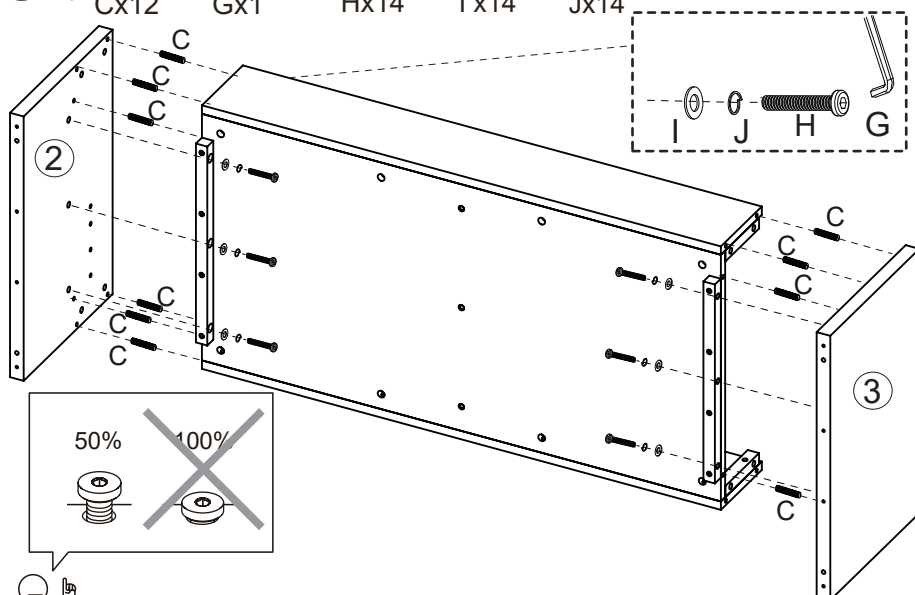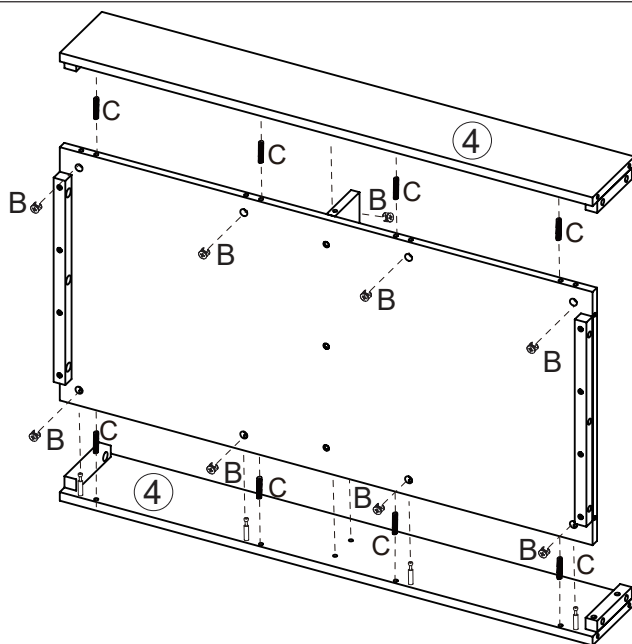

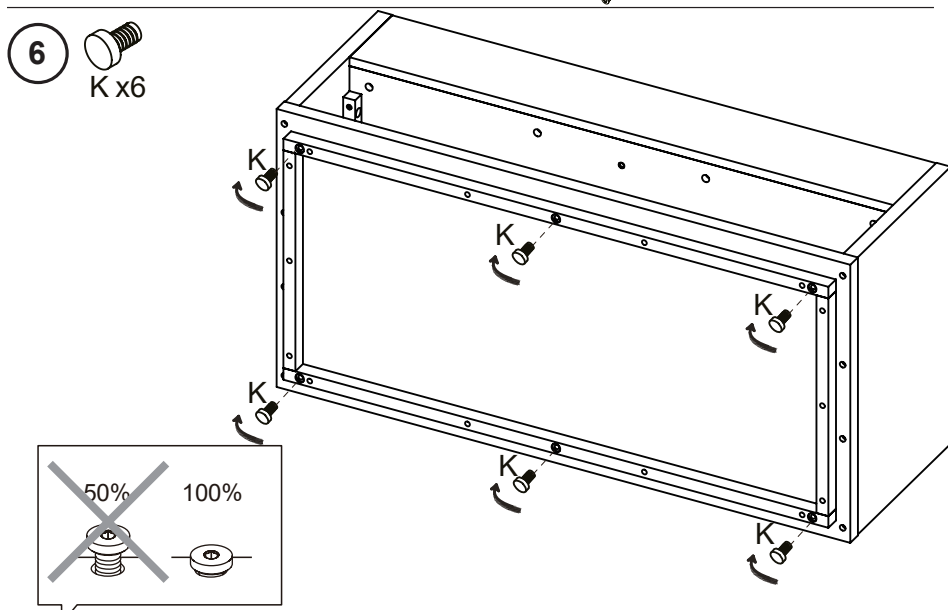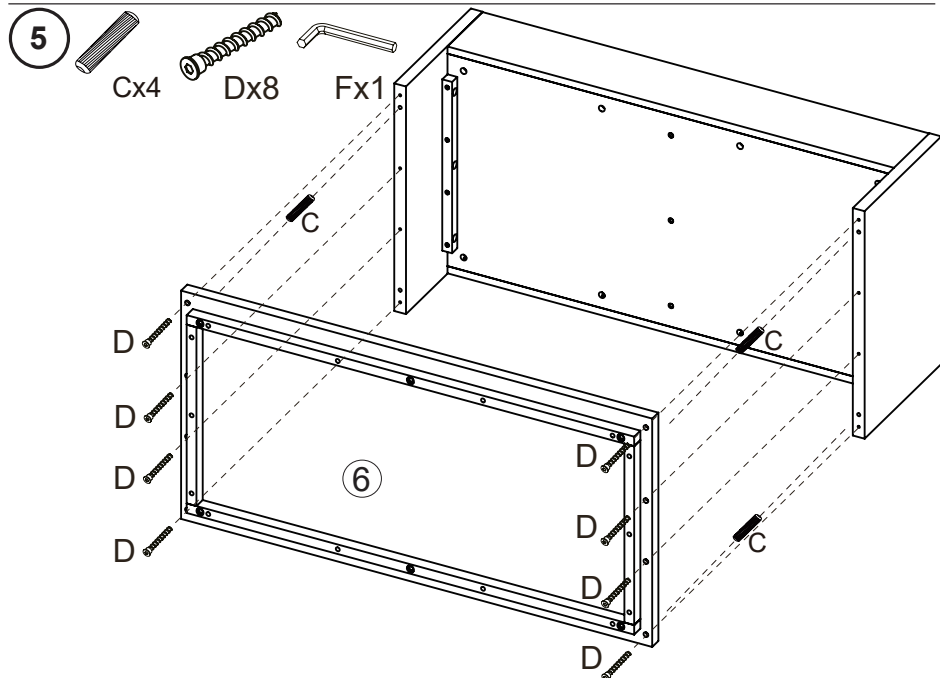

7



E x4

Gx1



G

IE

IE

IE

7

8

IE

①



8



Ox4




Qx4

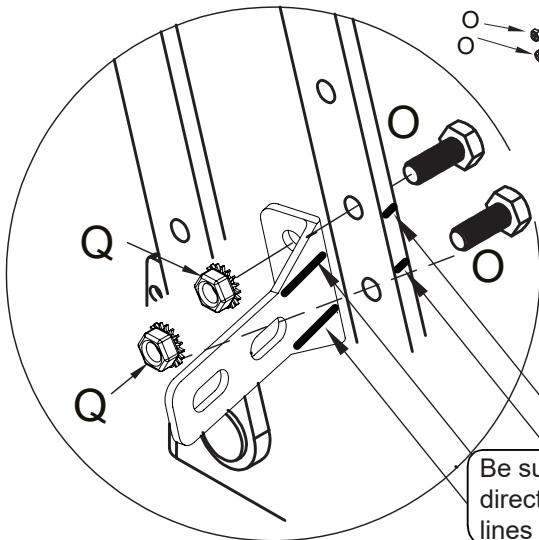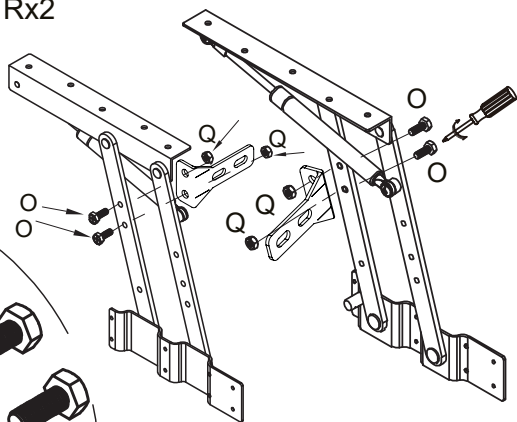
$$R \times 2$$


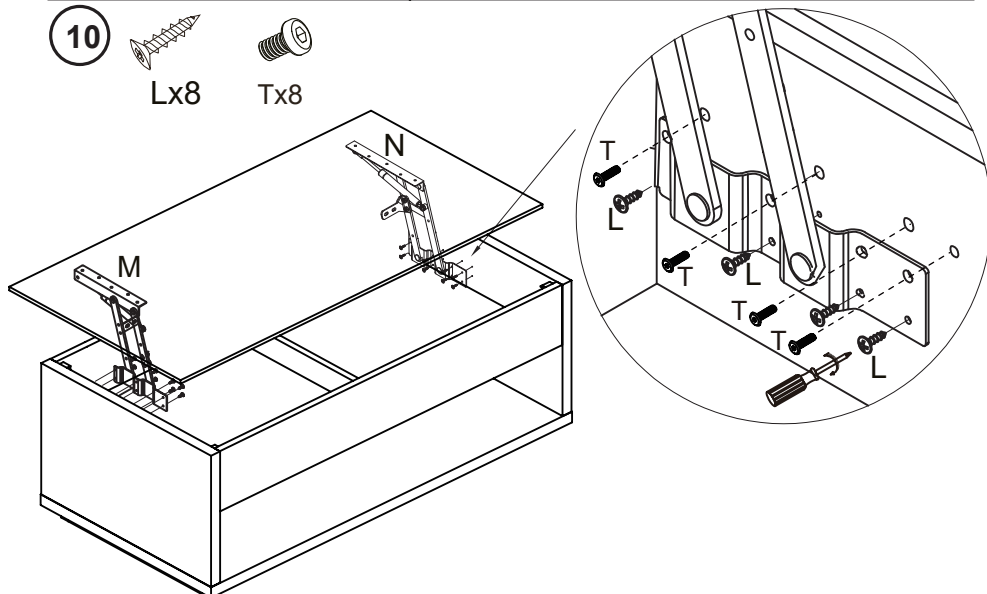
Be sure to assemble in the direction, make sure the white lines are aligned after assembly.



9

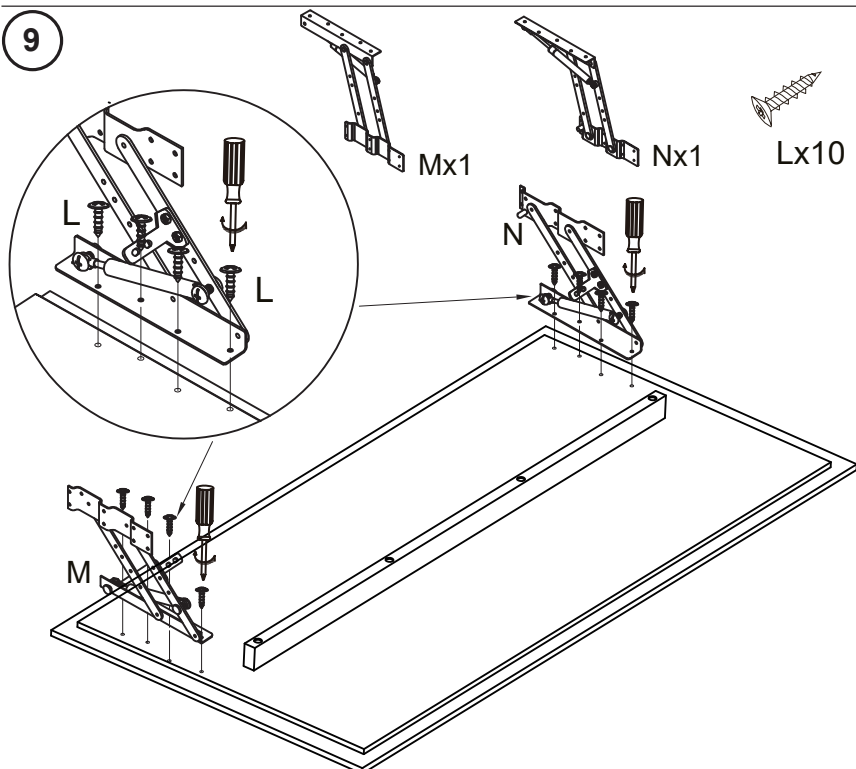

10




11





Px4



Qx4

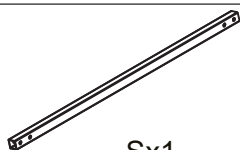

Sx1

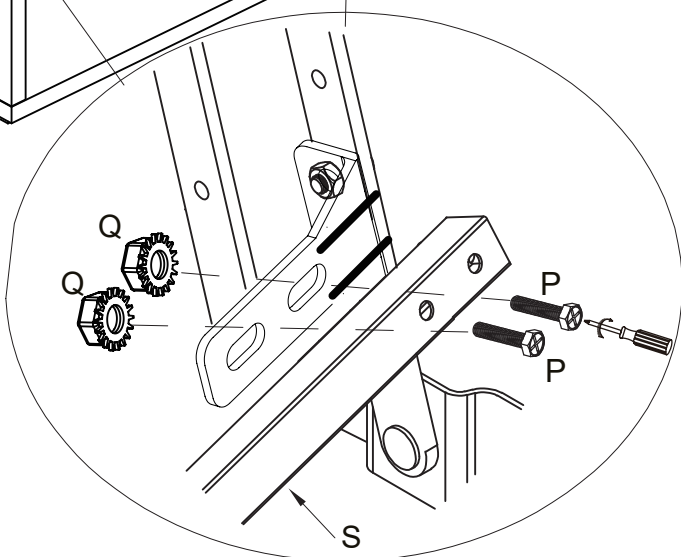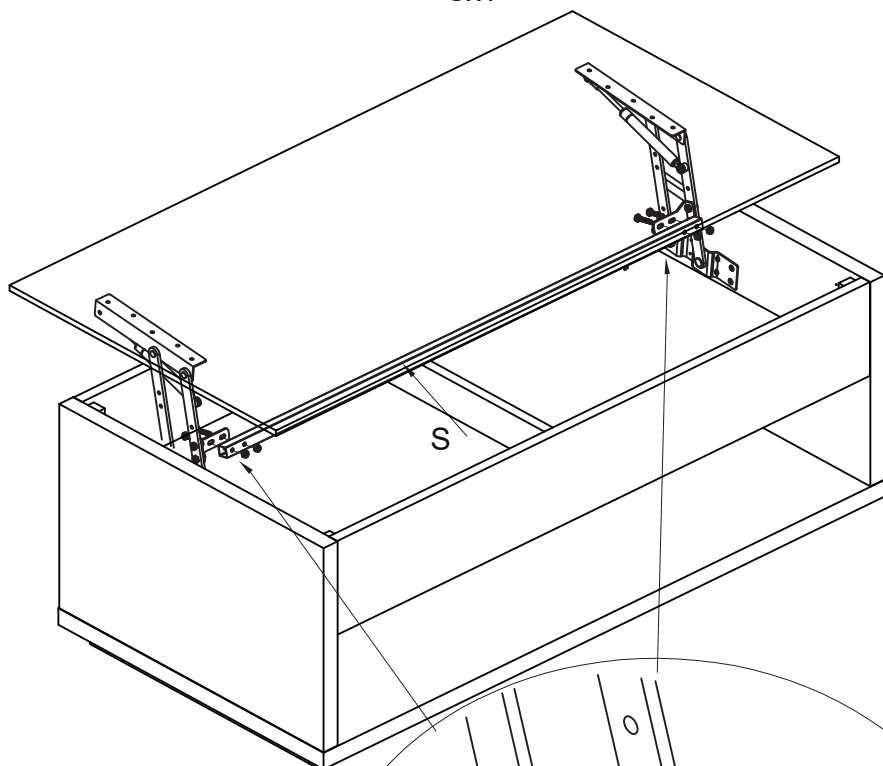



THAT'S ALL FOLKS!

Share your style!

#KaveHome

