


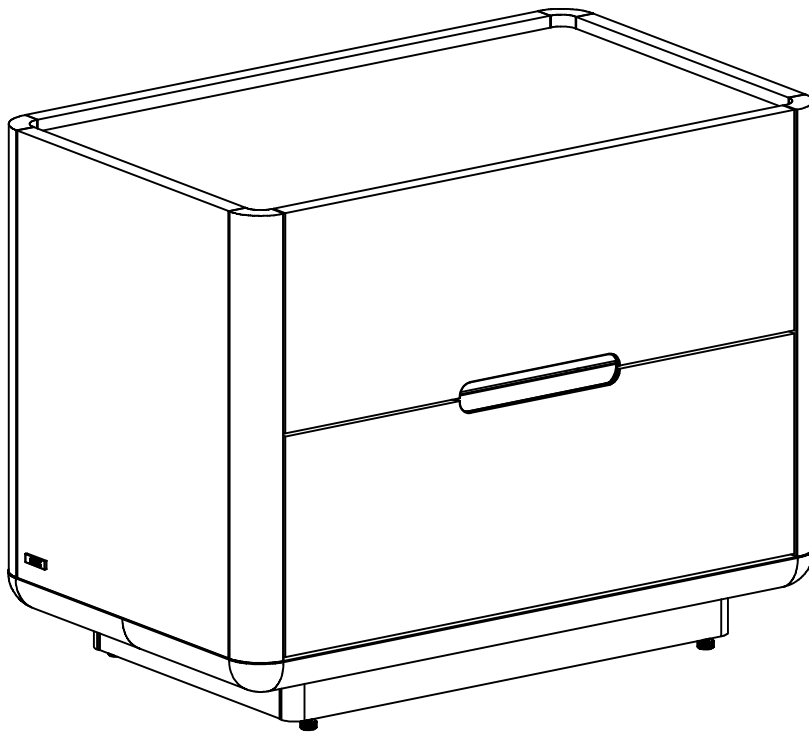
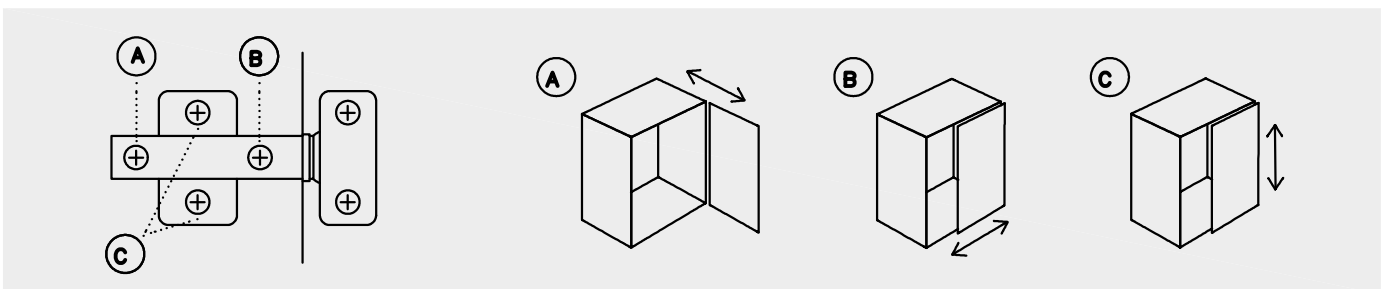
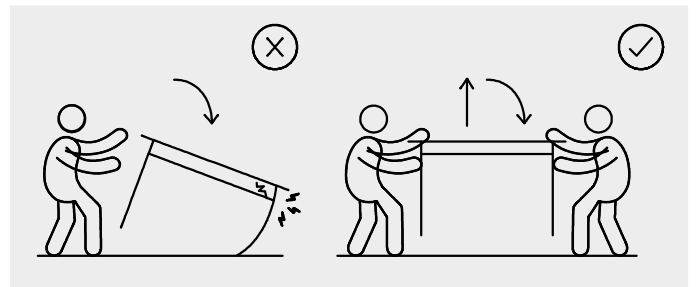
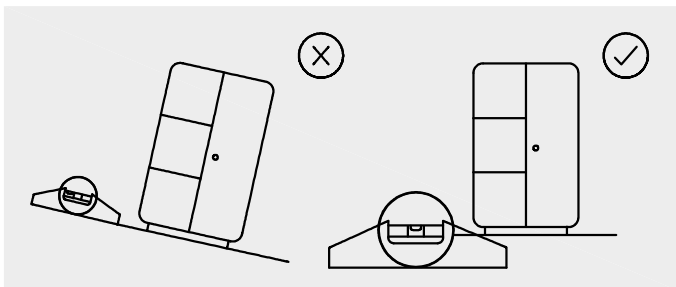
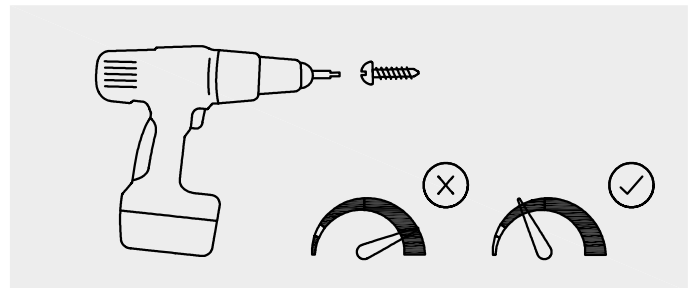
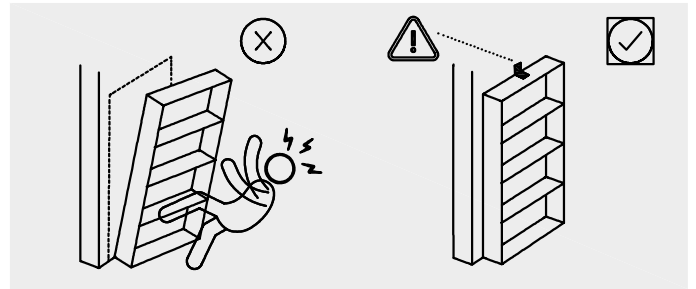


Arelida

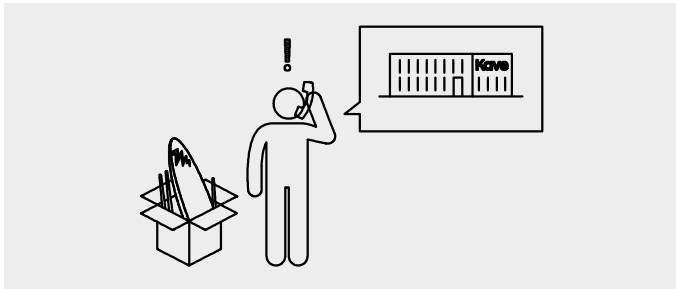


Kave

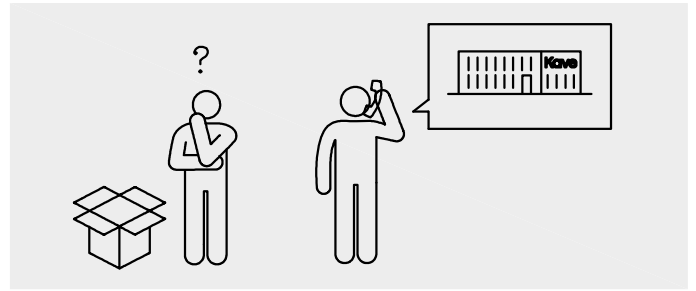


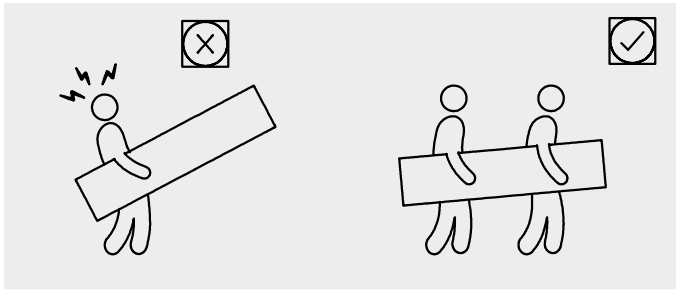


40 min




x2

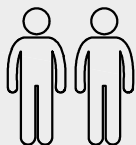


x2



x1




x1



x1



A x 12




B x 12



C x 24



D x 10
ø4x60mm



E x 12
ø6.3x13mm



F x 44
ø8x30mm




G x 4




H x 8




J x 4

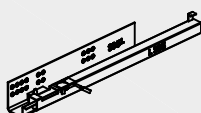


K x 2




L x 2

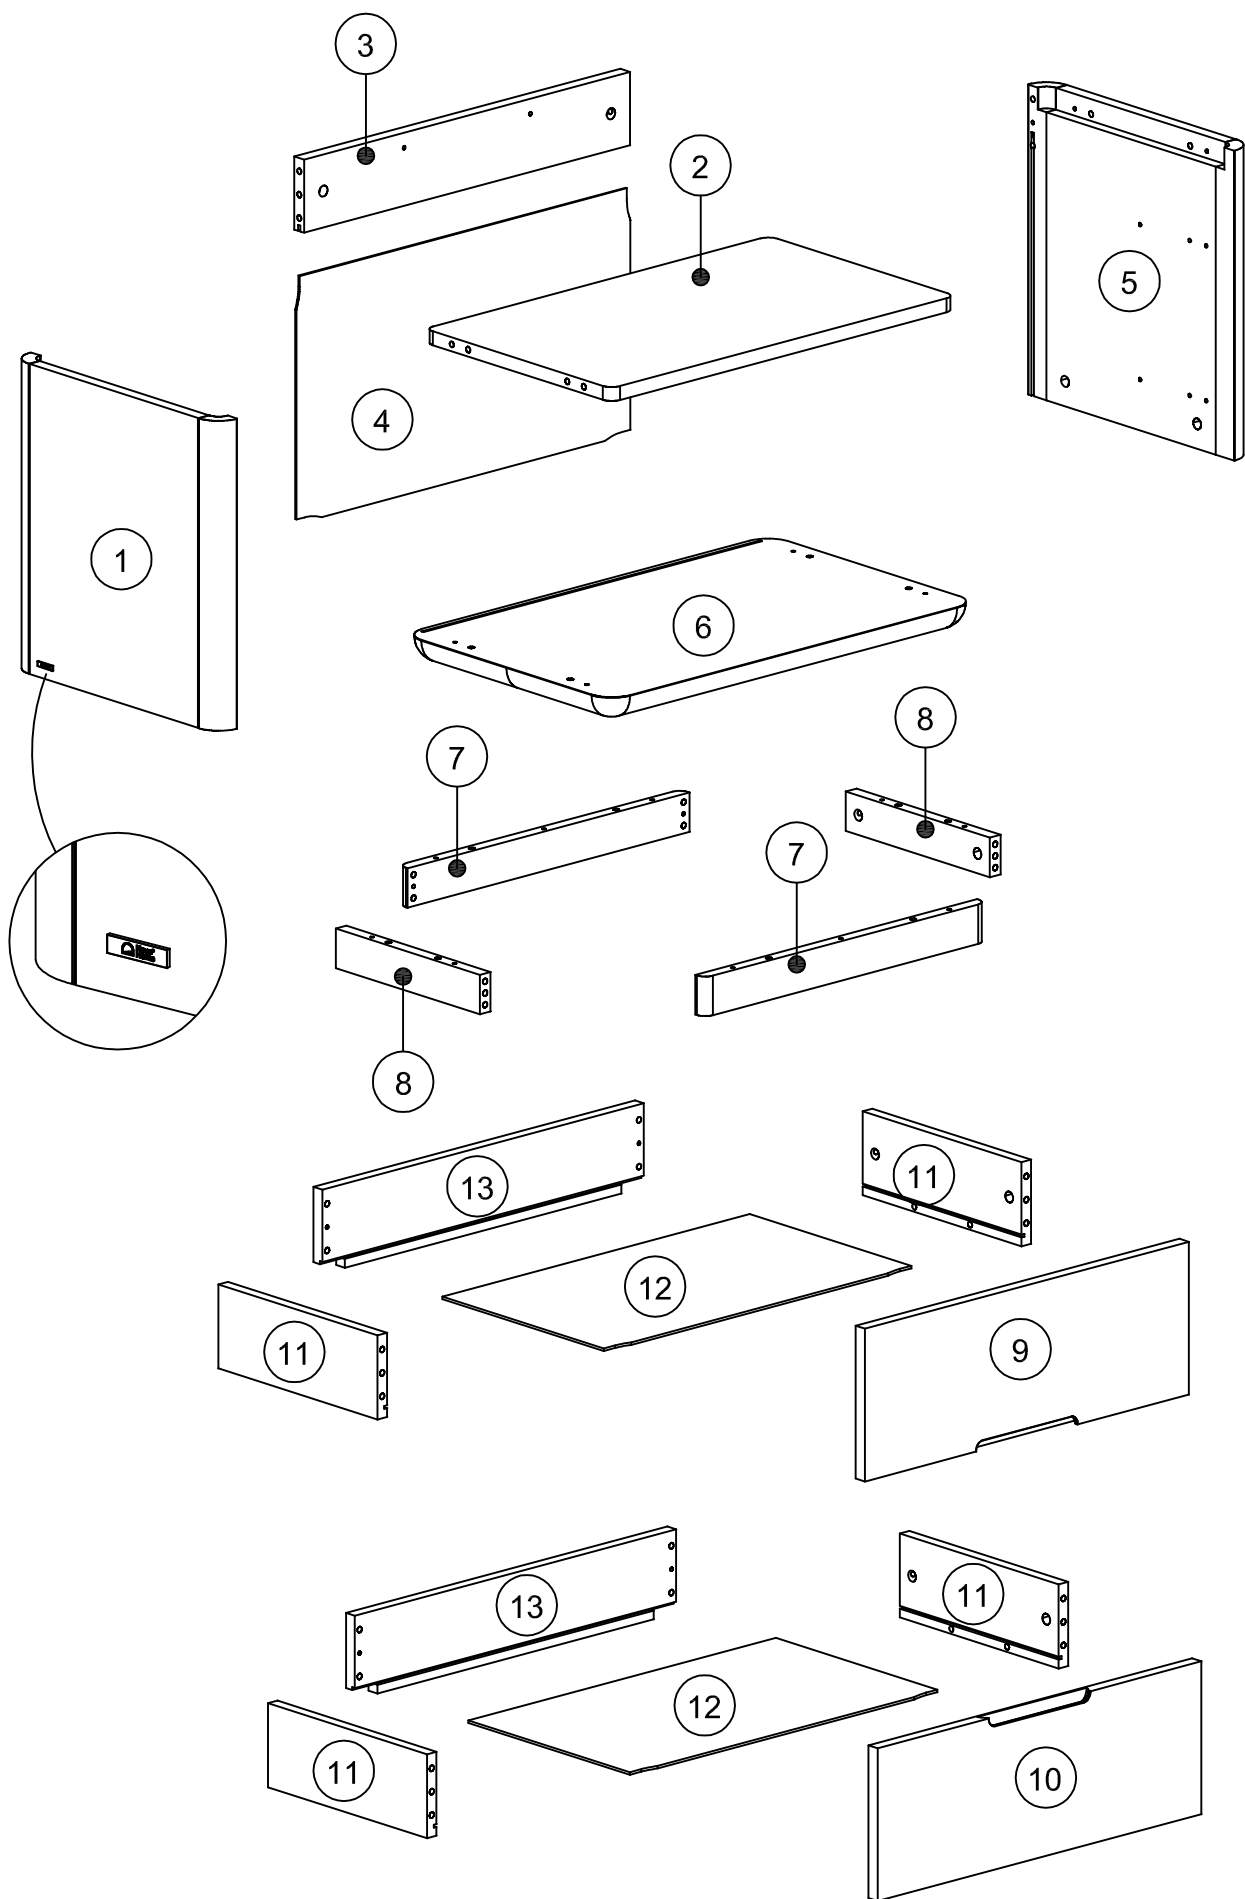

1

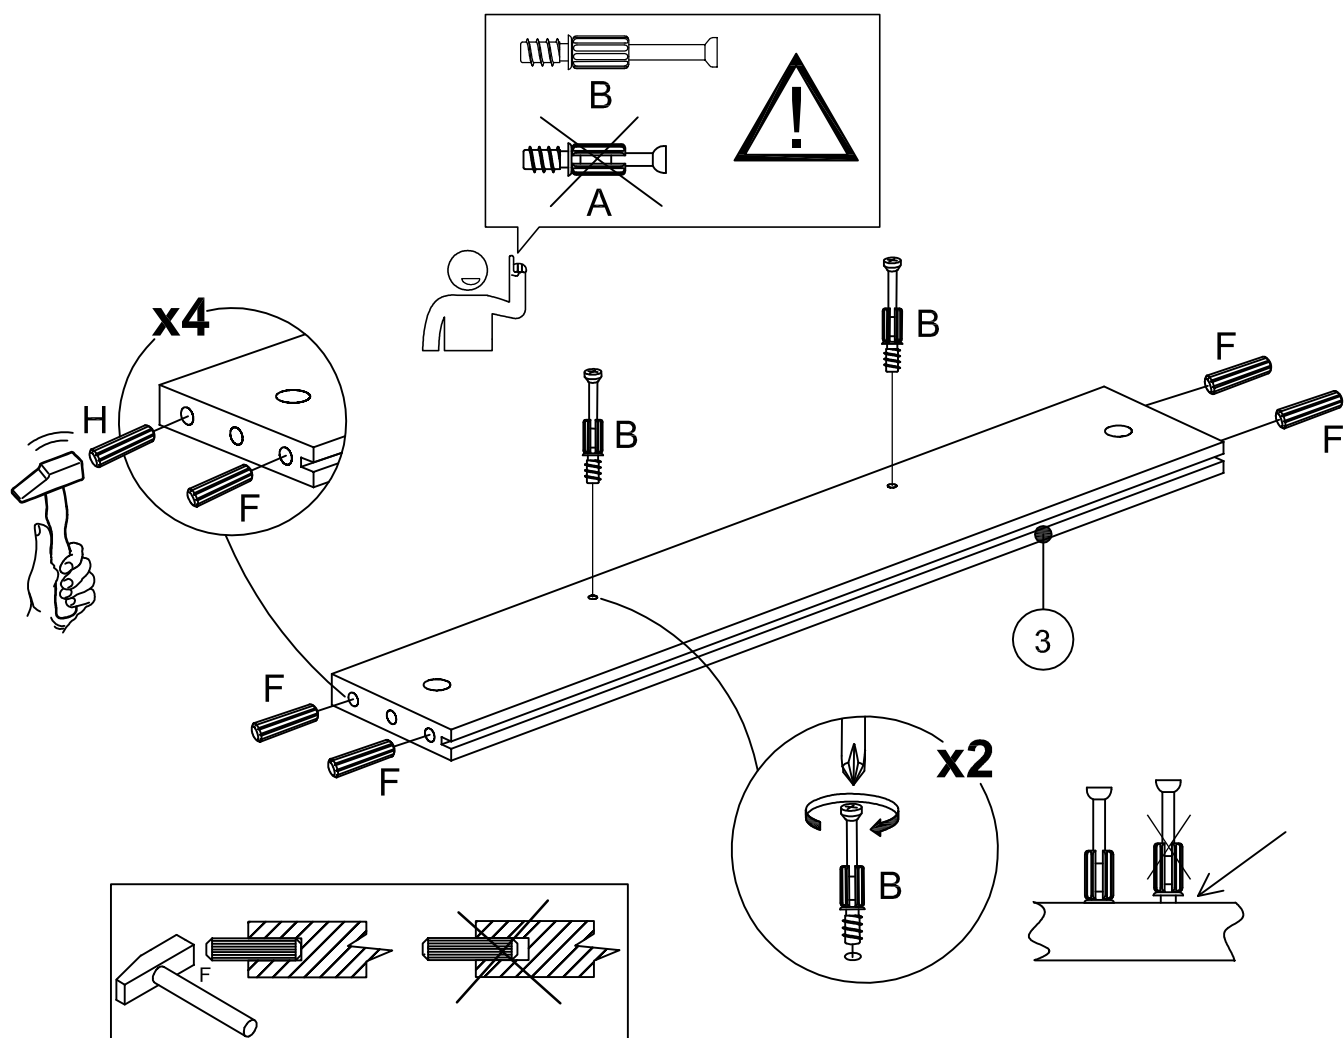


2

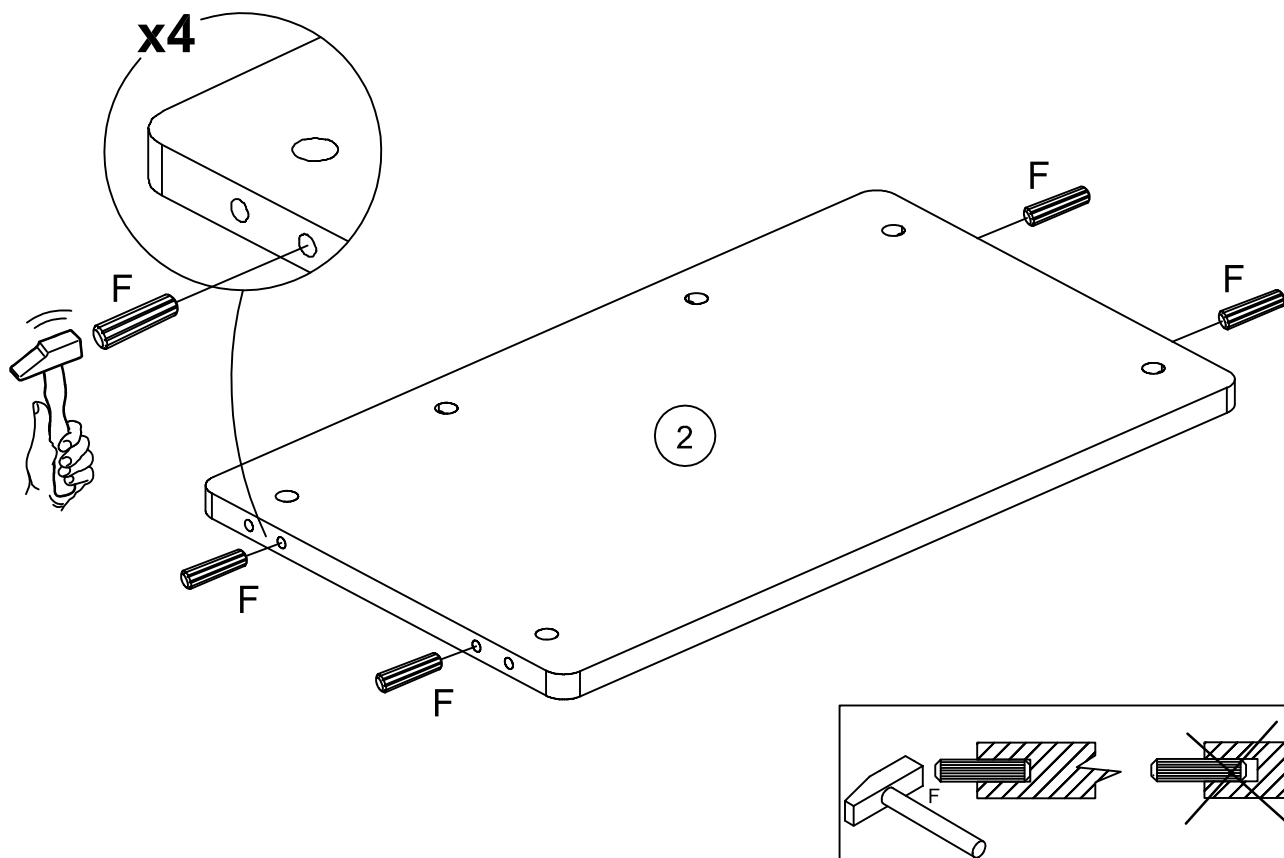


3




5

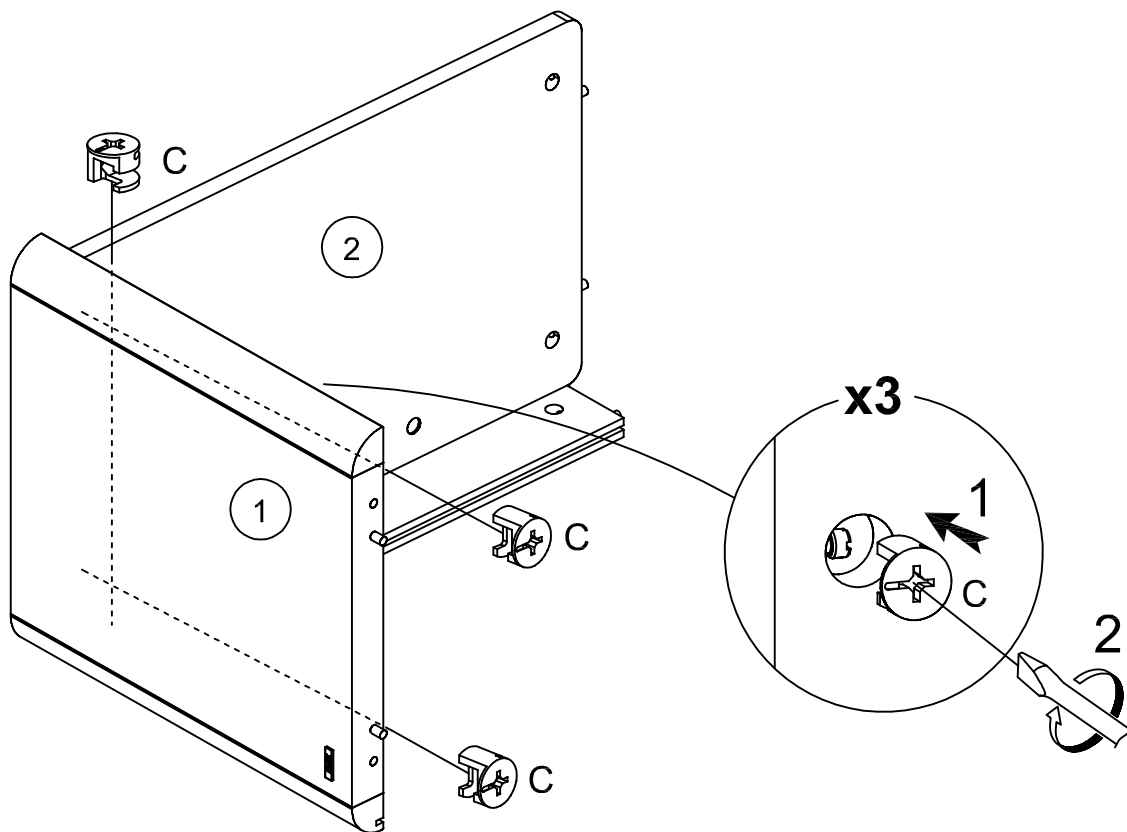

6

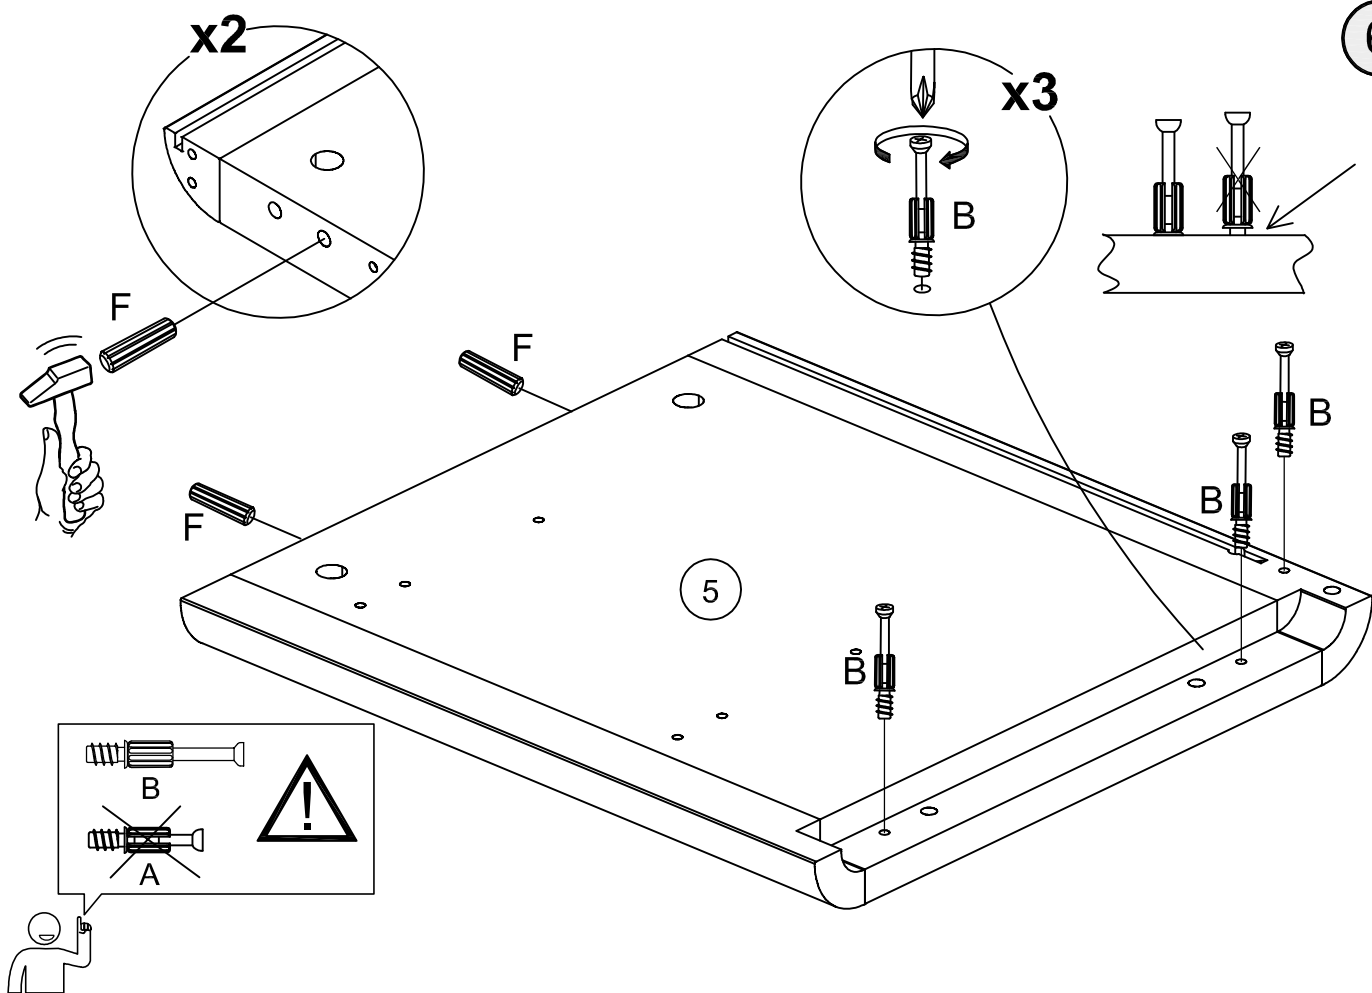

7

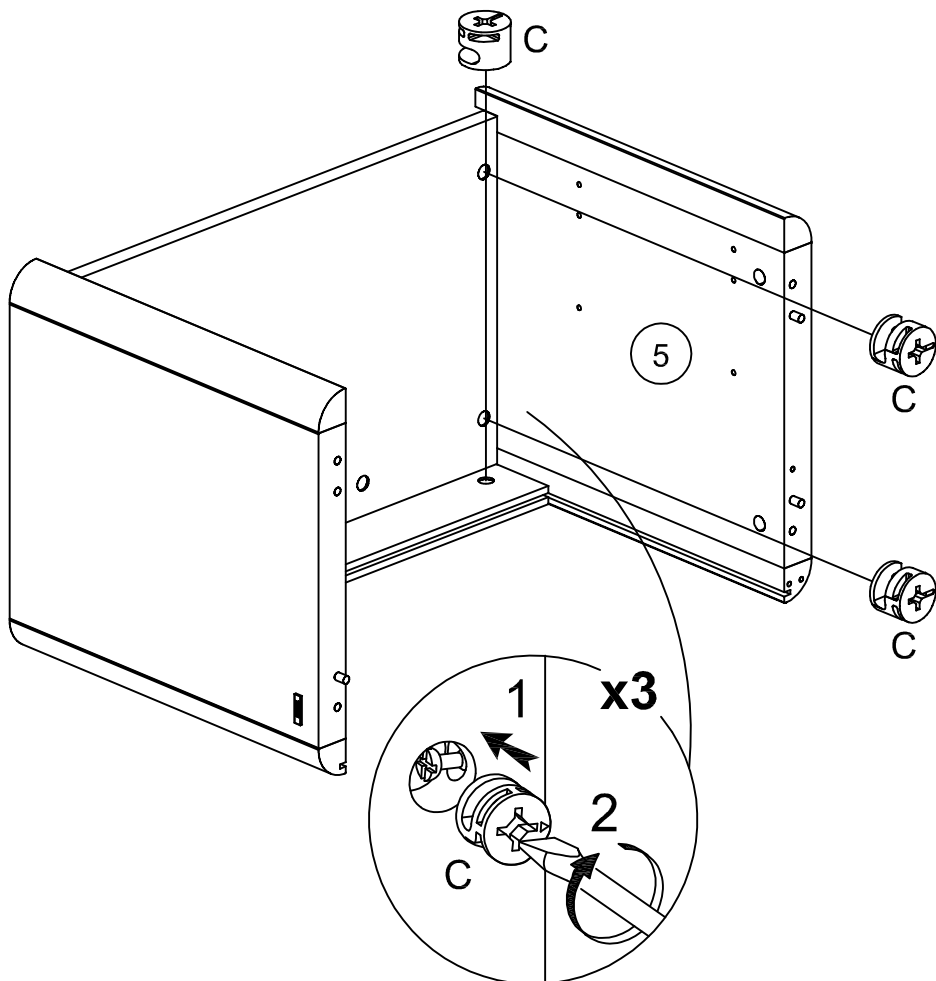

8



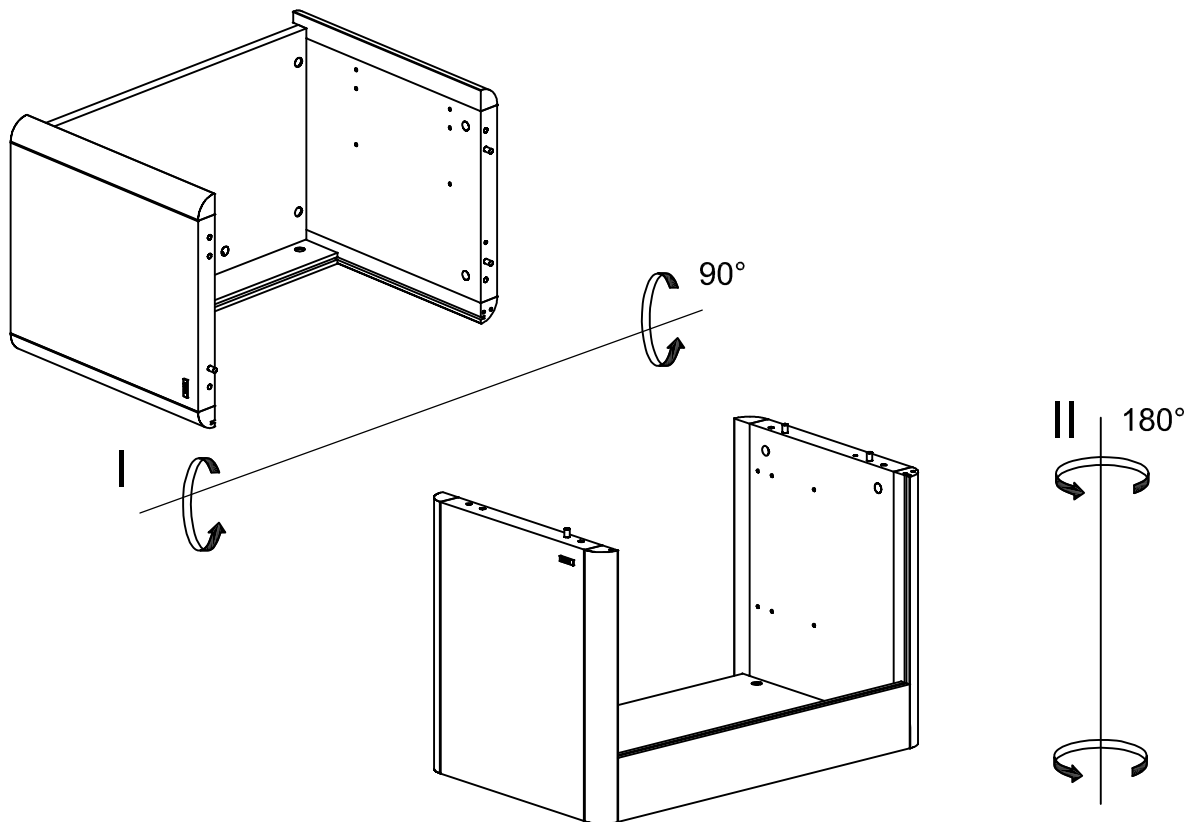


Diagram illustrating the assembly of the second beam (7) to the frame. The beam is secured using screws (F) and washers (H). A callout shows the correct orientation for the screws (A) and washers (H) on the beam. A warning icon indicates that screws (A) should be used instead of screws (B) for the beam.


11

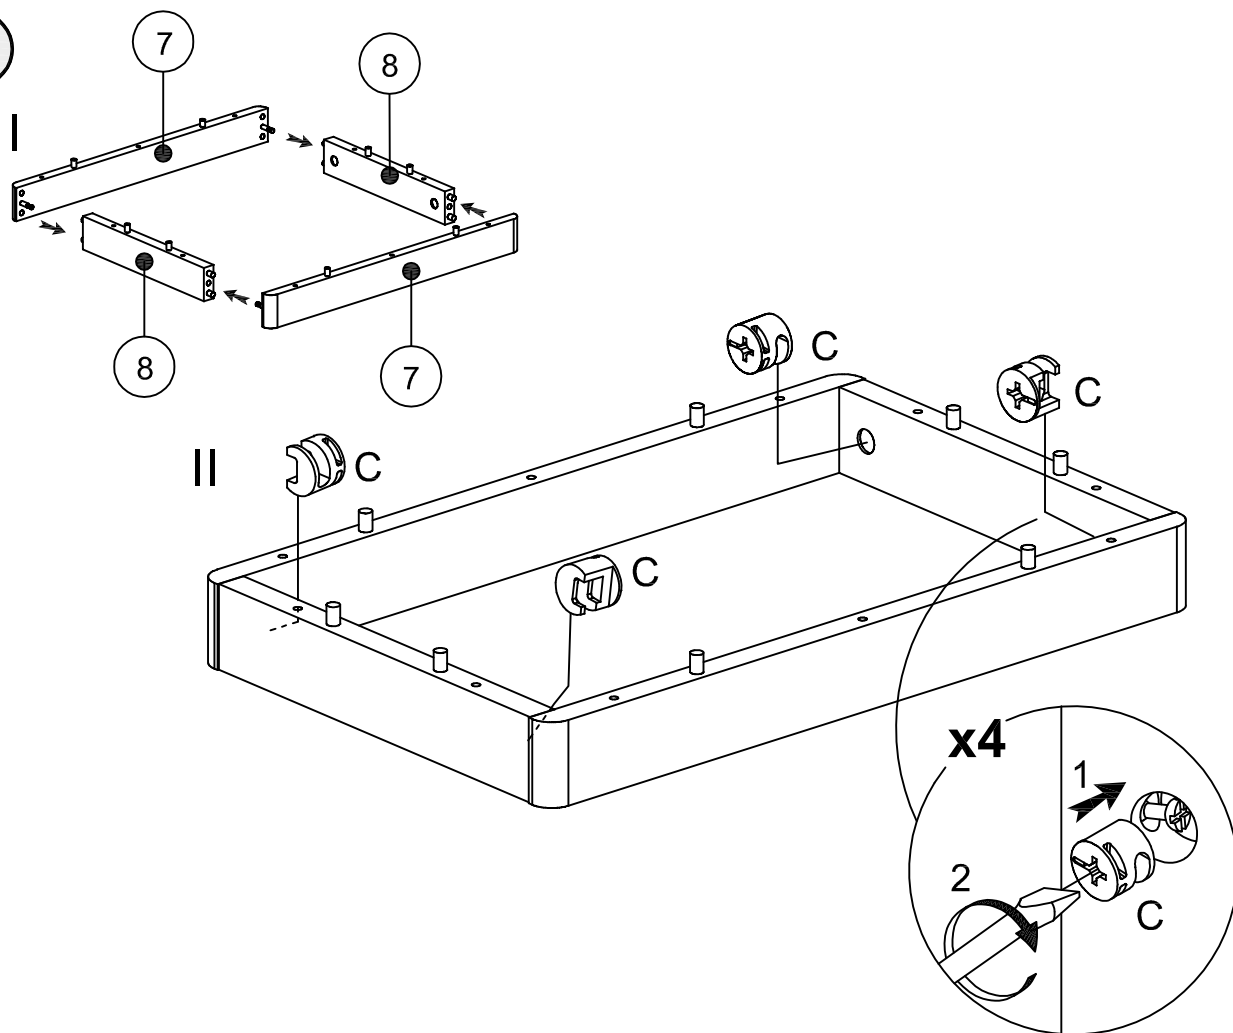


12

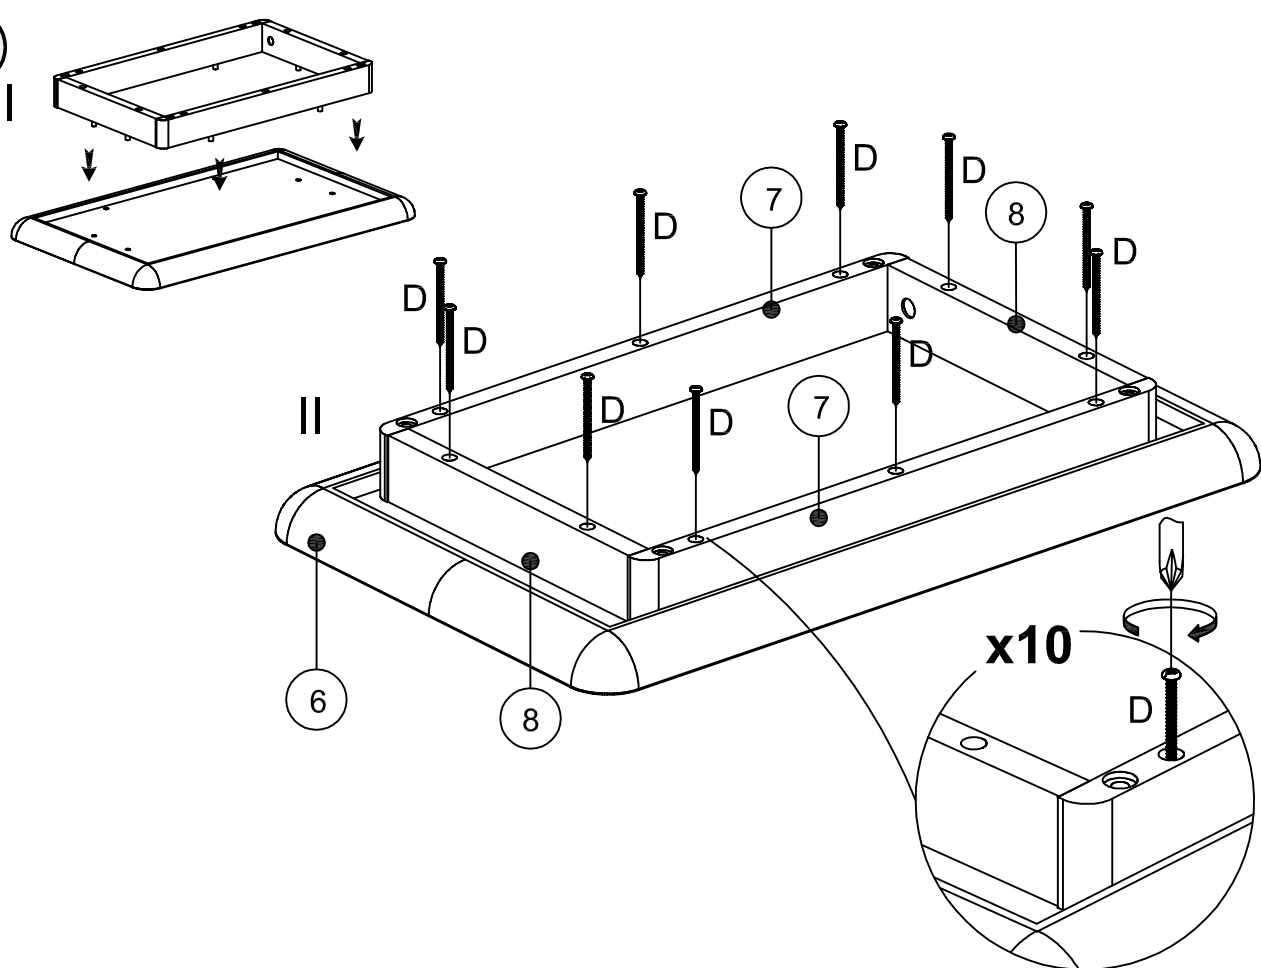

13

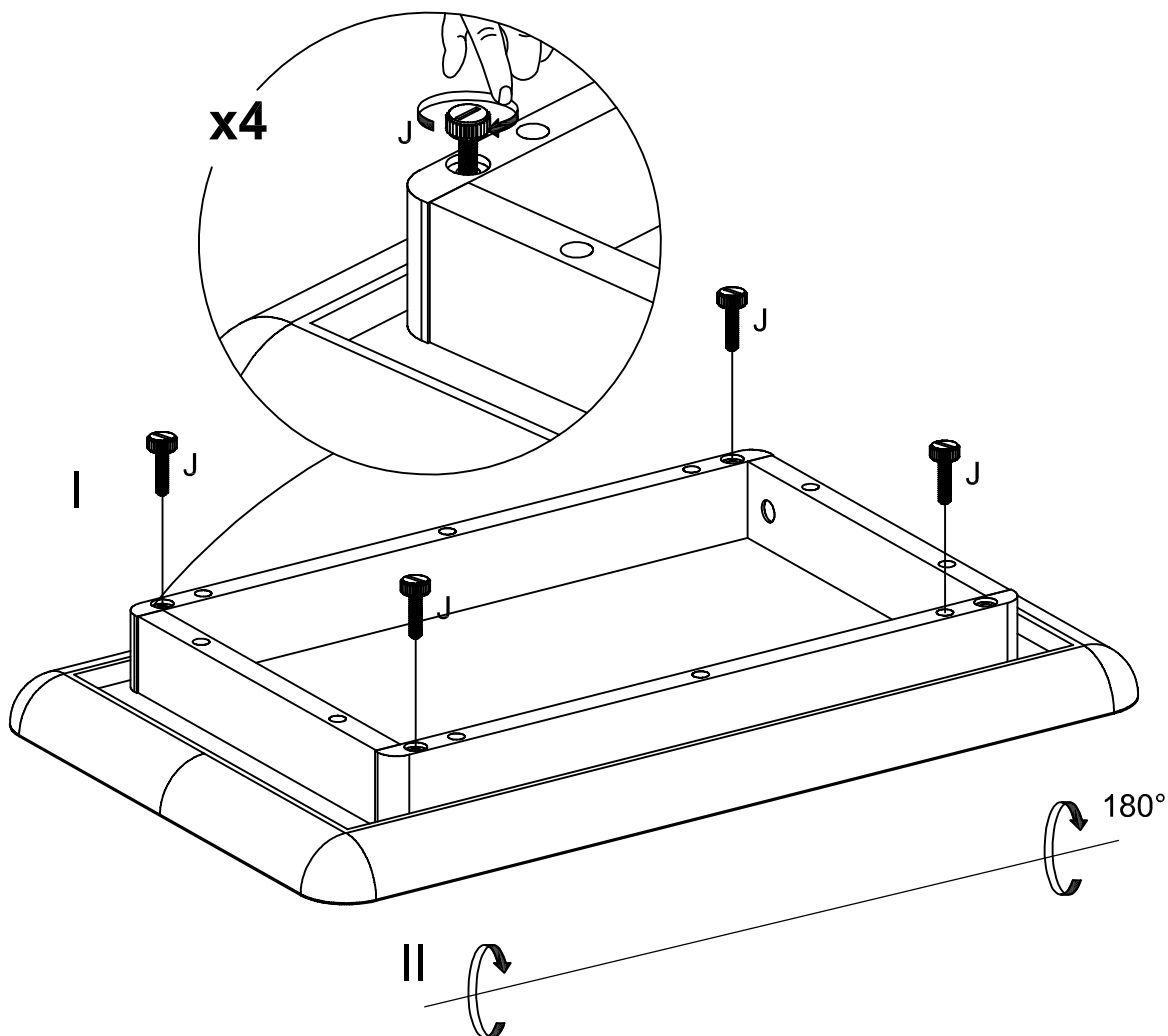




14

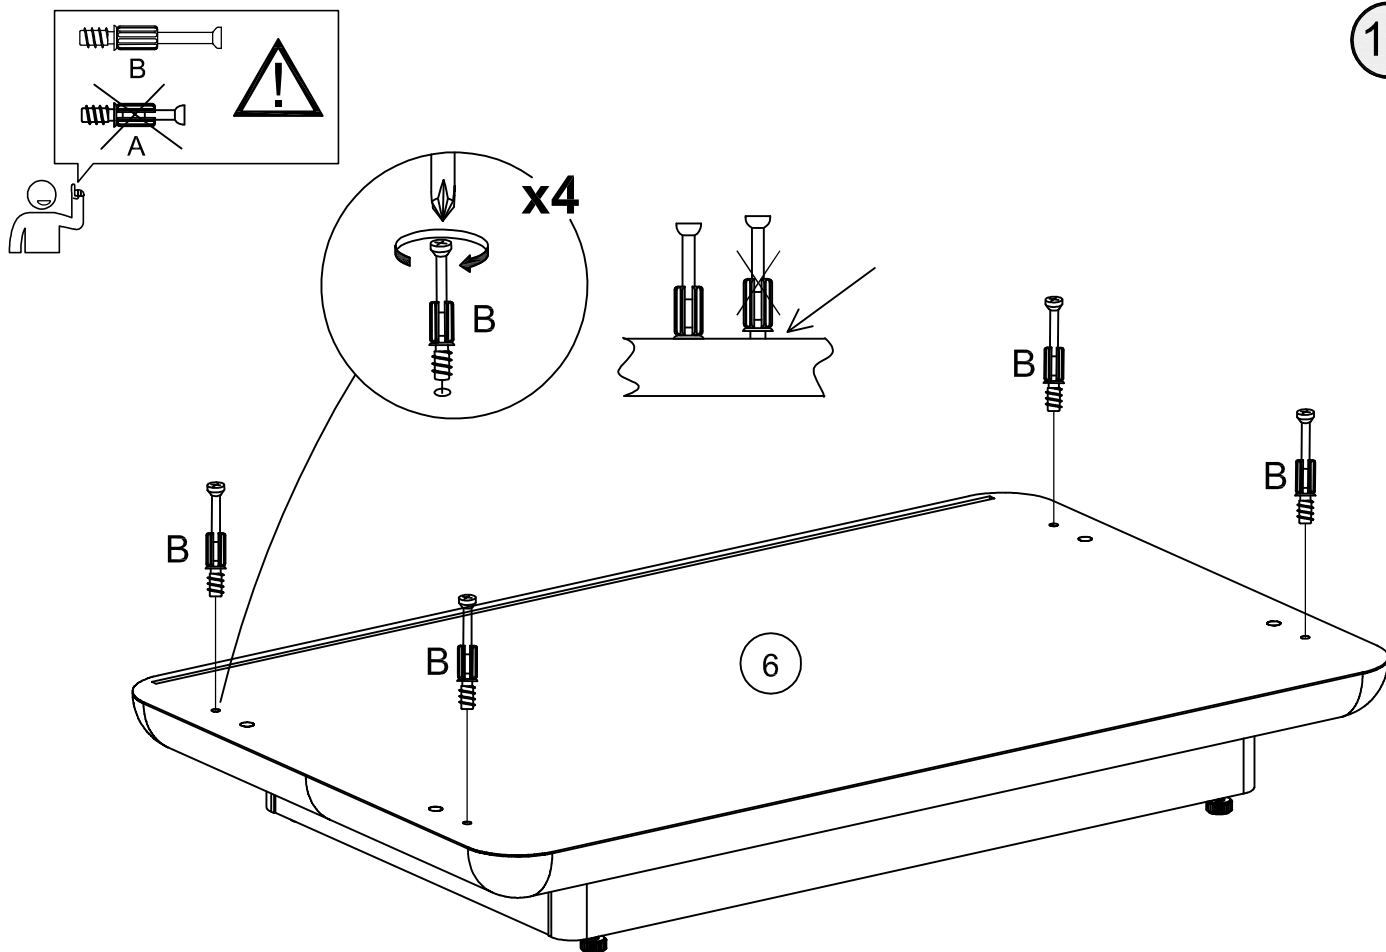




15




17

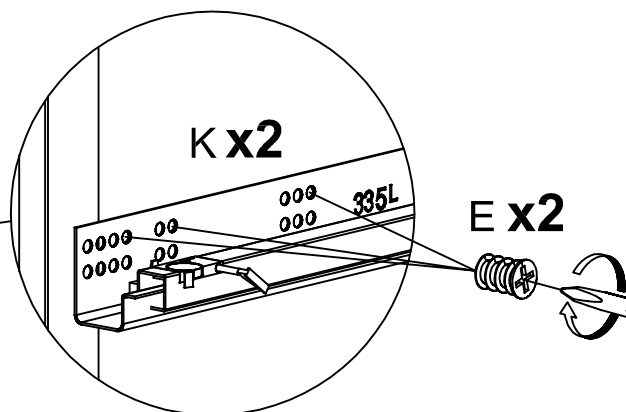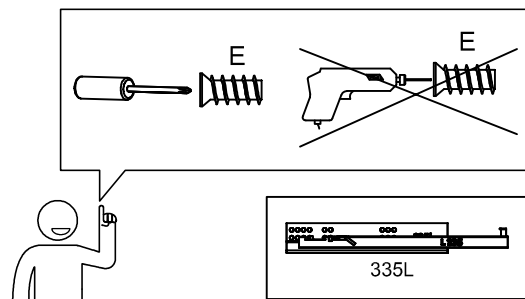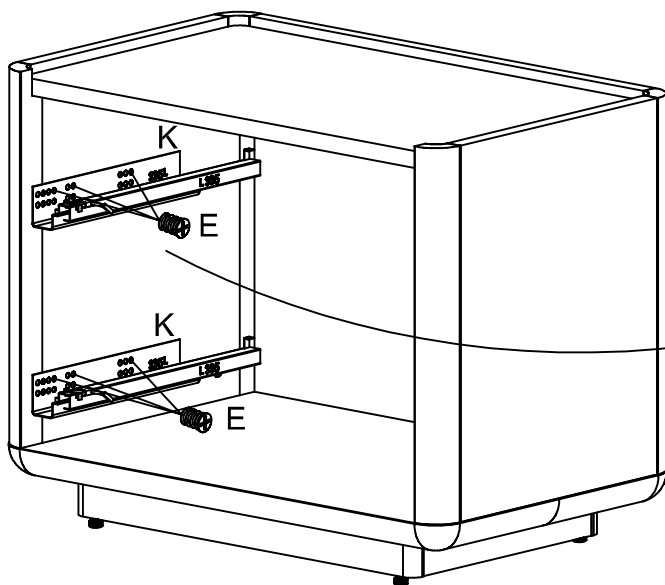


18

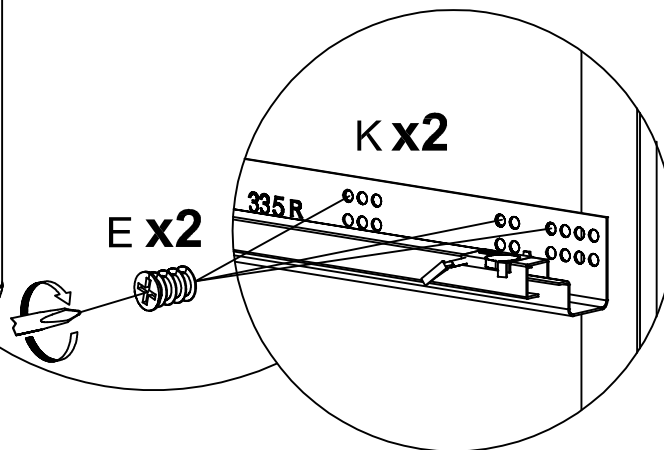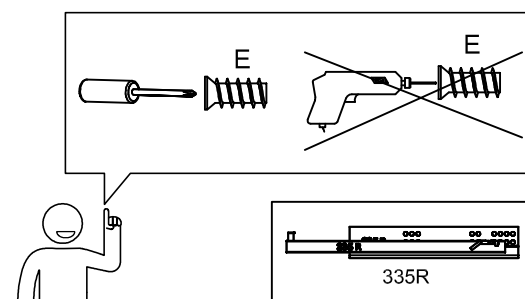
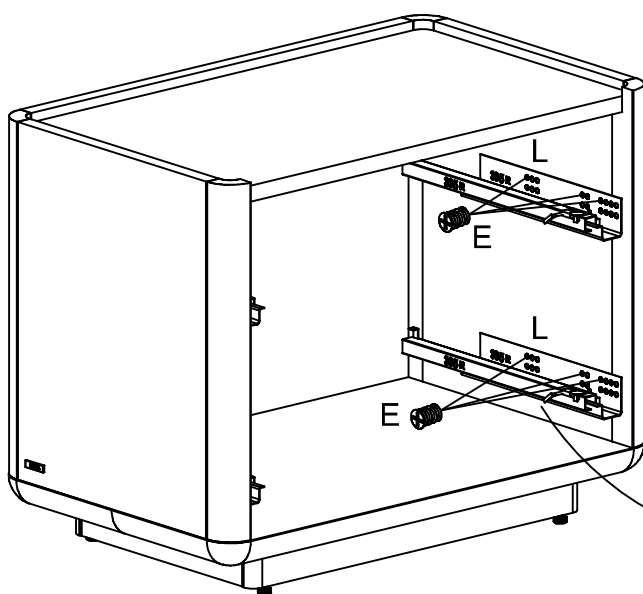


19

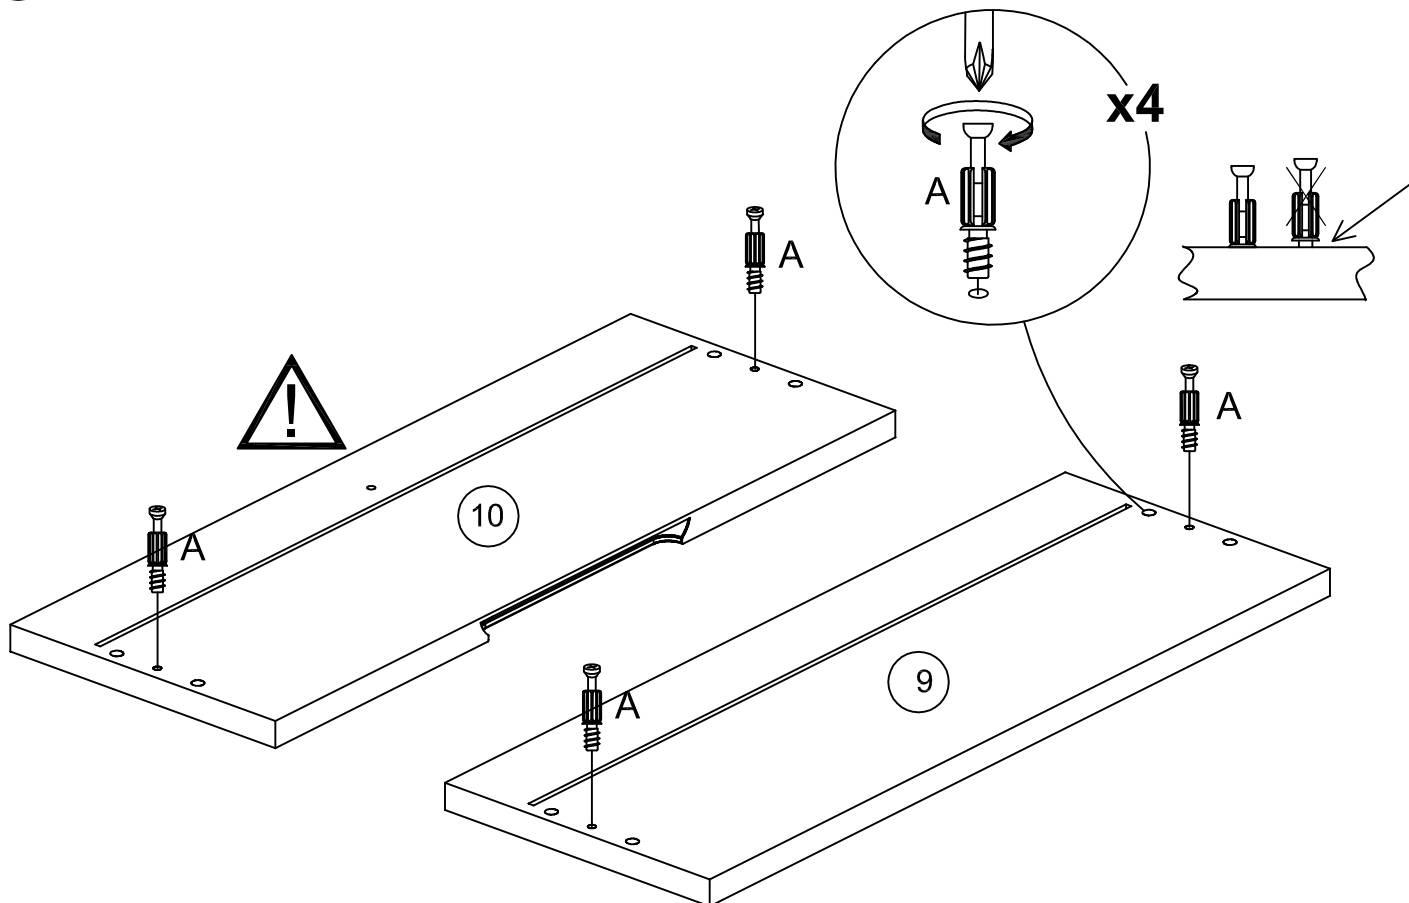


20

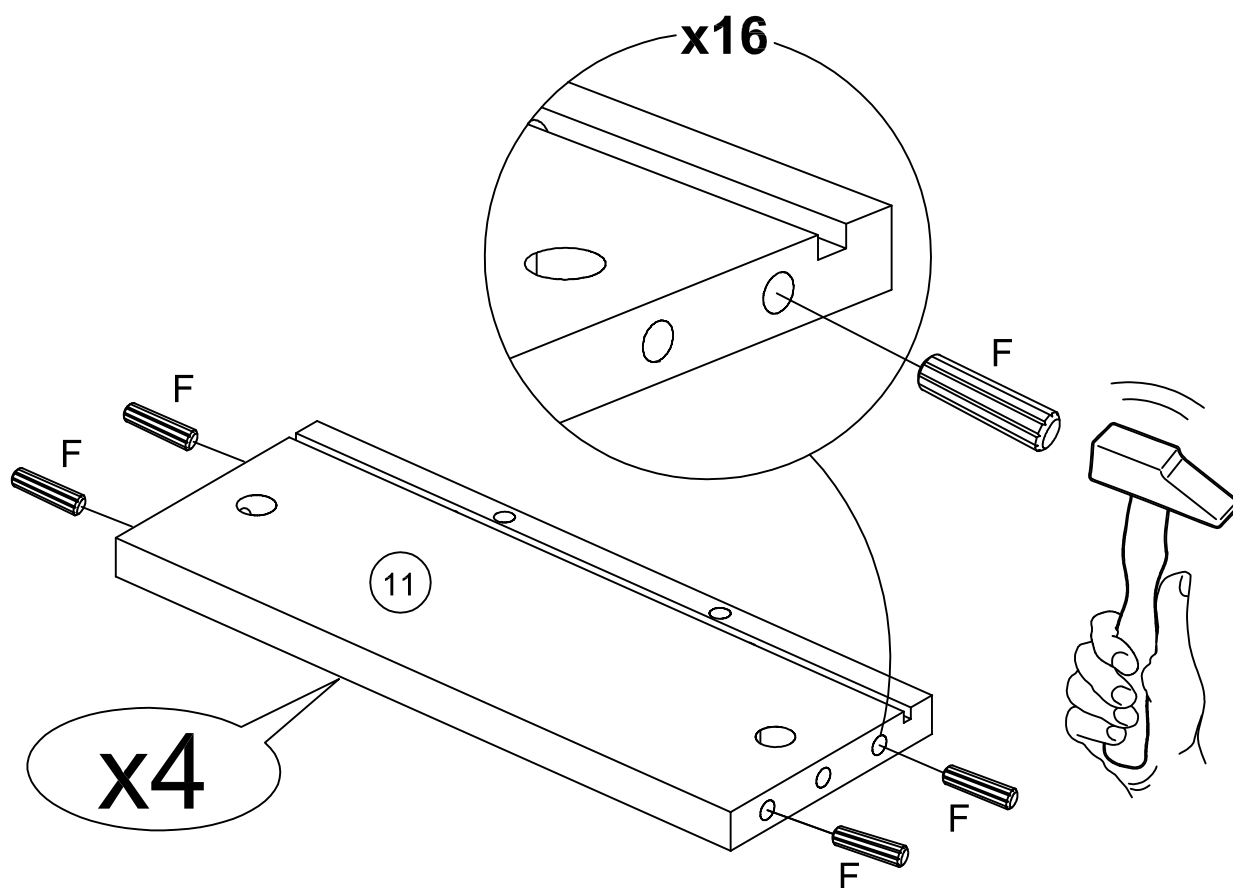


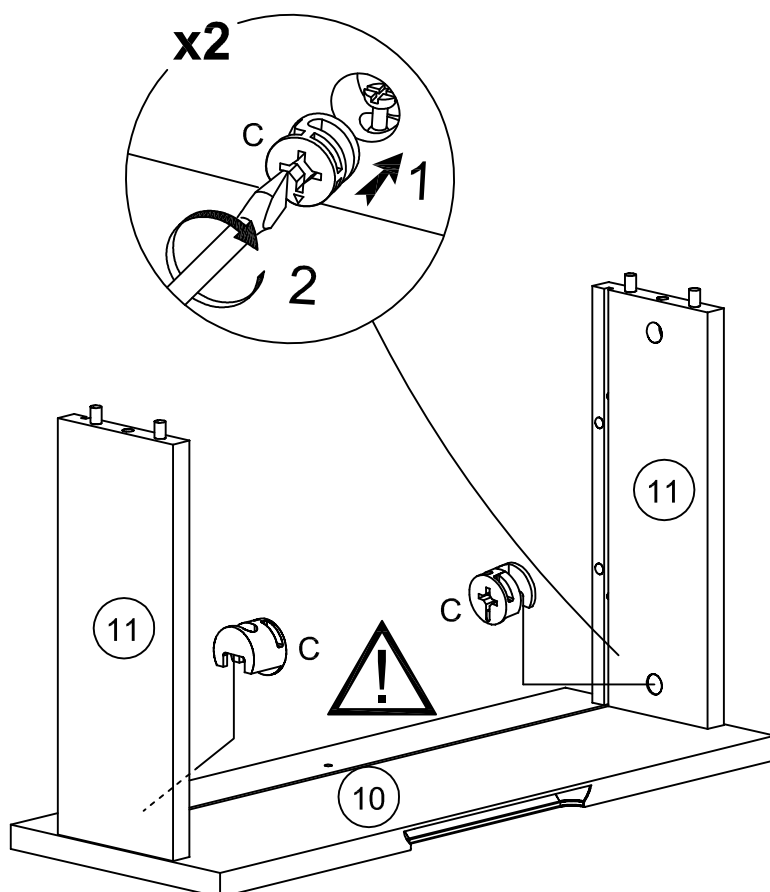
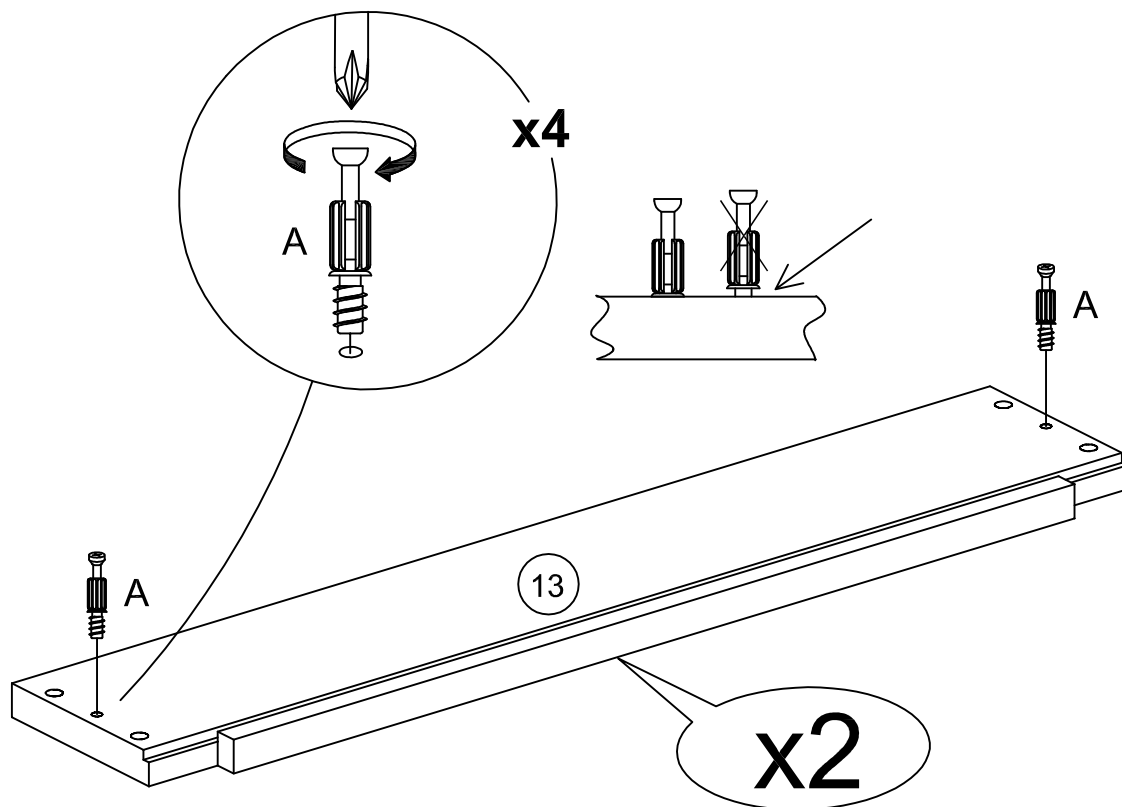


23

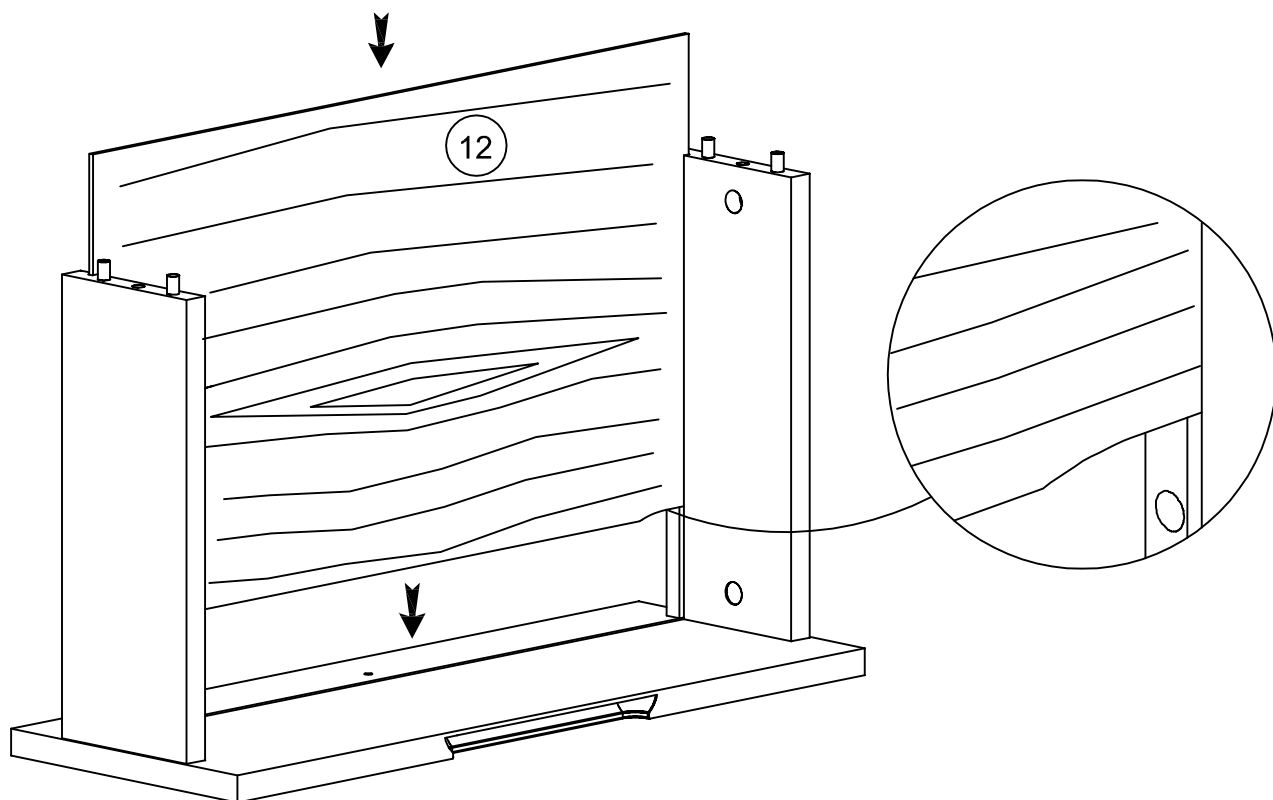


24

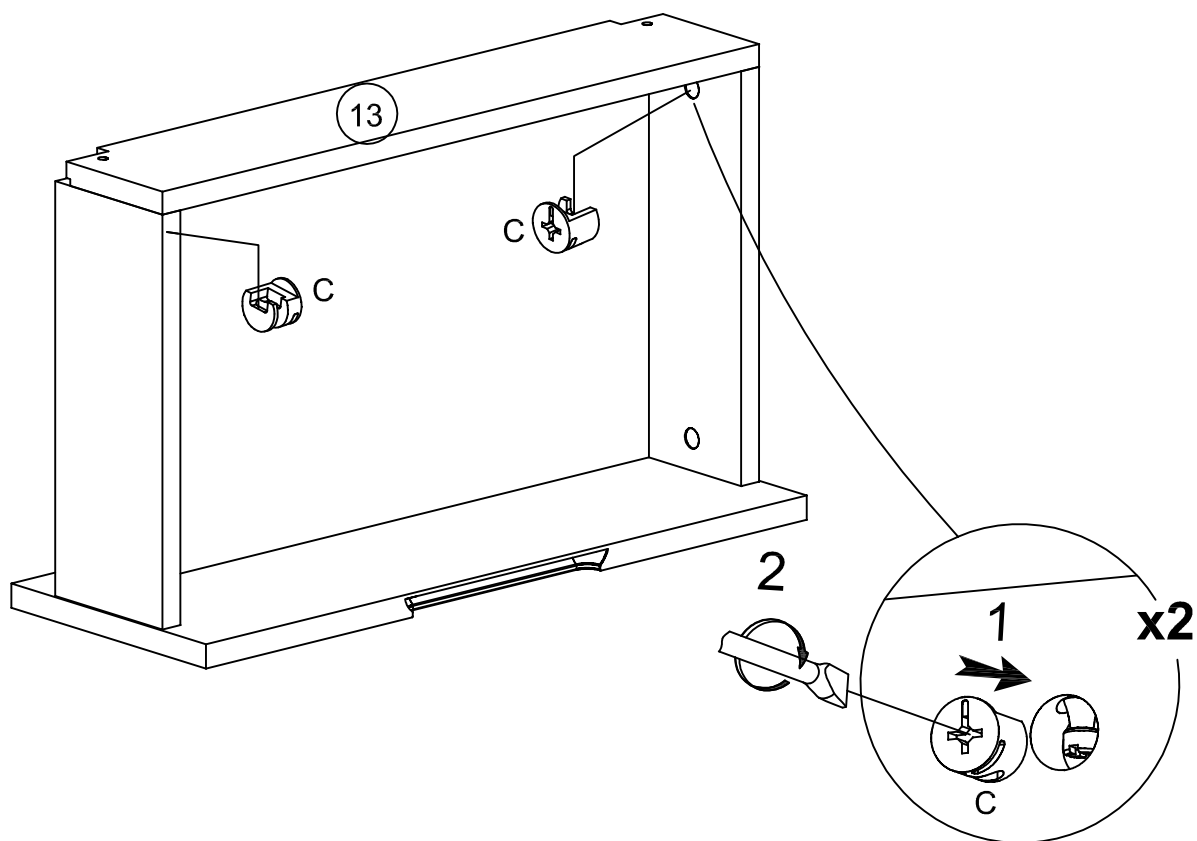


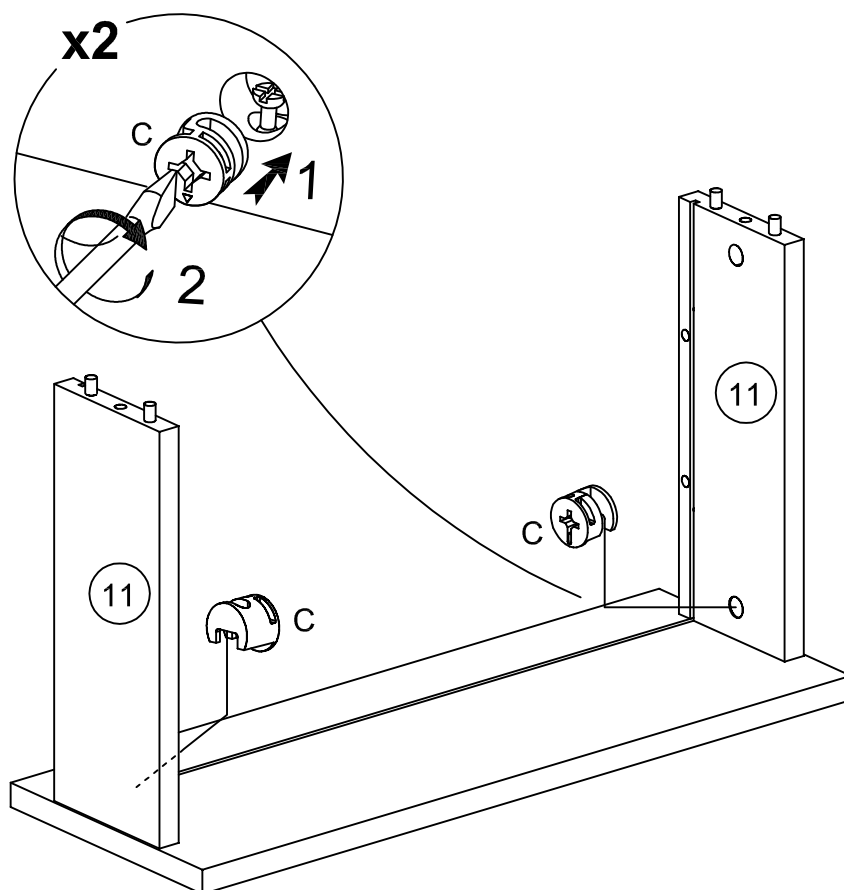
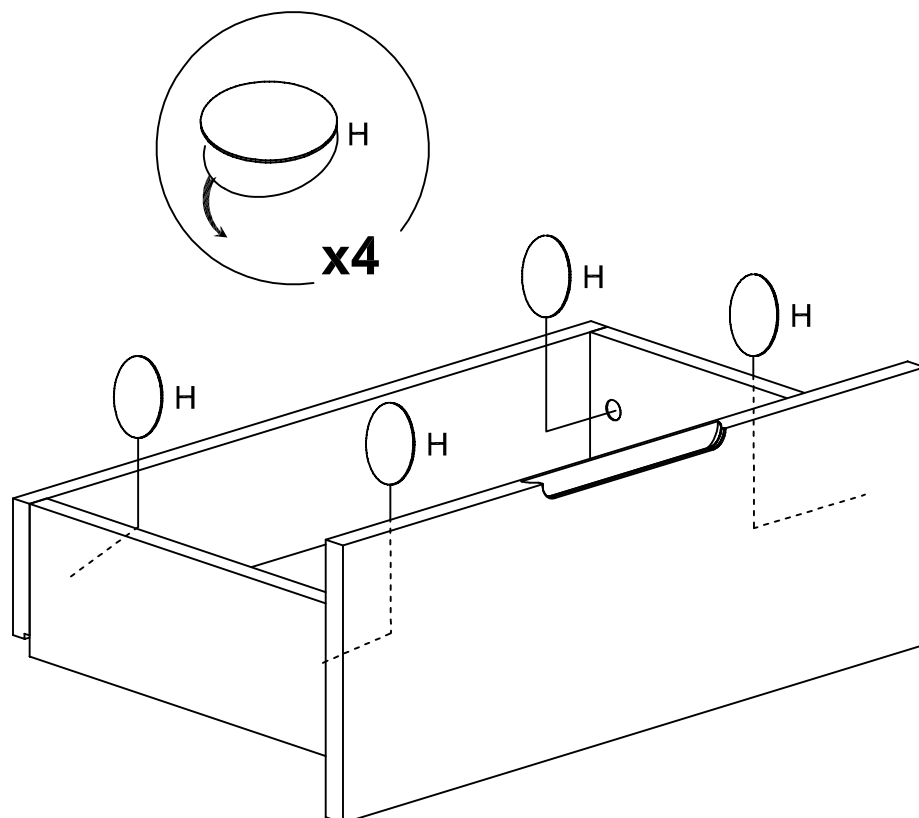


27




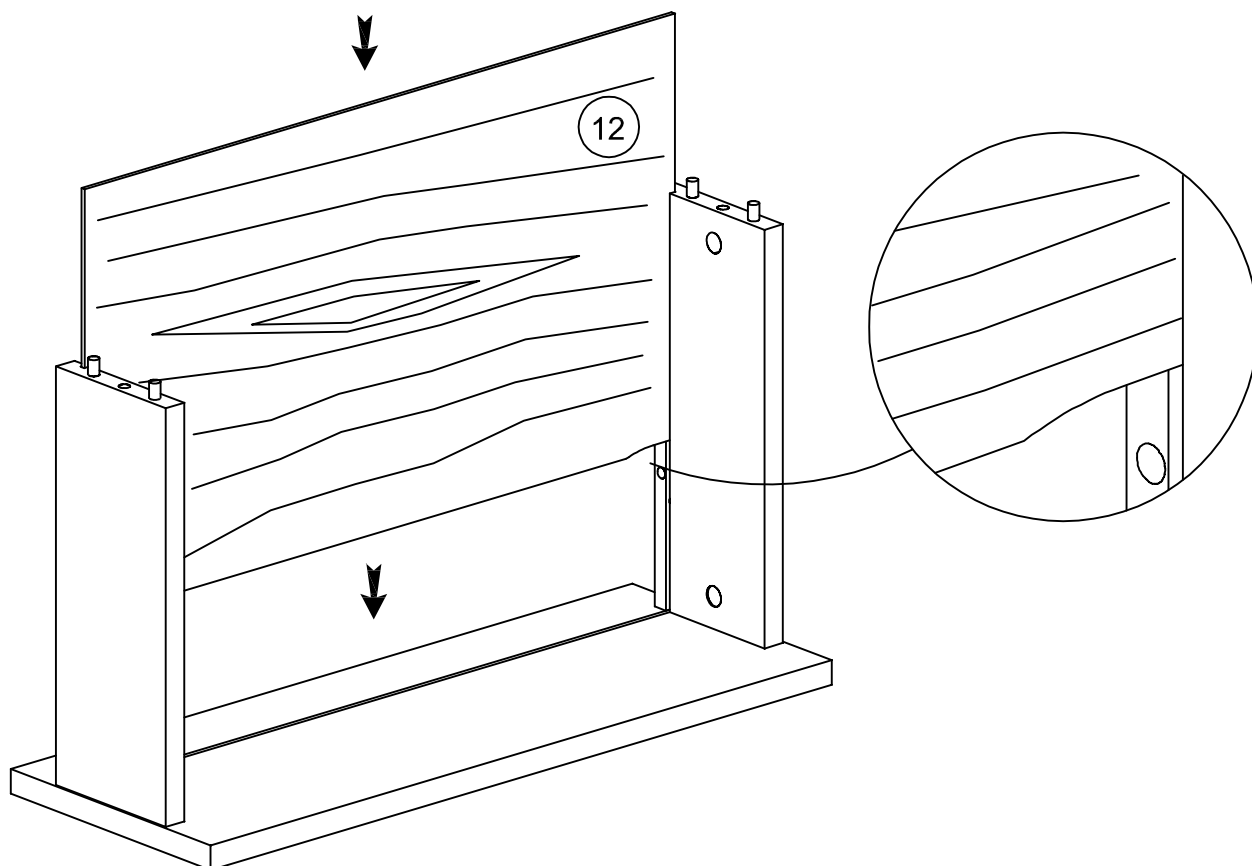


28


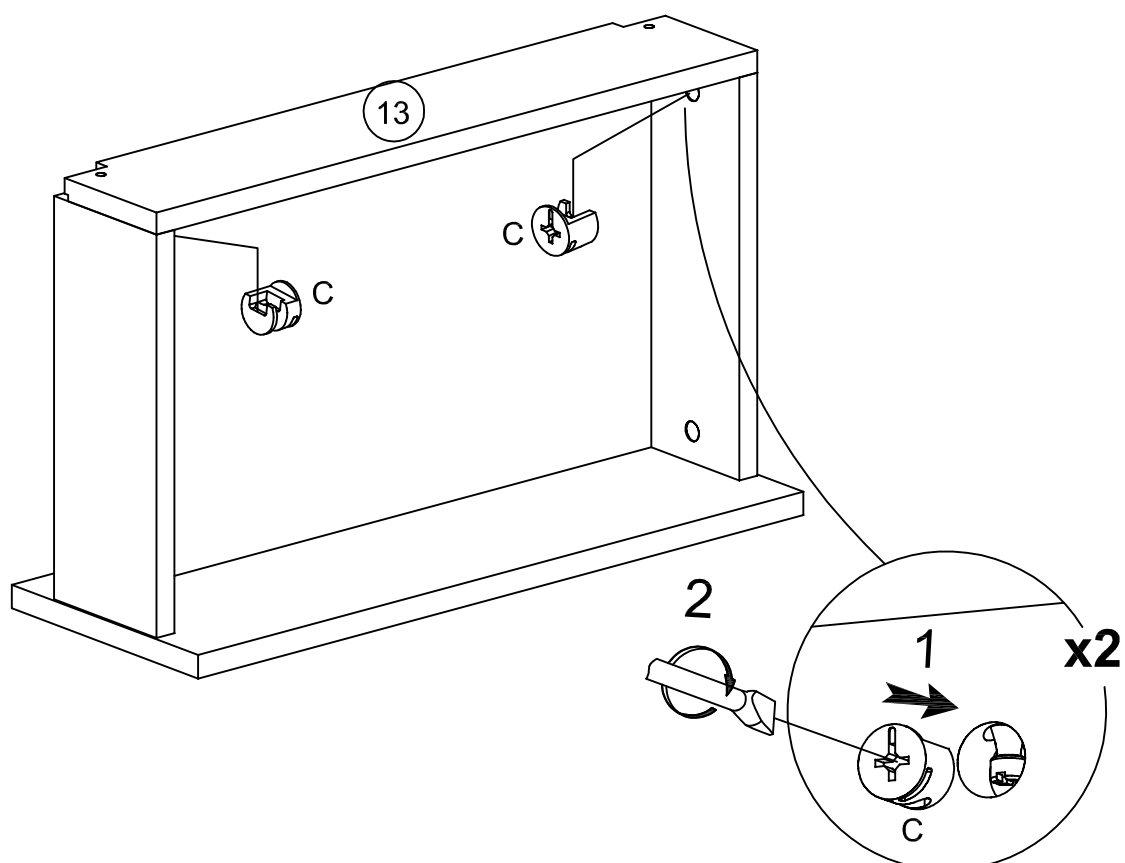






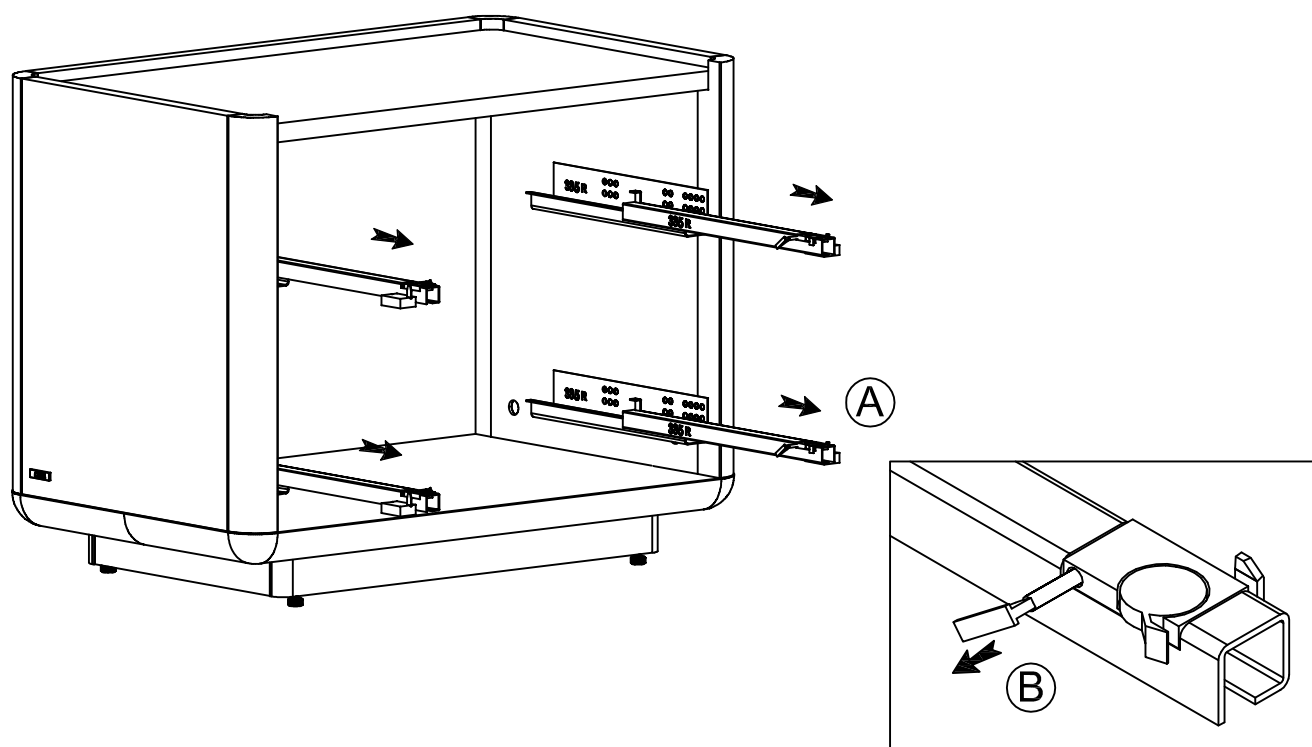
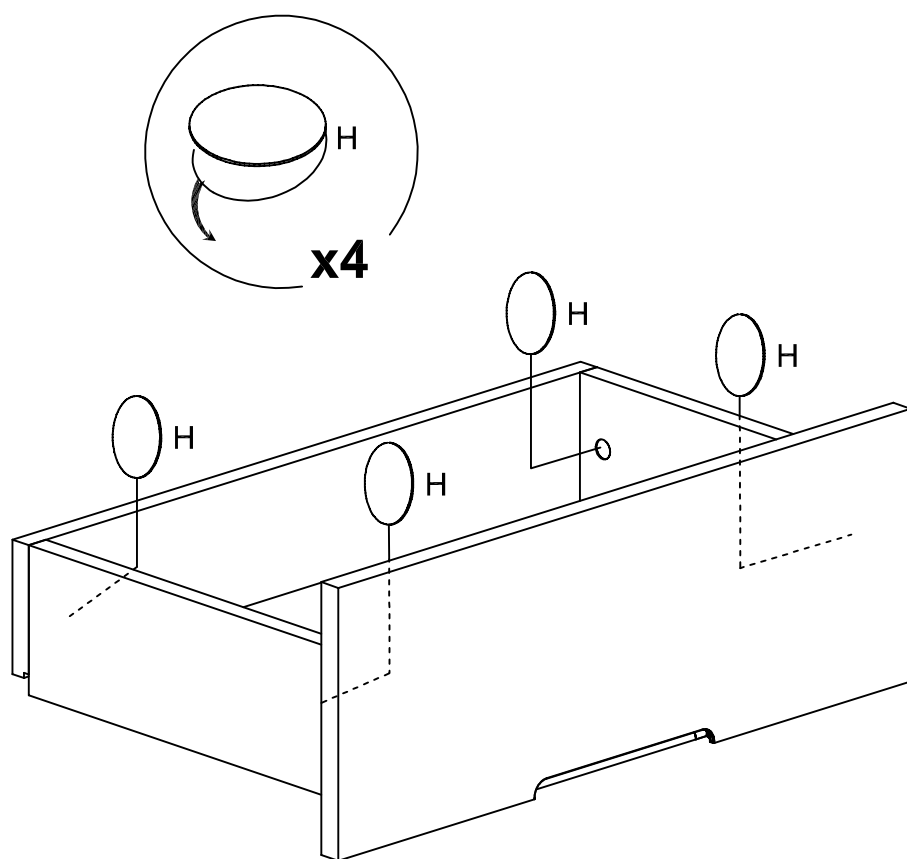




31

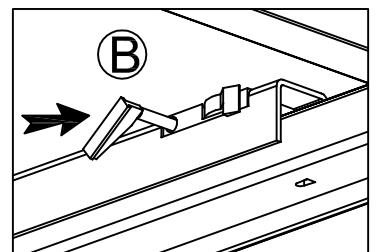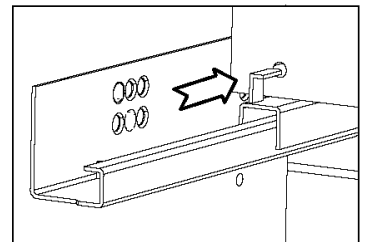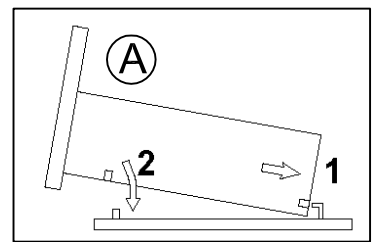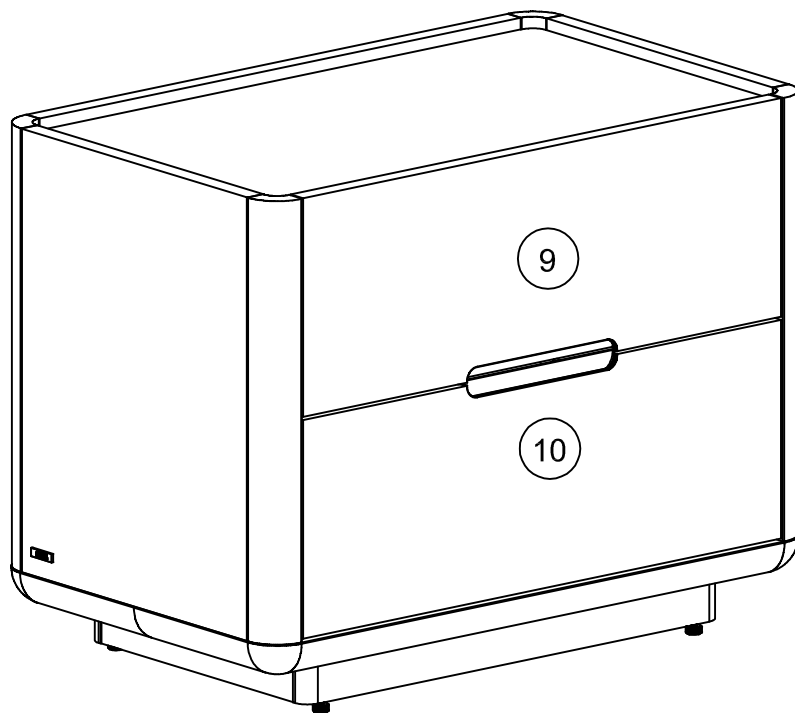

32

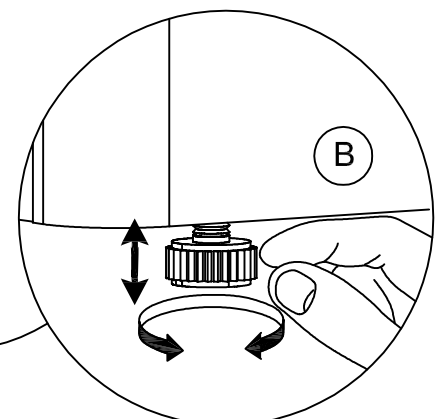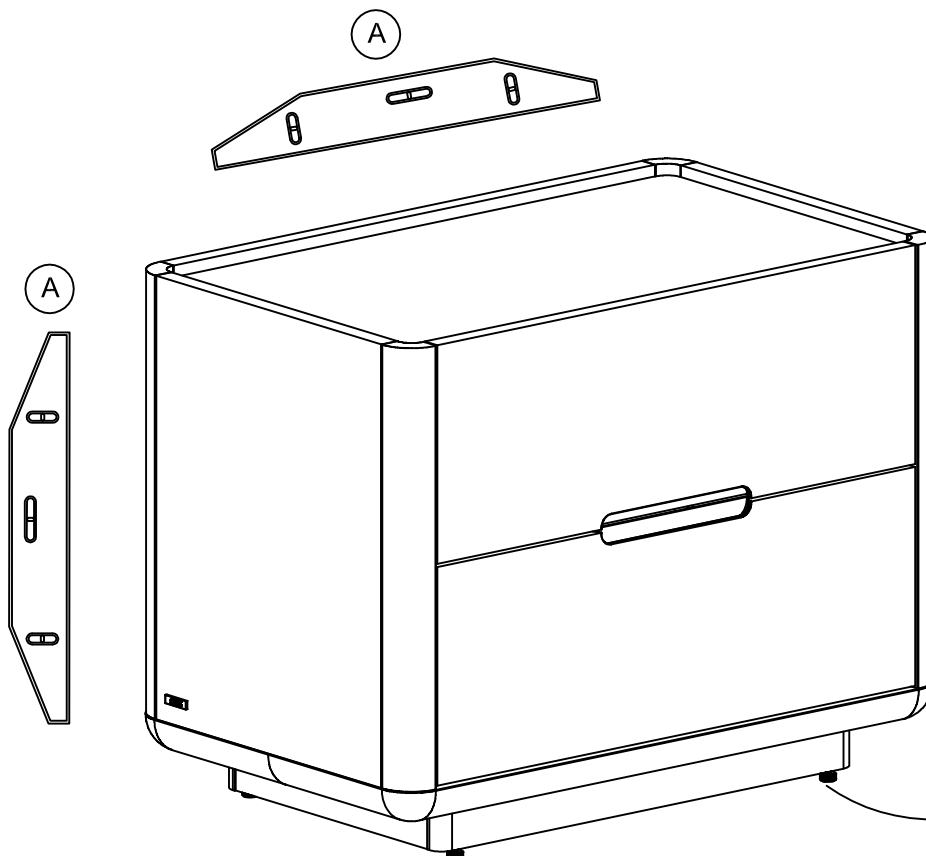

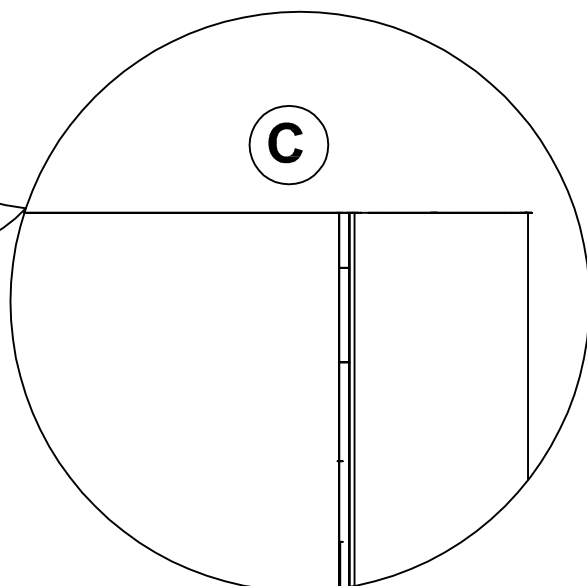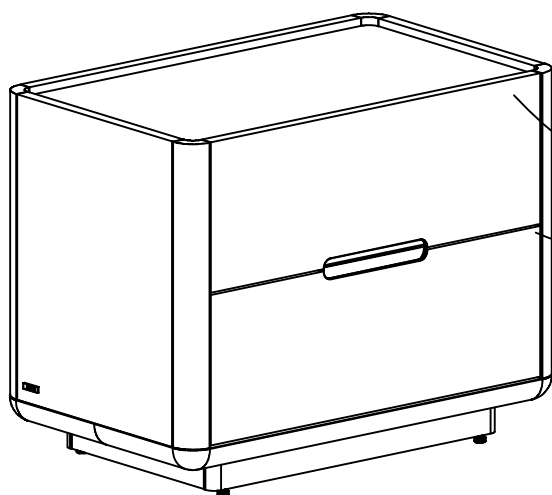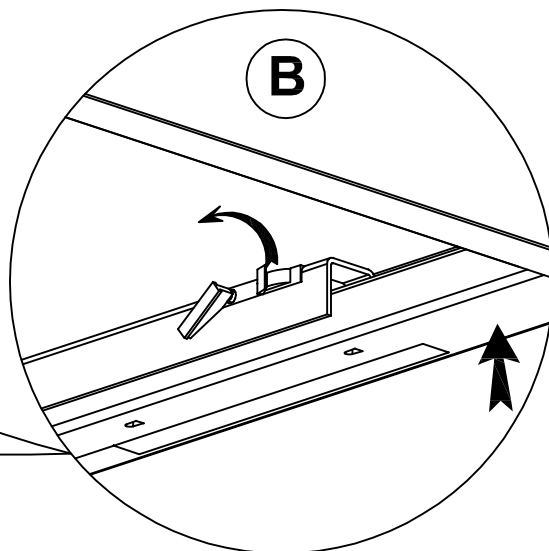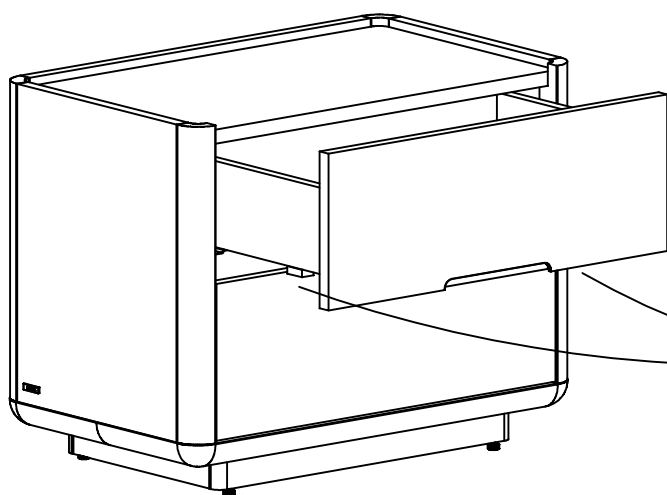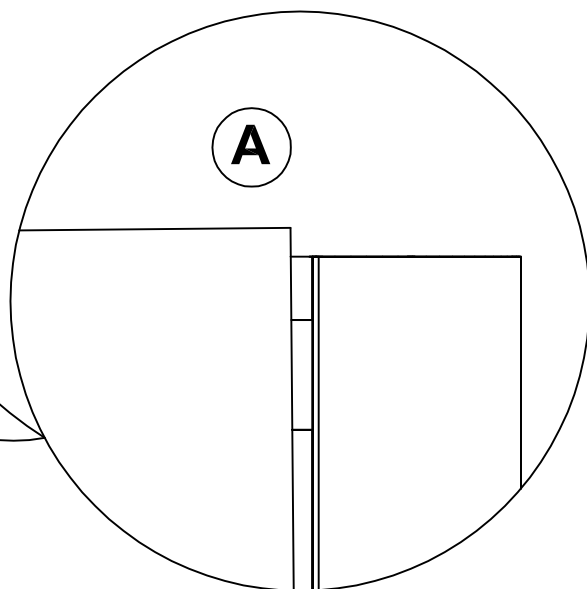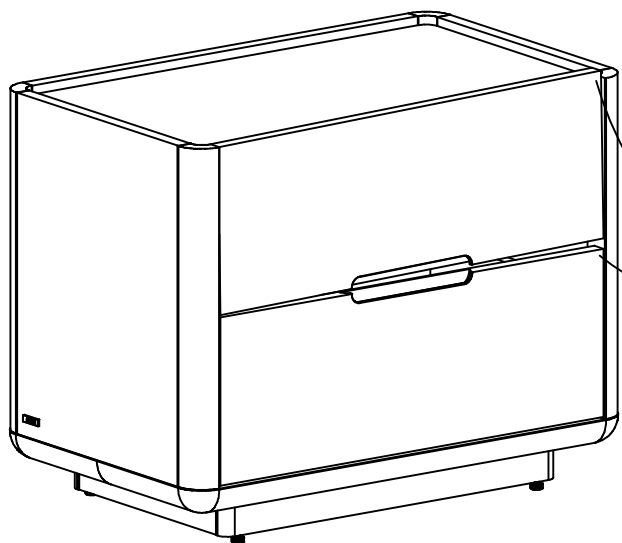

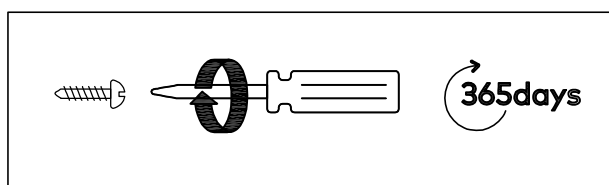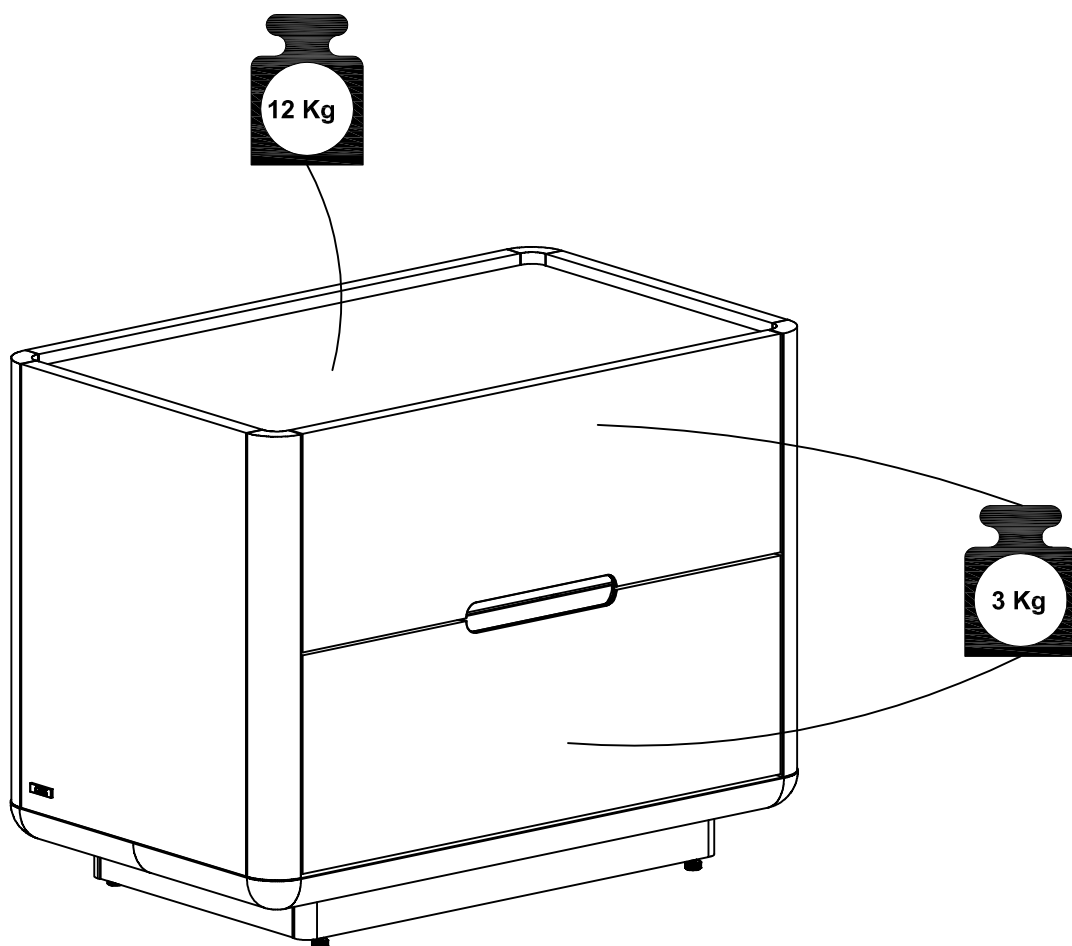

Kave

JULIÀ GRUP Furniture Solutions S.L.

B-17616277

Pol. Ind. Bosc d'en Cuca.

C / Tallers, 14. 17410 Sils SPAIN

contact@Kavehome.com



IT : PAP 22 , Carta
Verifica le disposizioni del tuo comune.