

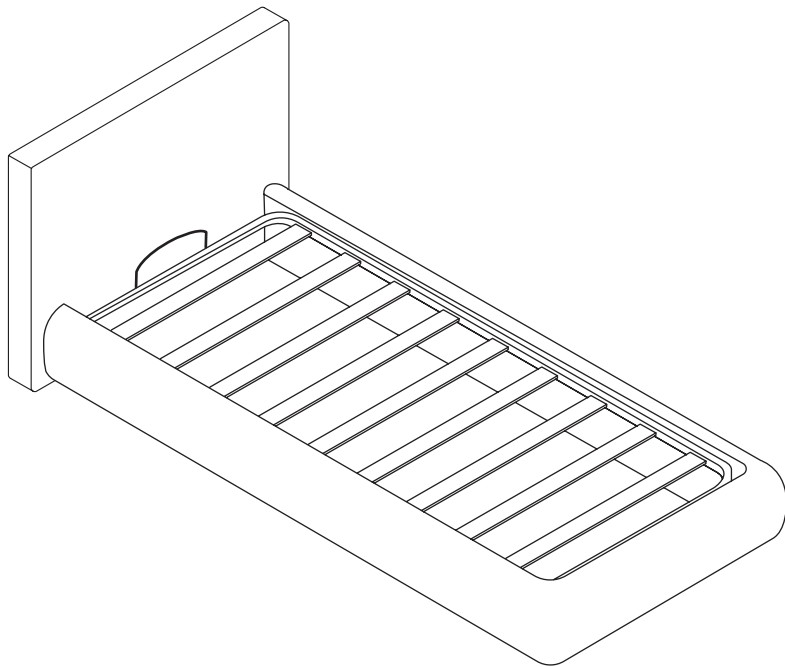
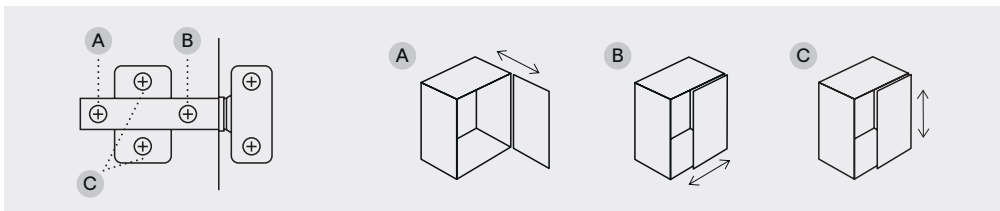
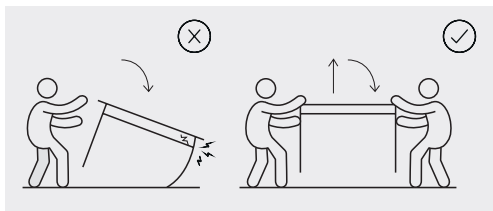
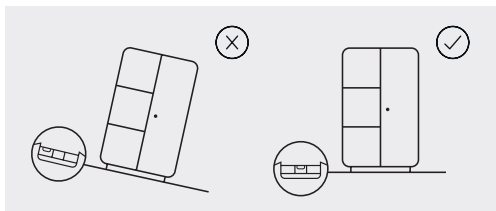
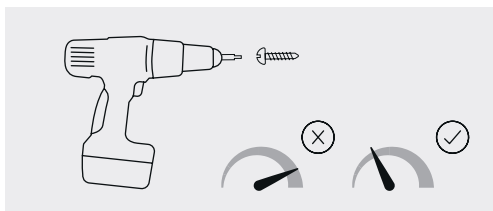
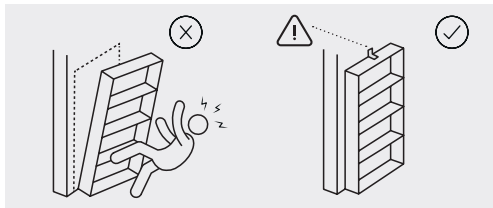
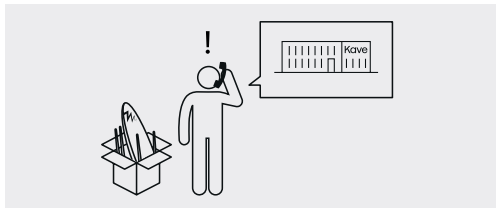


Blok

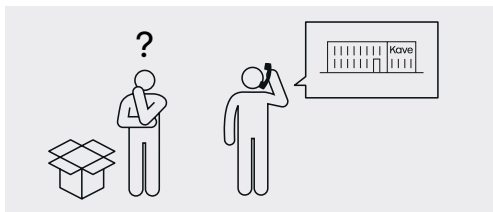


Kave

ED01

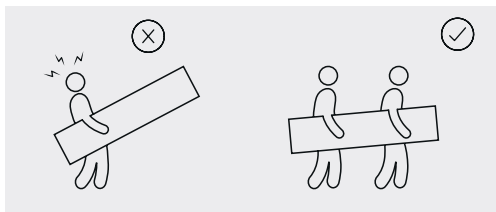




45 min




x4




x2




A x1

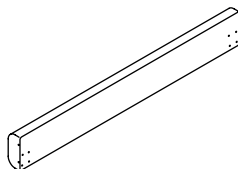


B x2

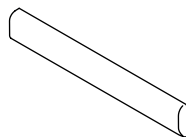

C x1

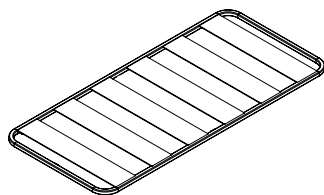

D x1

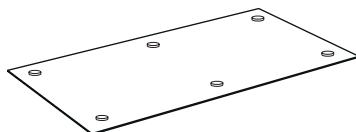

F x2



G x8



H x4



AG x3




I x1




J x1



K x2



L x1

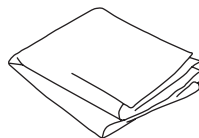

M x1



N x8
ø8×35mm




O x10
M8×20mm




P x32
M6×25mm




Q x4
M8



R x1
6mm



S x1
4-5mm




T x1
3mm



U x4
M8



V x4



W x1
N°13



AD x4



Y x1



Z x1




AA x2




AH x12
M4×25mm



AC x12

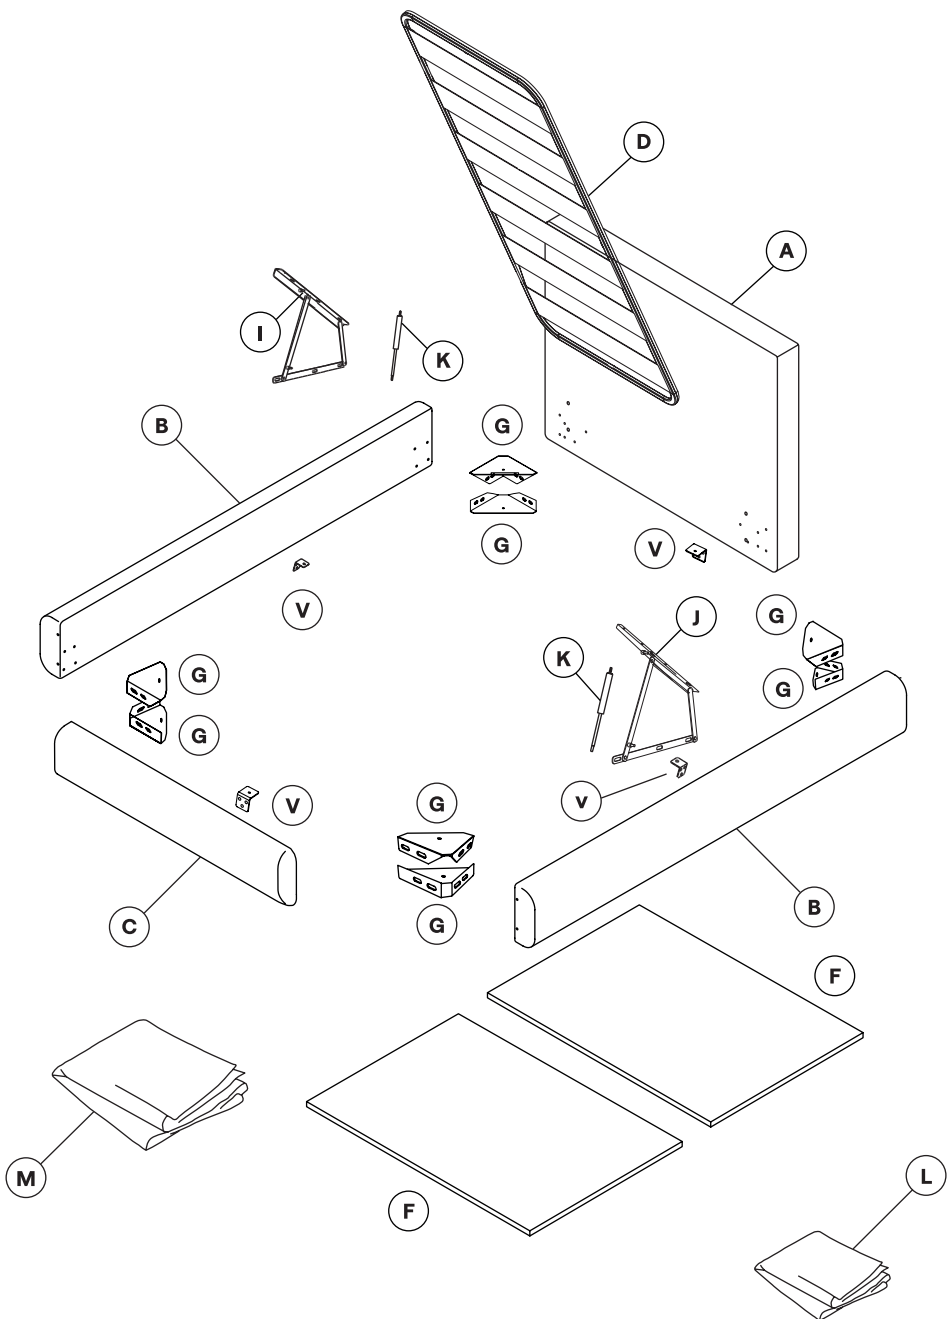



1

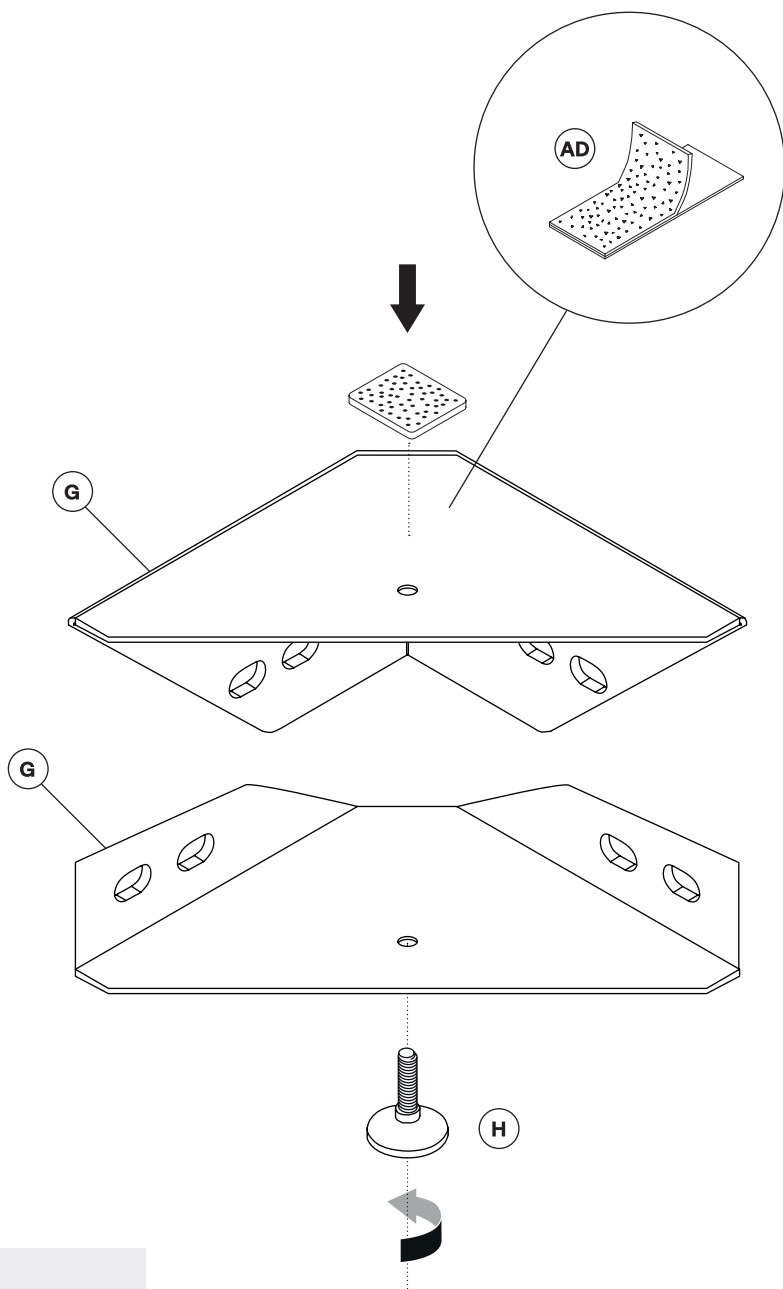


i

x4

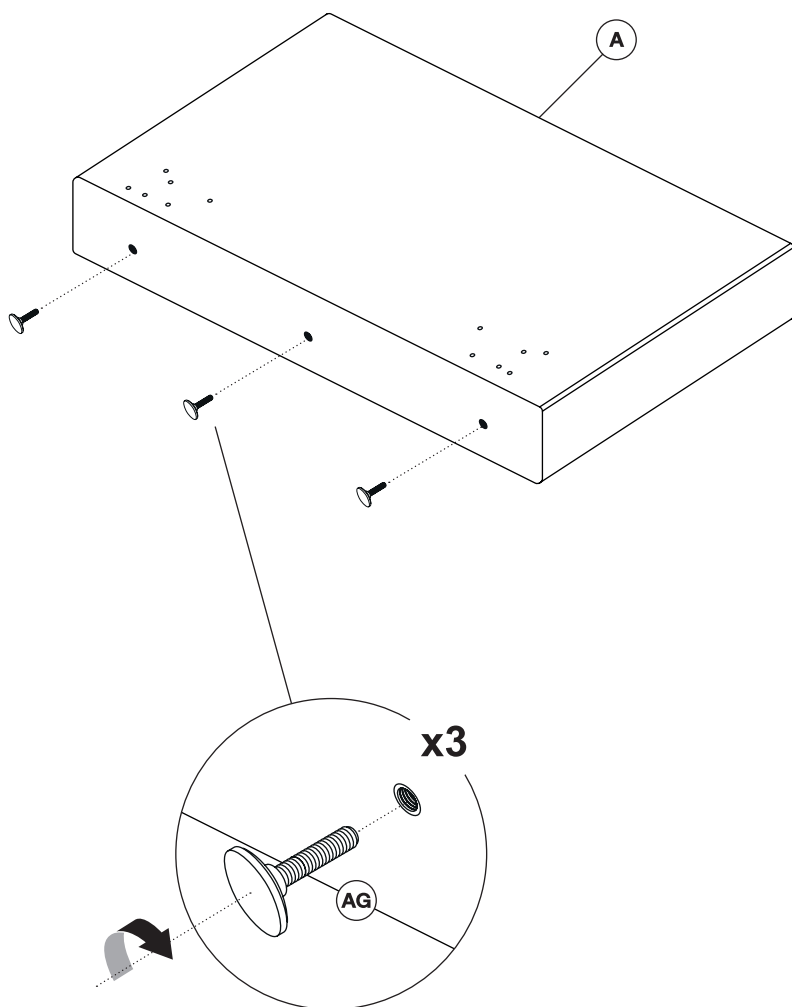



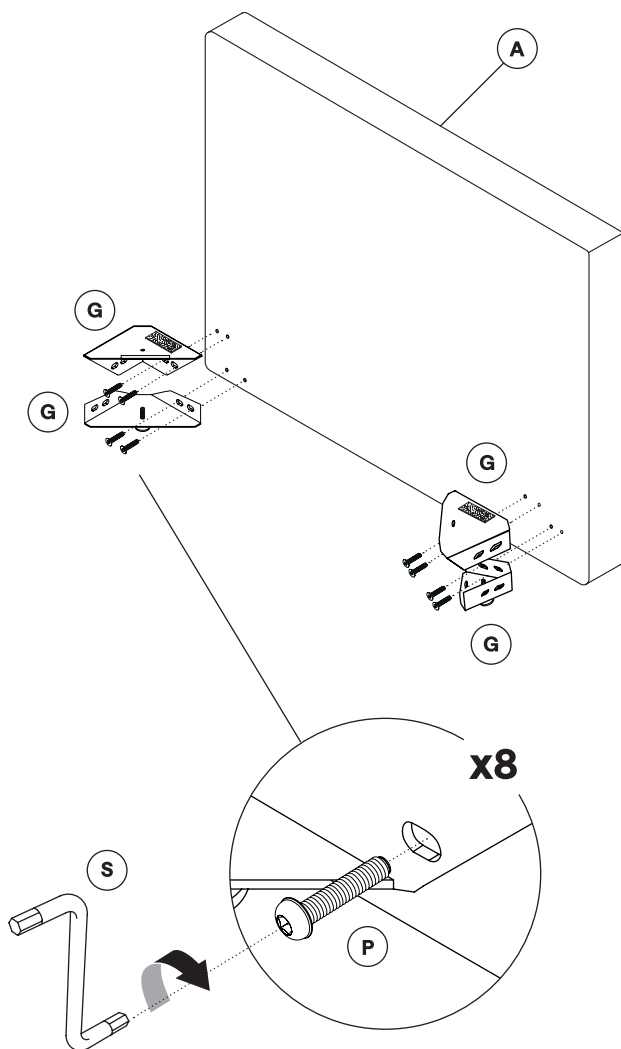



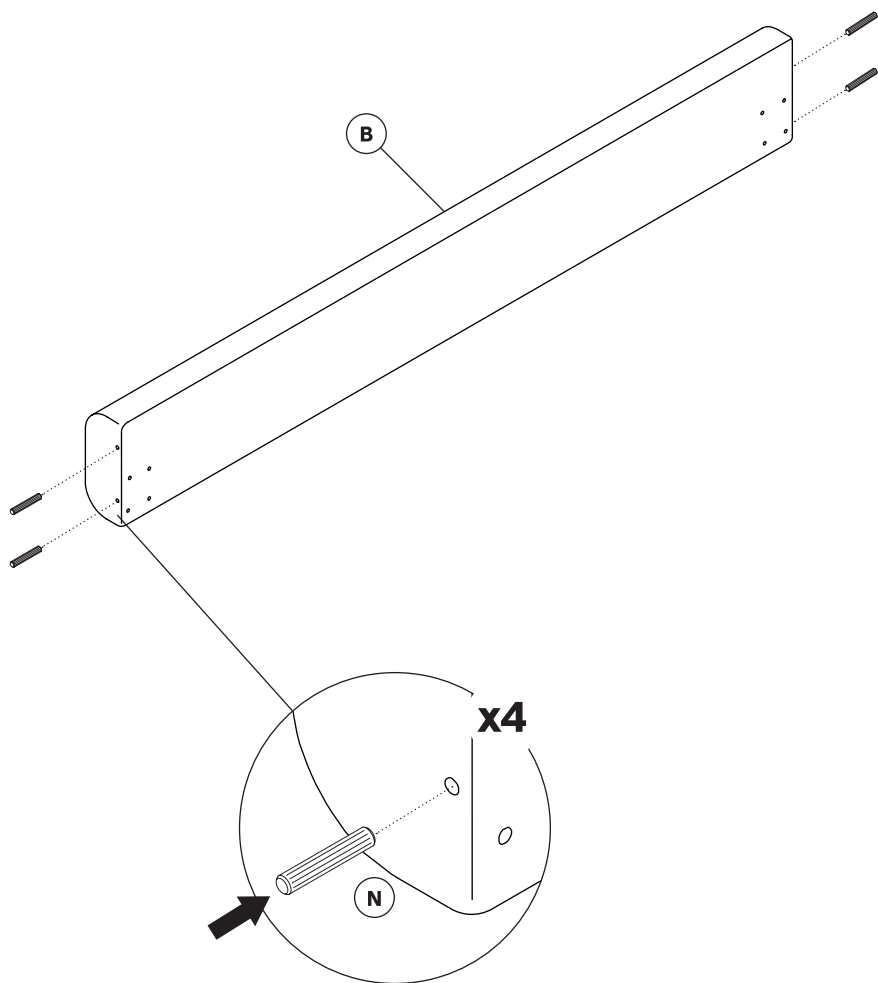



i


x2

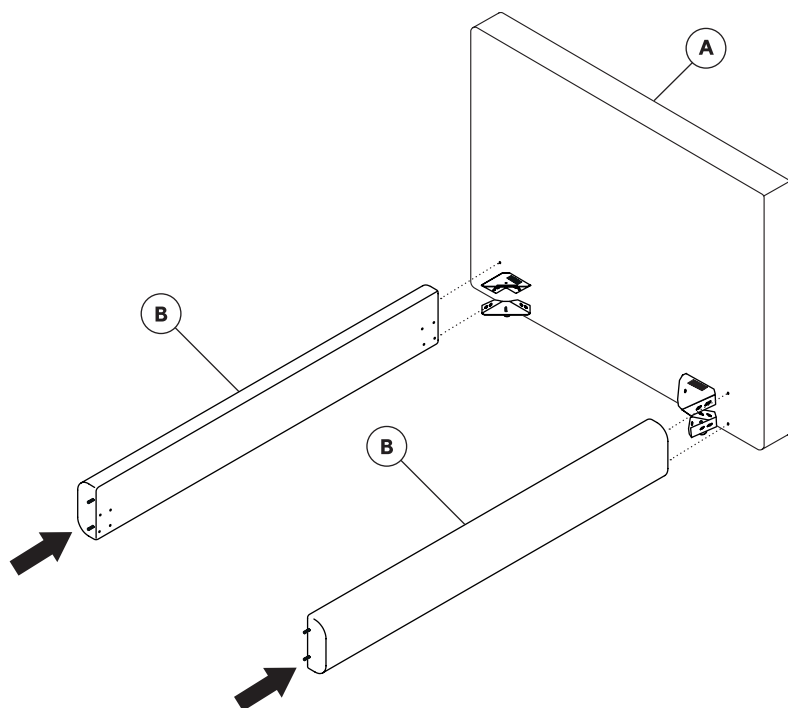



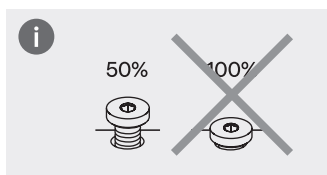
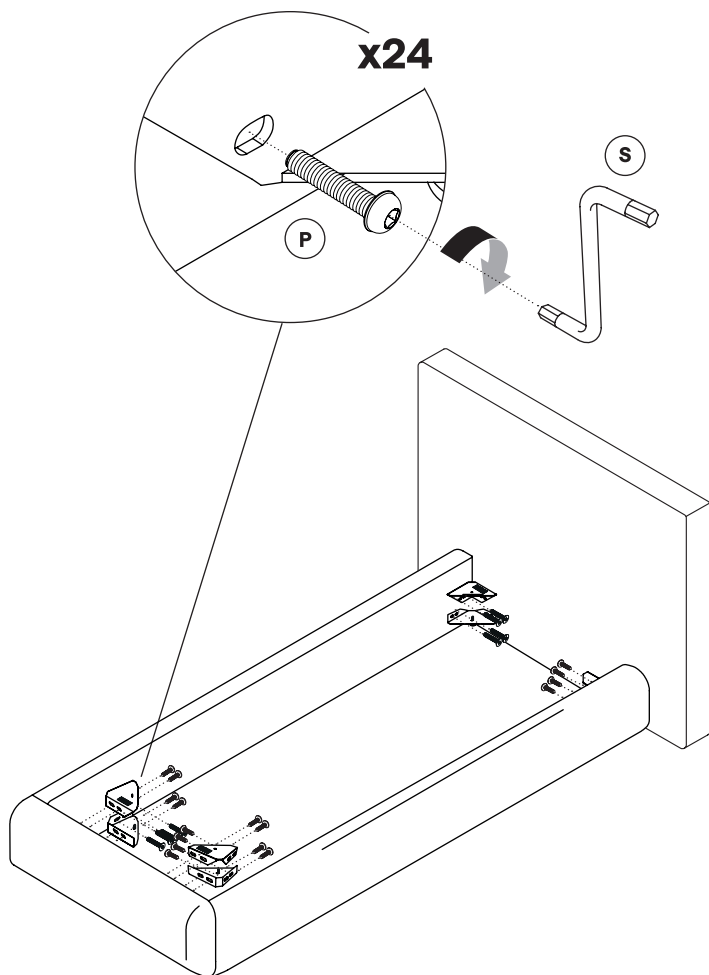


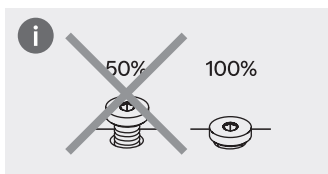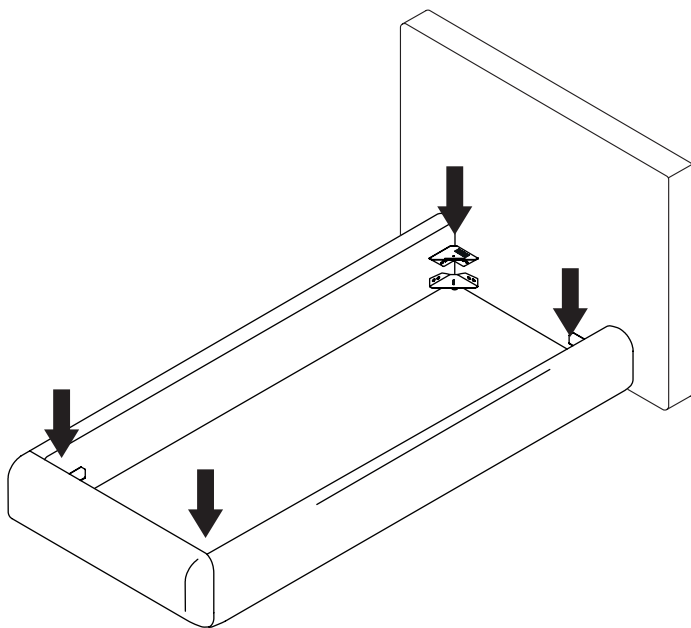


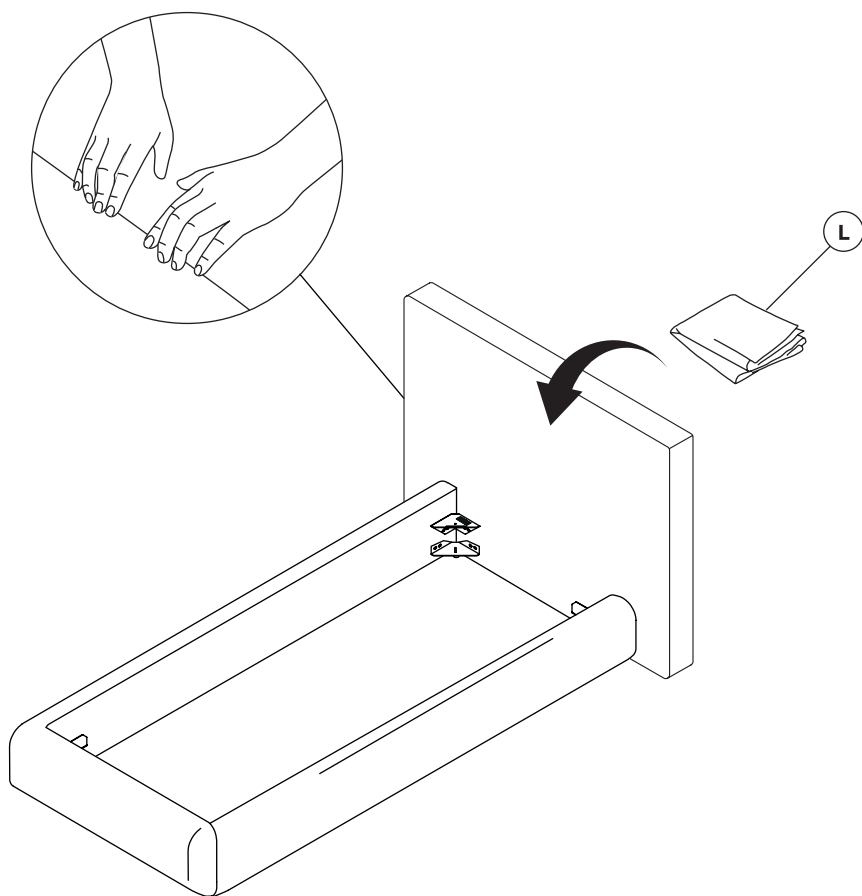


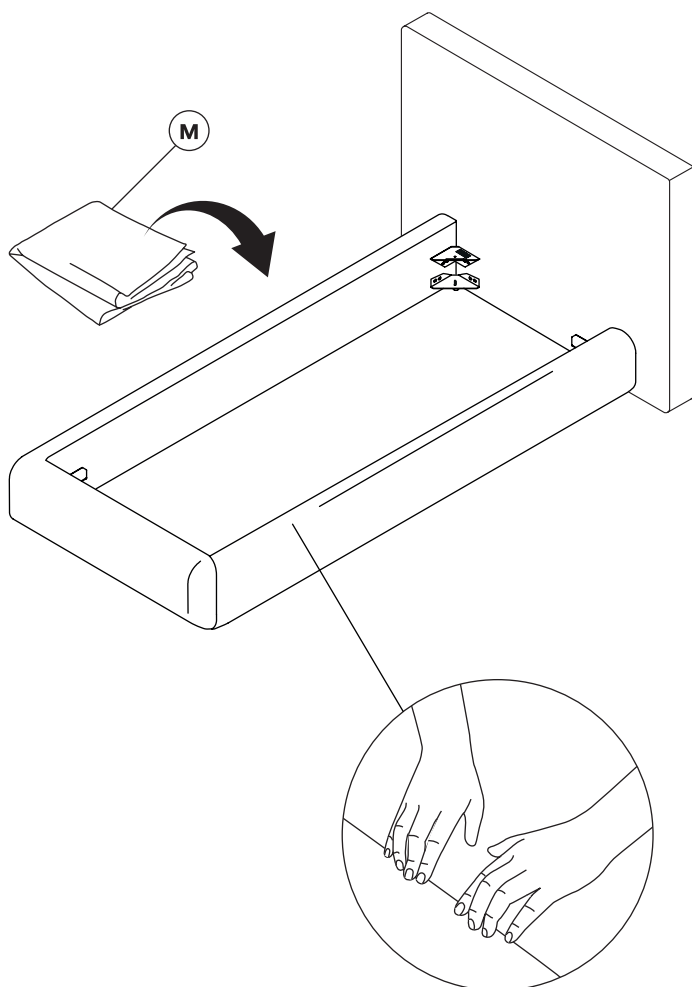


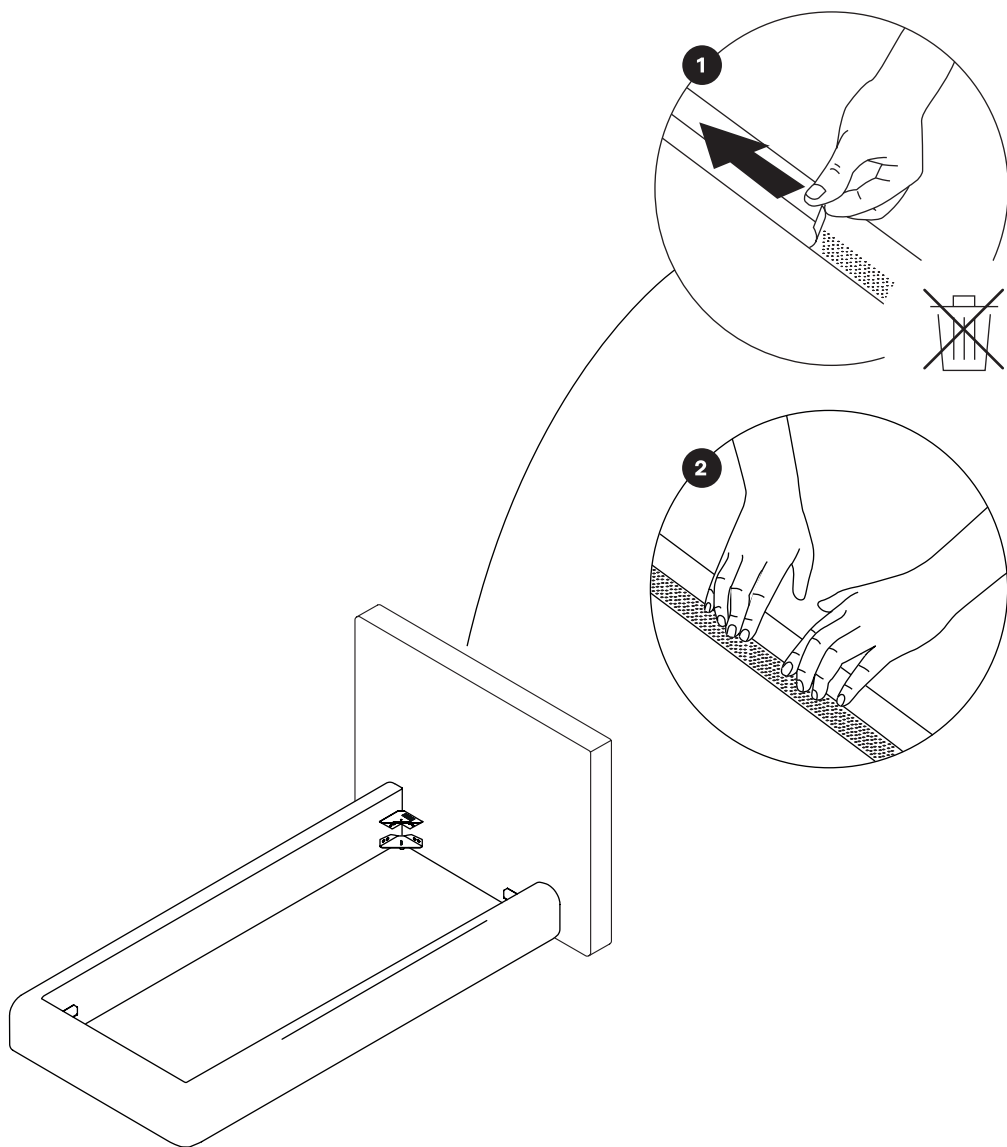


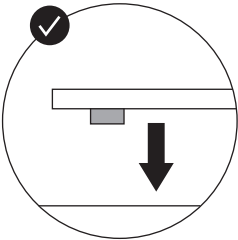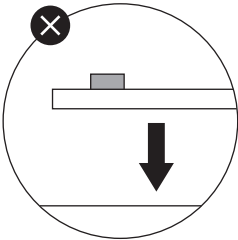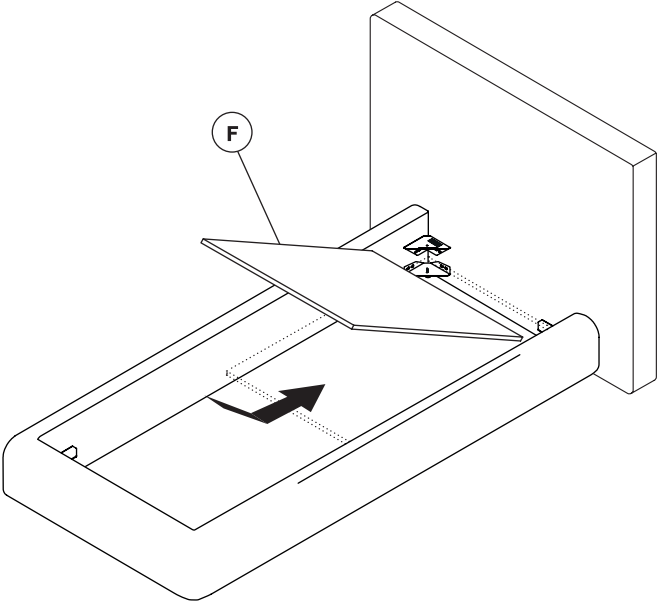


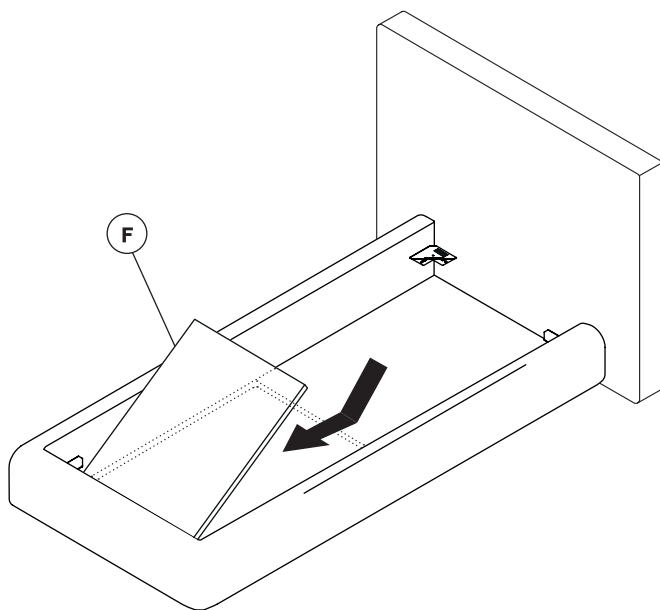


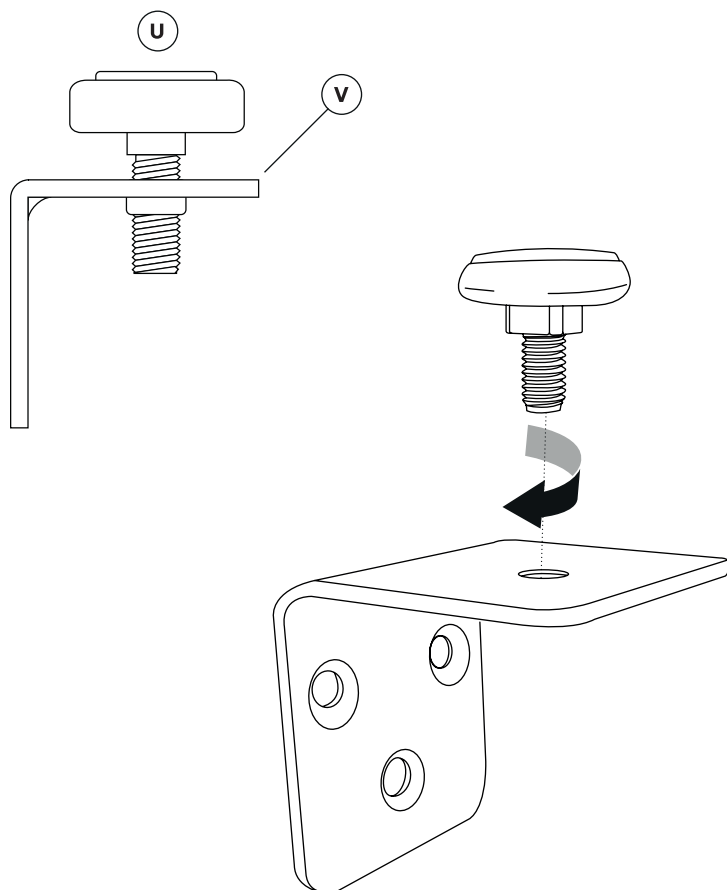

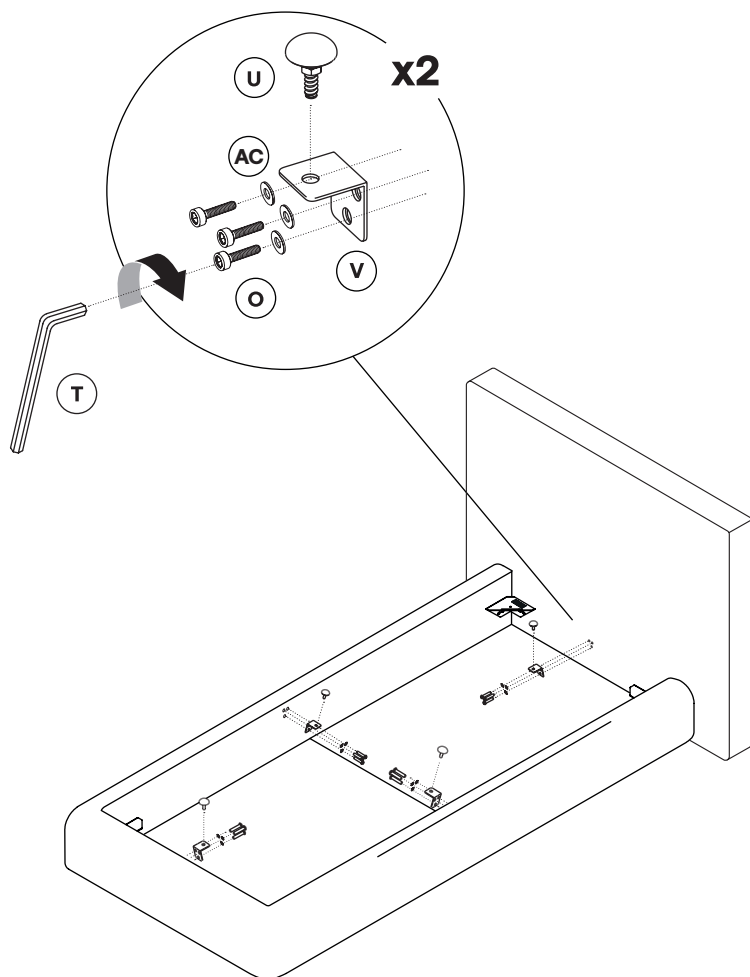

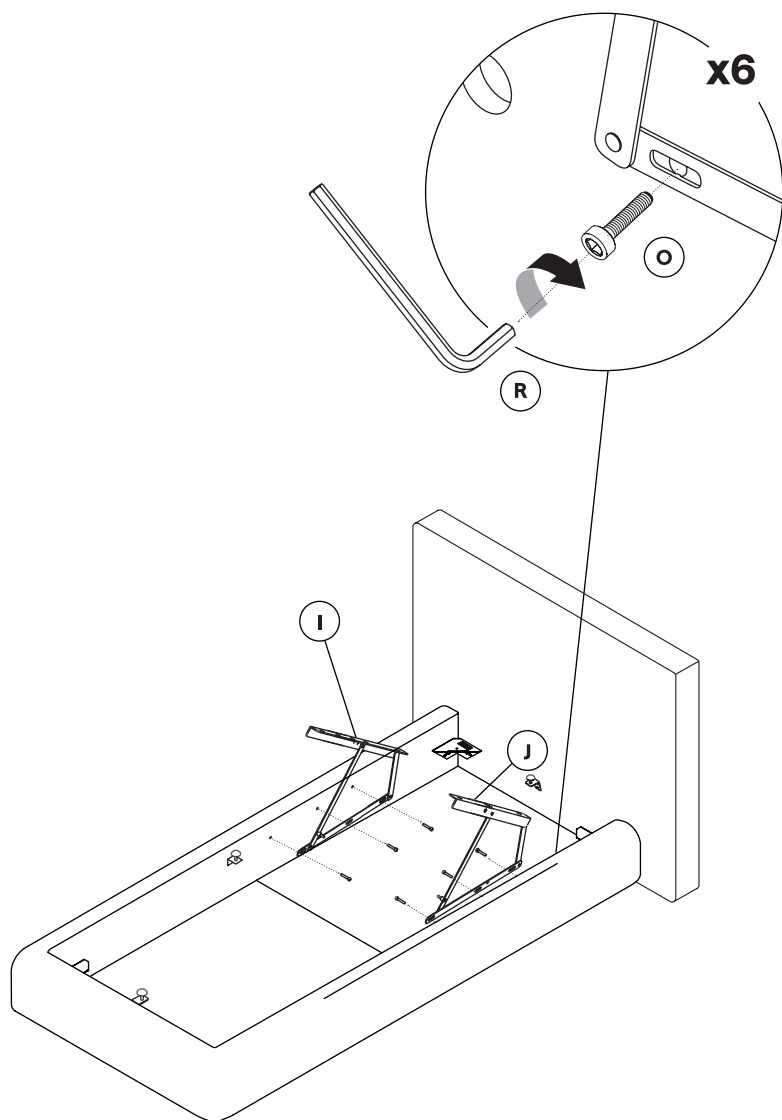


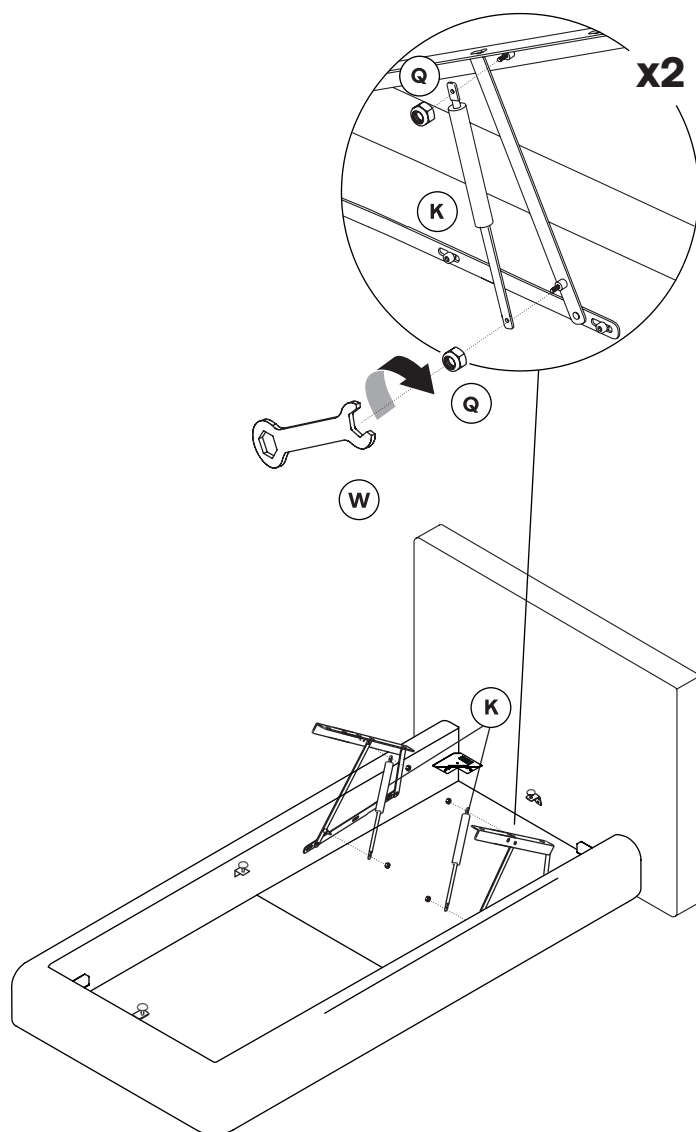

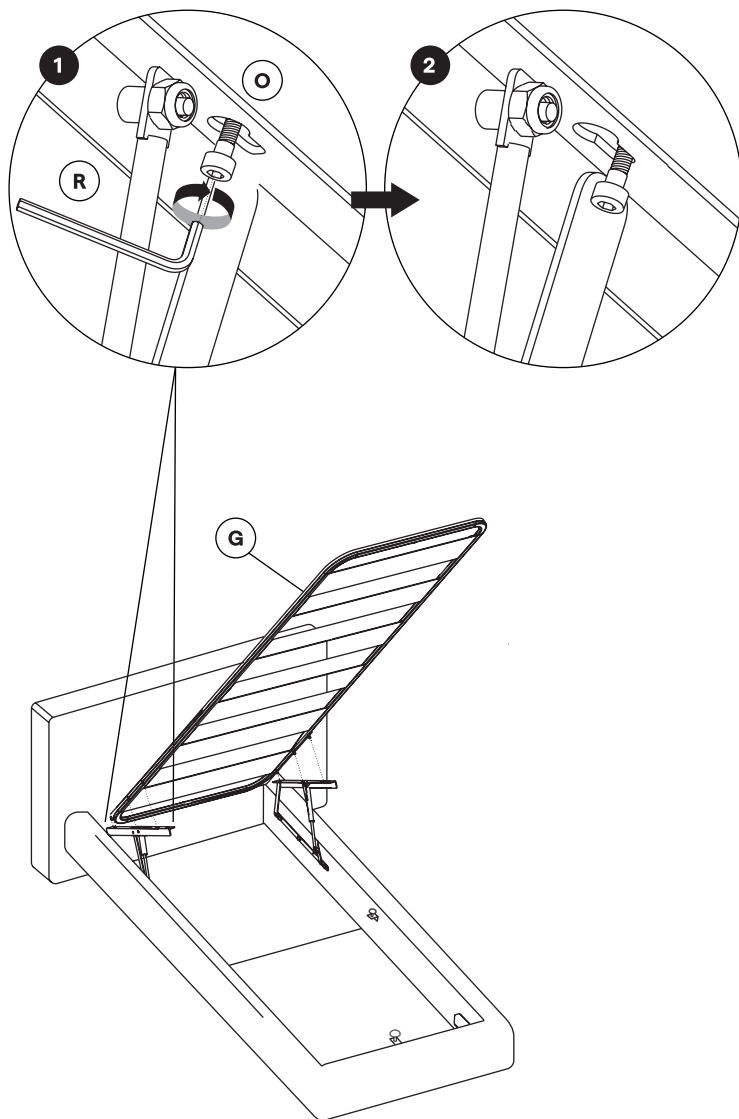


i


x2


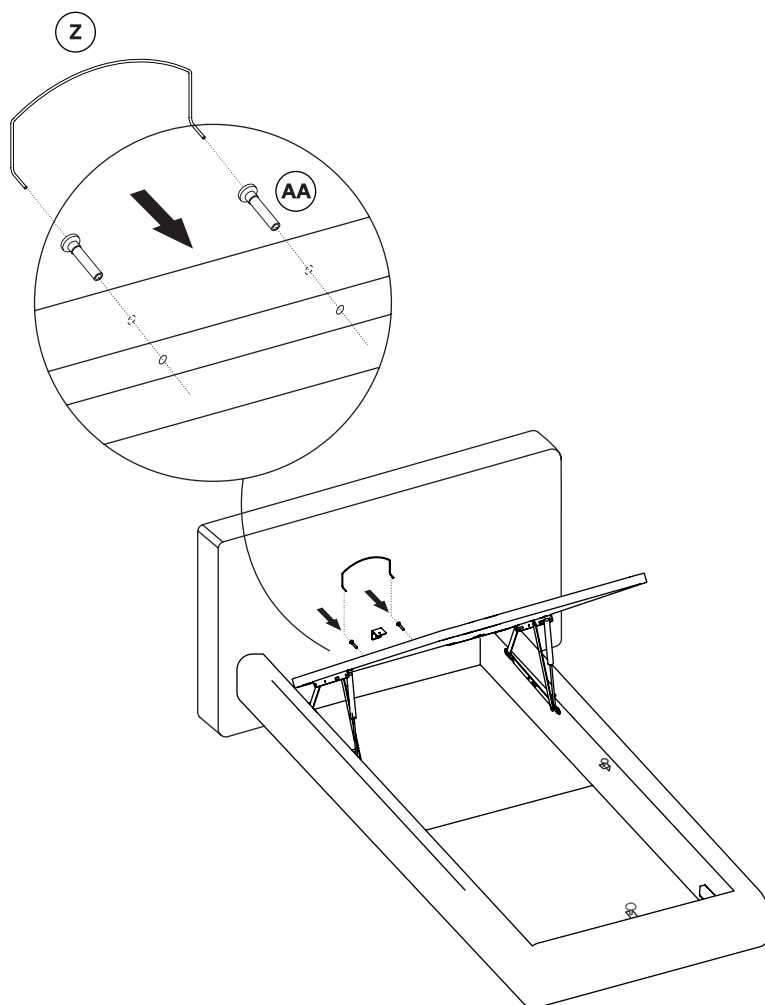







19

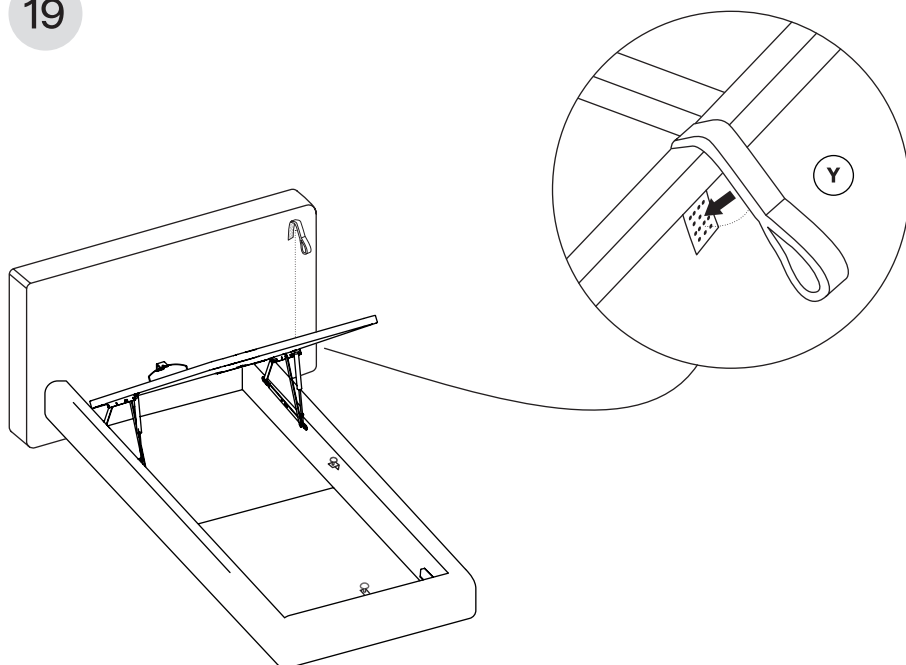

20

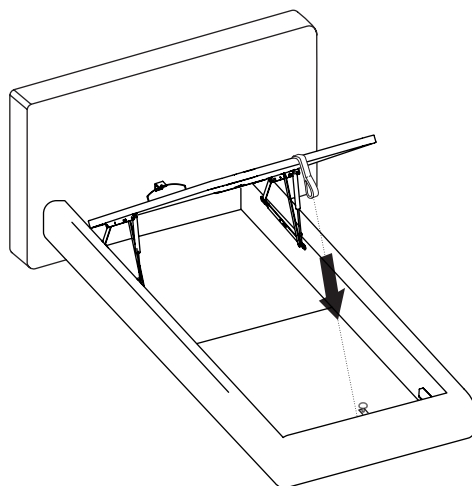

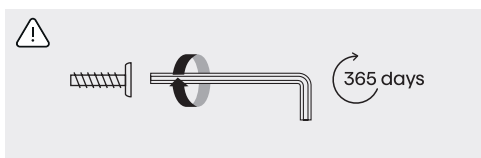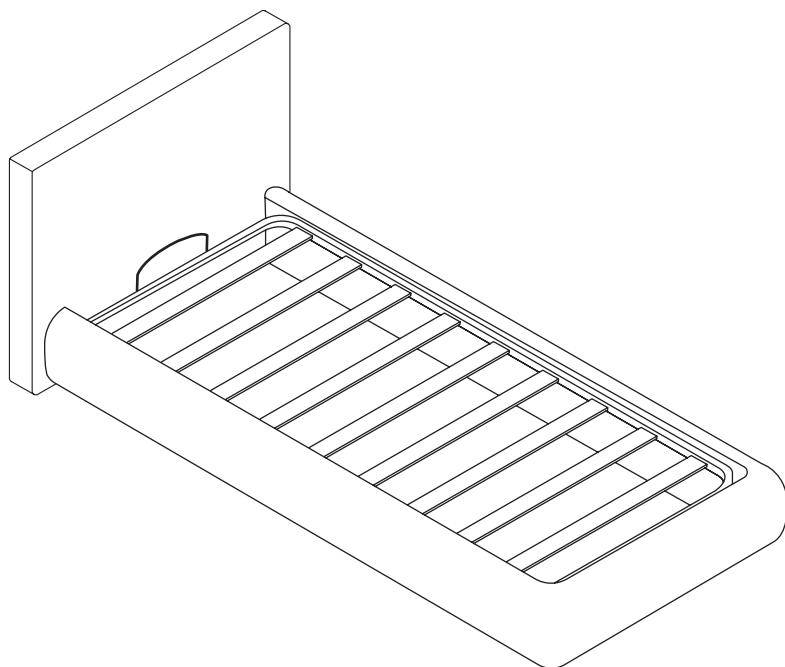

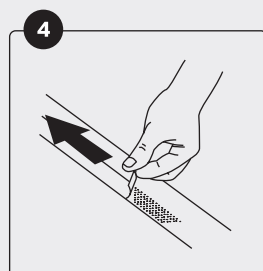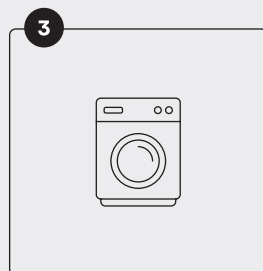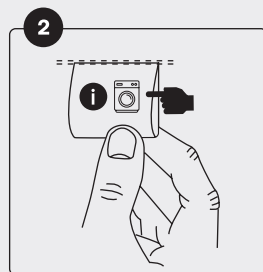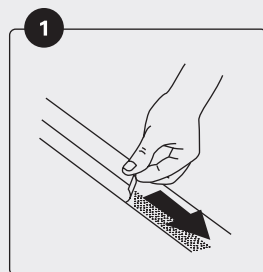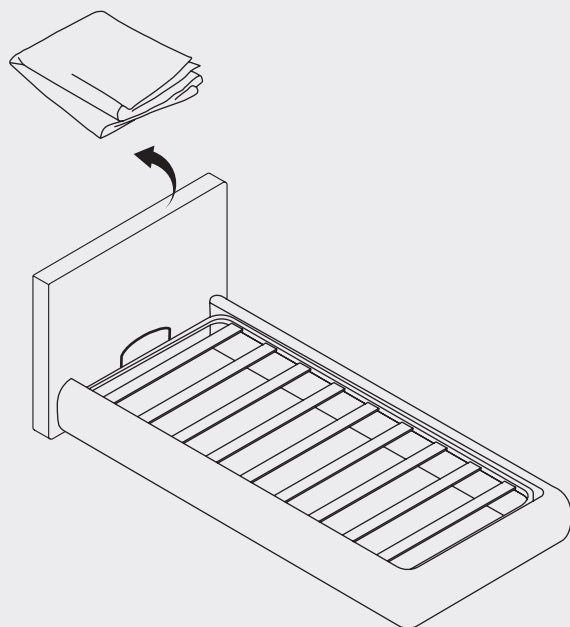

Kave

Julià Grup Furniture Solutions S.L.

B-17616277

Pol. Ind. Bosc d'en Cuca
C/ Tallers, 14. 17410 Sils, Spain
contact@kavehome.com



IT: PAP 22. Carta.
Verifica le disposizioni del tuo comune.