

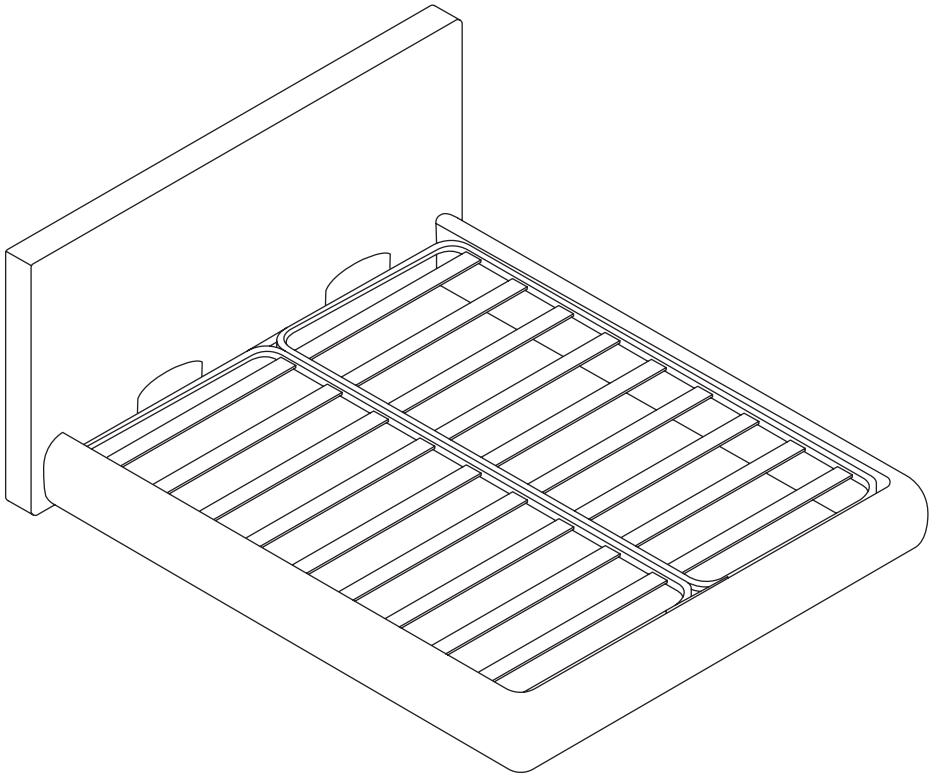
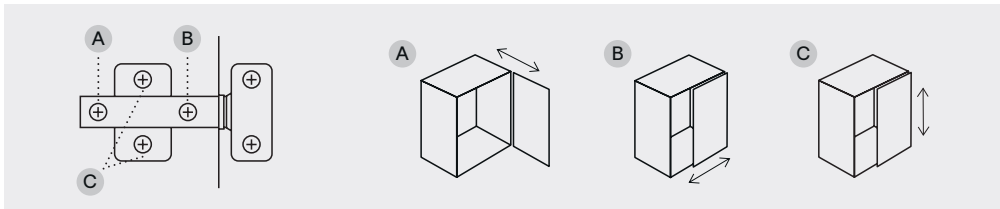
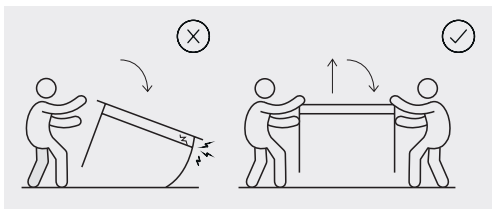
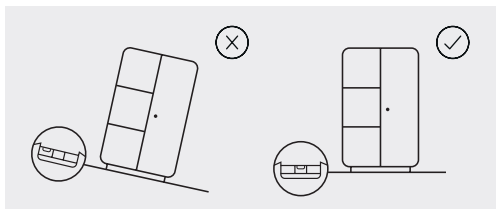
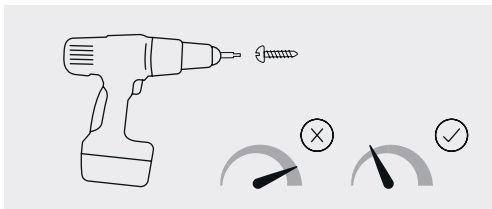
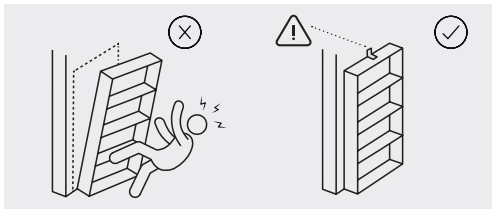
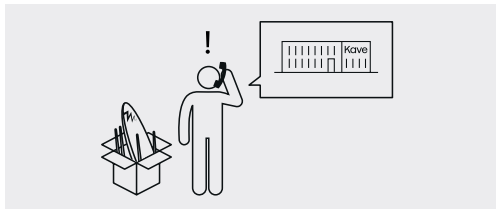


# Blok

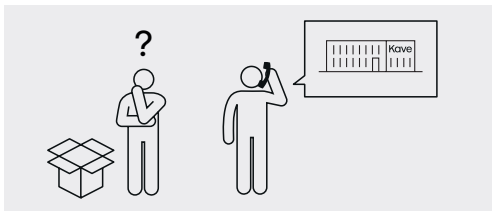


# Kave

ED01

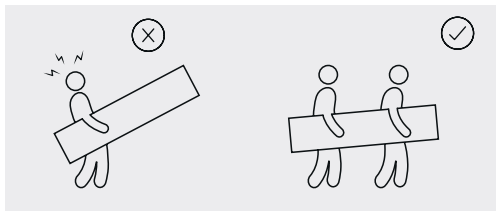





60 min




x4




x2

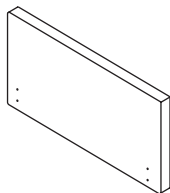


**A x1**

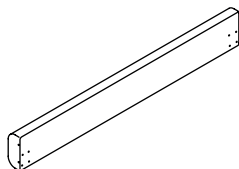

**B x2**

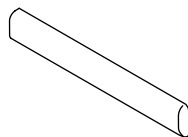


**C x1**

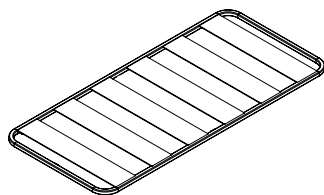

**D x2**



**E x2**

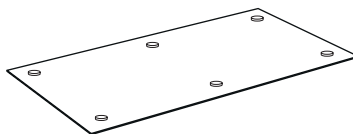

**F x2**



**G x8**



**H x4**



**AG x3**



**I x1**




**J x1**



**K x2**



**L x1**

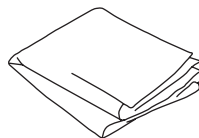

**M x1**



**N x8**  
ø8×35mm




**O x10**  
M8×20mm




**P x32**  
M6×25mm




**Q x4**  
M8



**R x1**  
6mm



**S x1**  
4-5mm




**T x1**  
3mm



**U x4**  
M8



**V x4**



**W x1**  
N°13



**AF x4**  
M6



**Y x1**



**Z x2**



**AA x4**




**AH x12**  
M4×25mm




**AC x12**




**AD x4**



**AE x4**  
M6×40mm

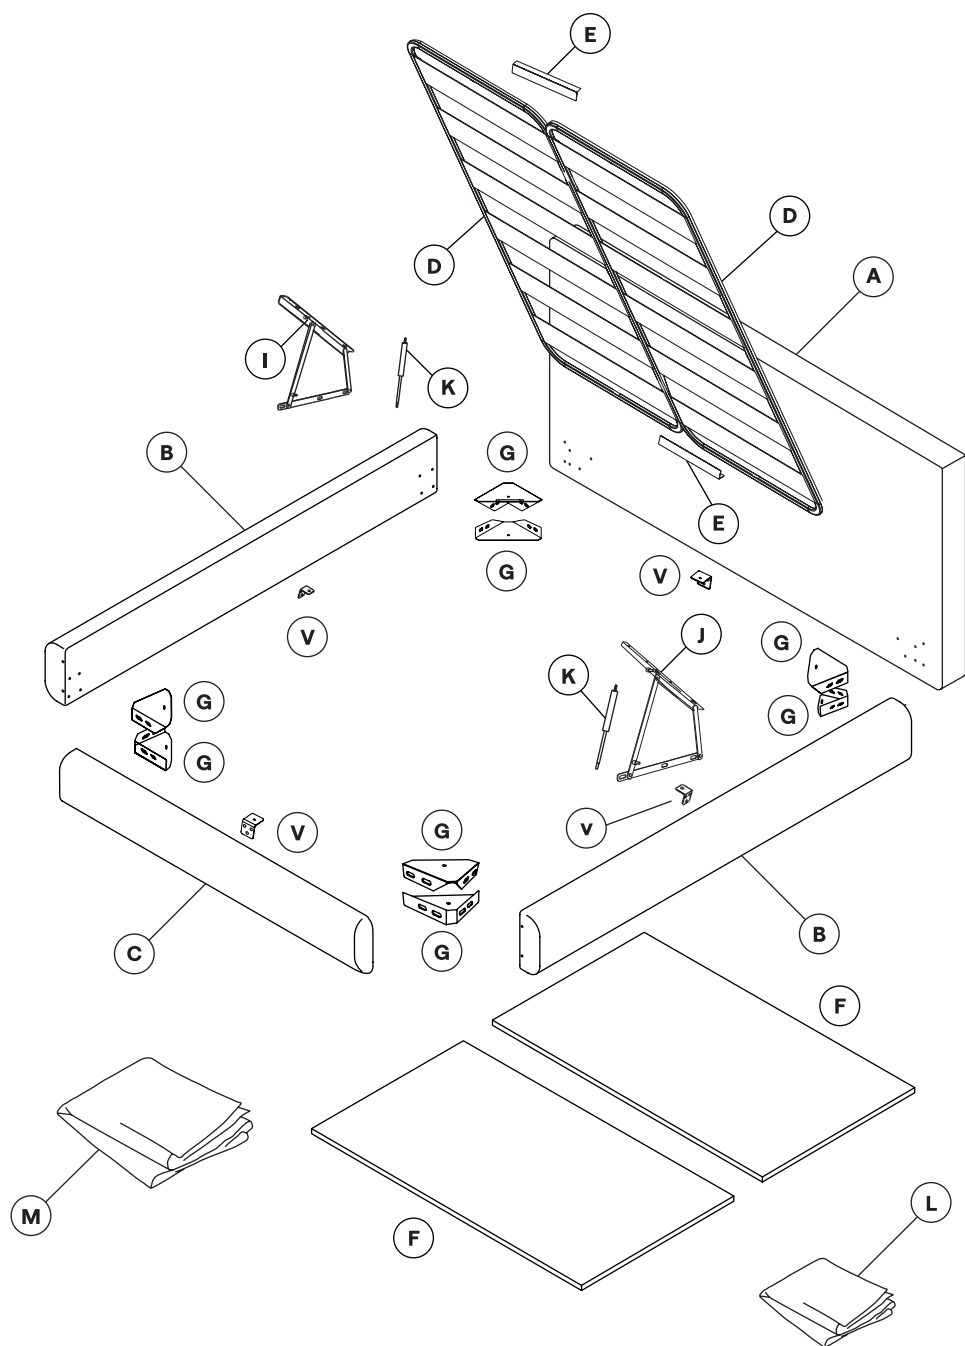



1

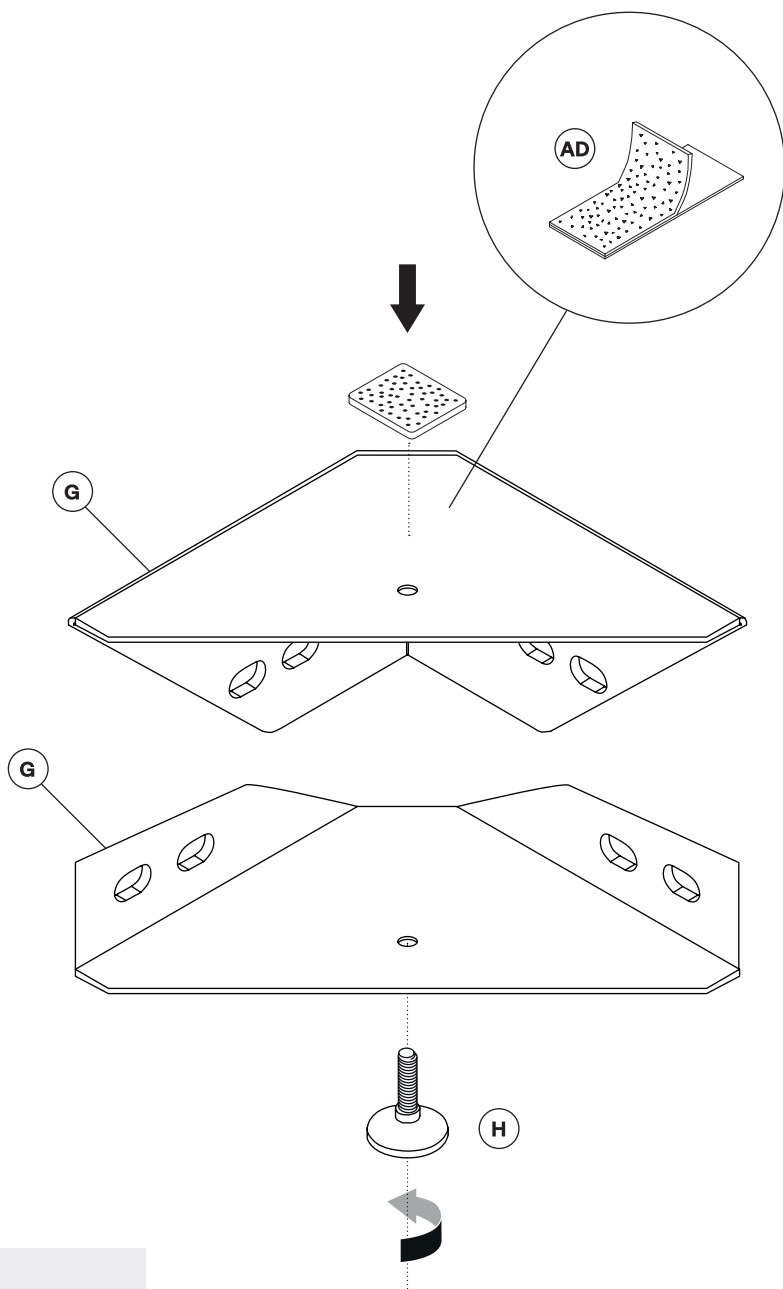


i

**x4**

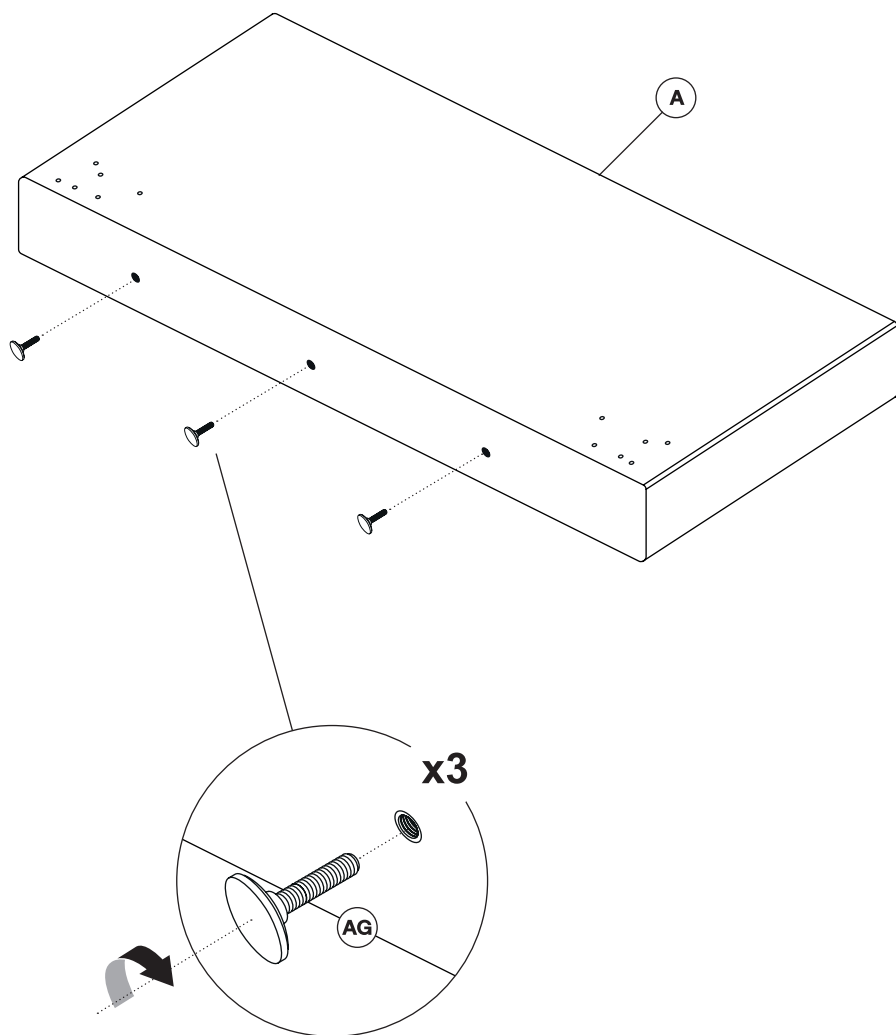



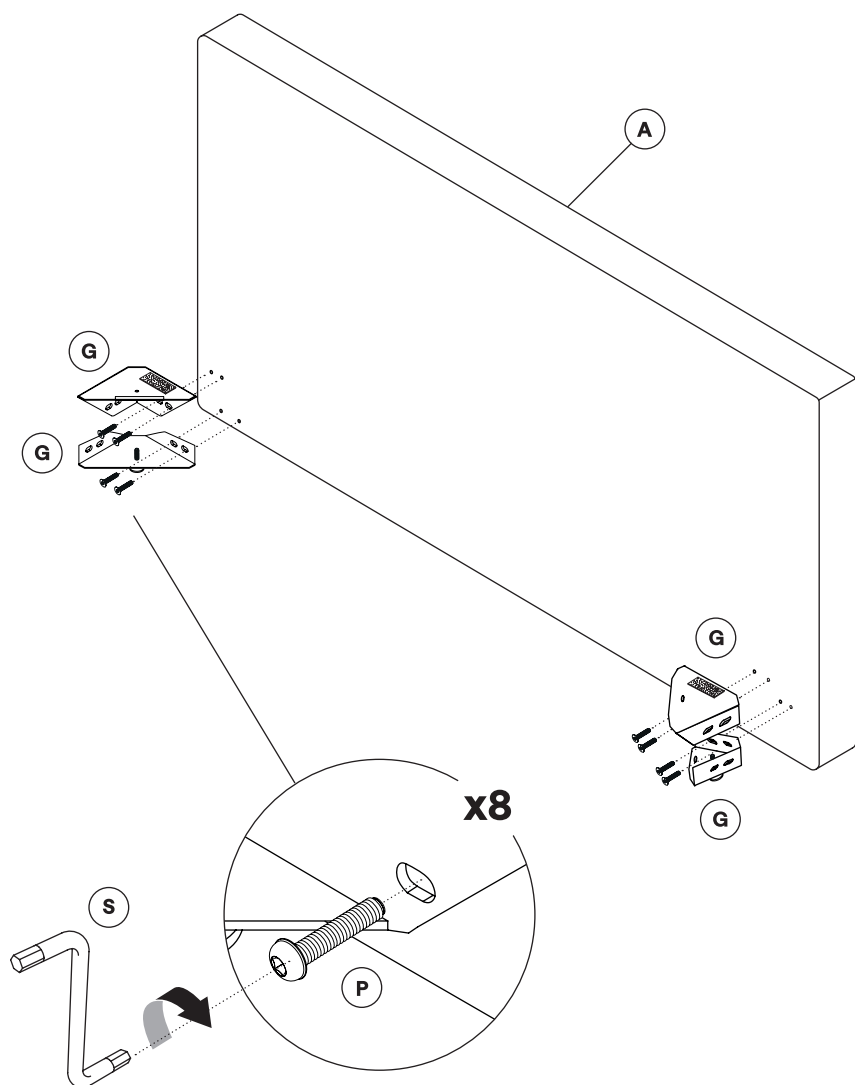



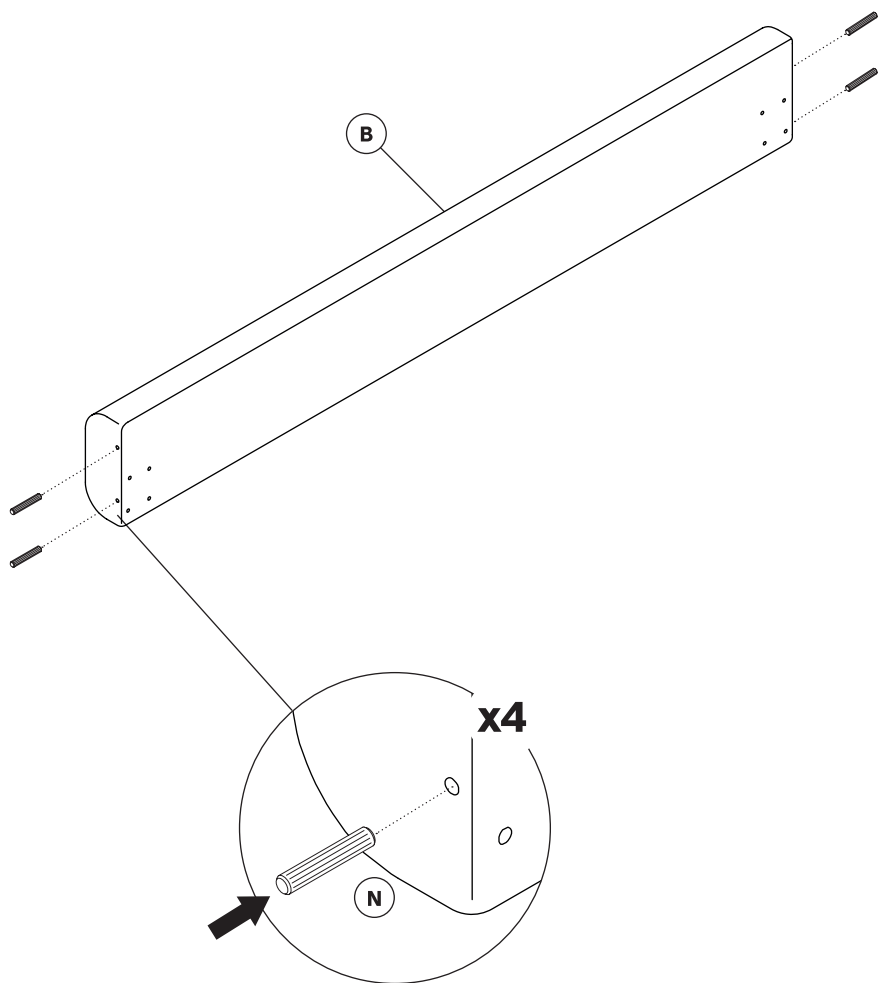



i


**x2**

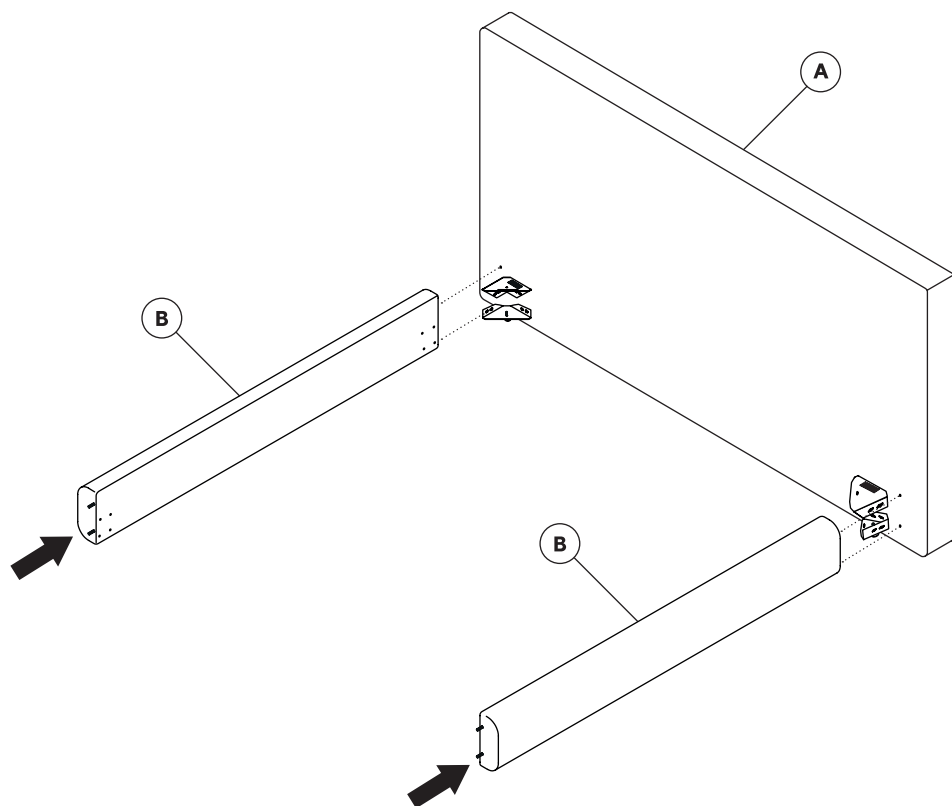



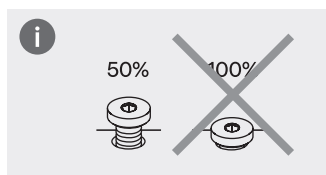
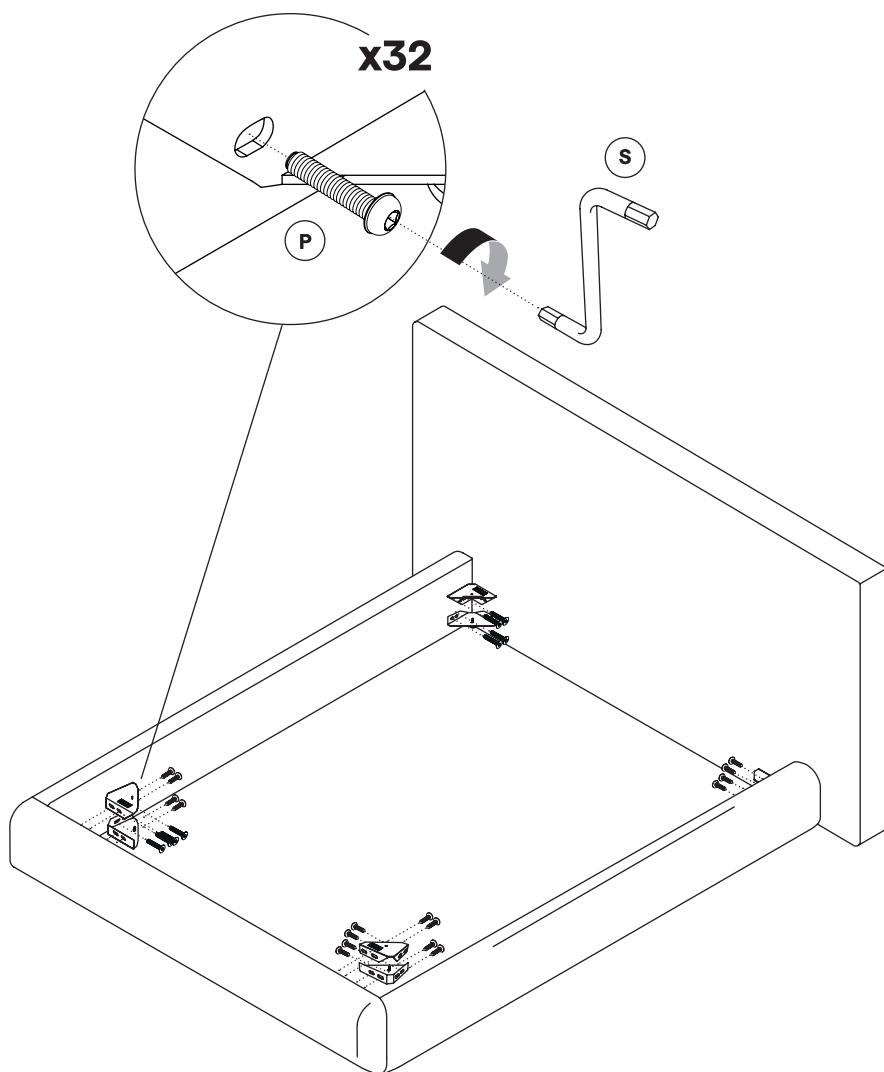


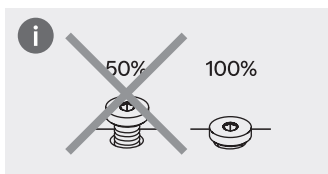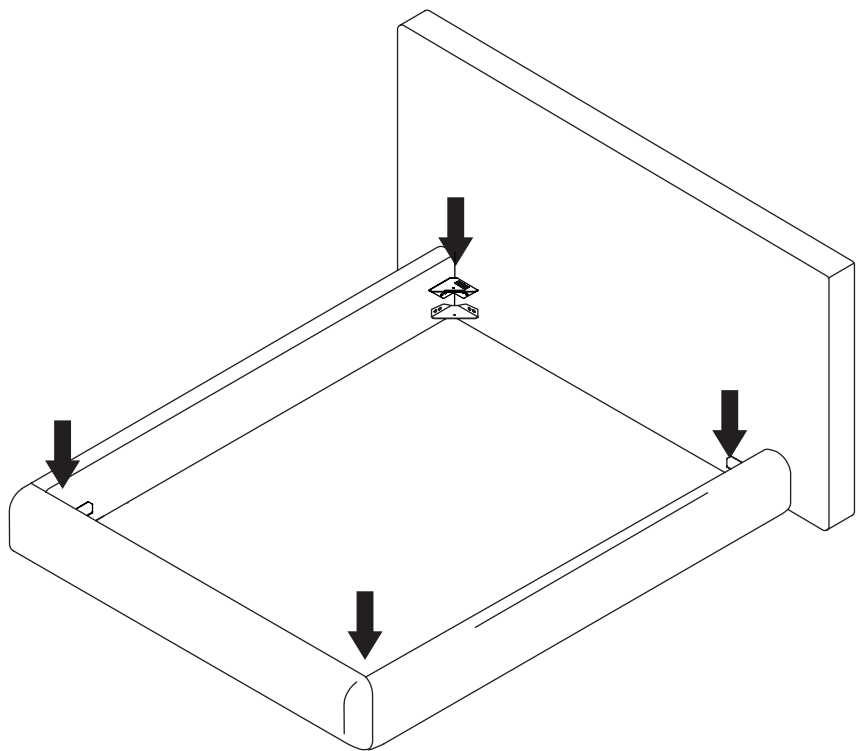


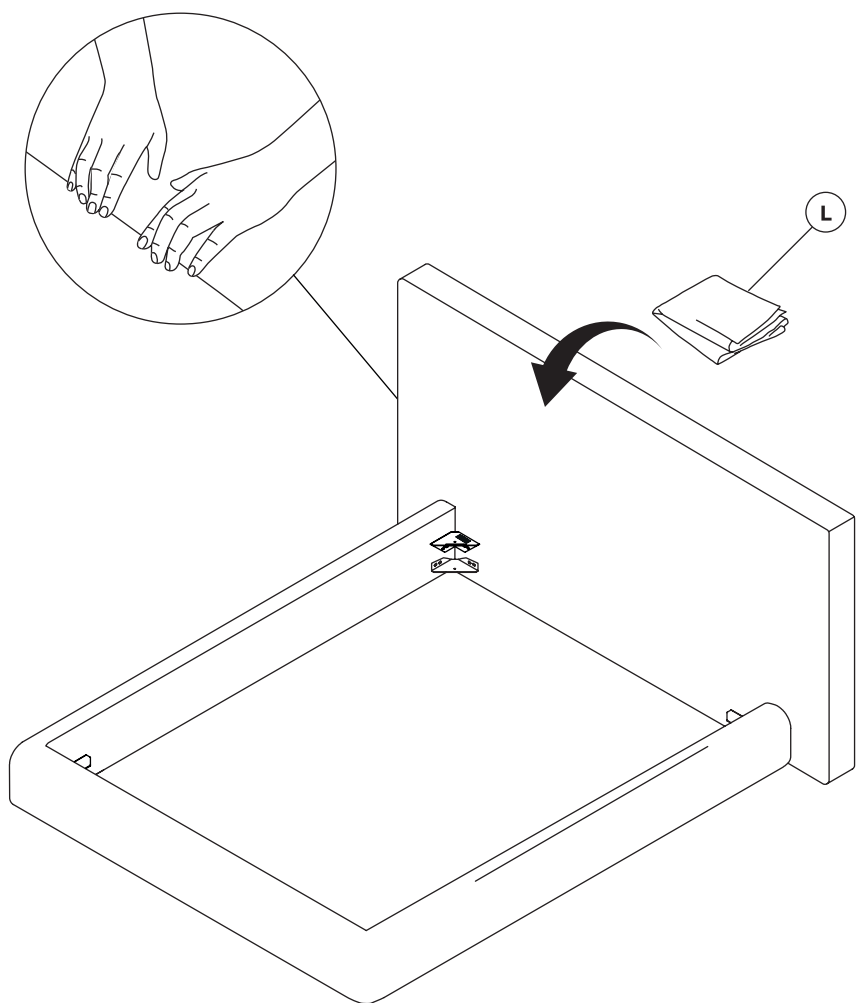


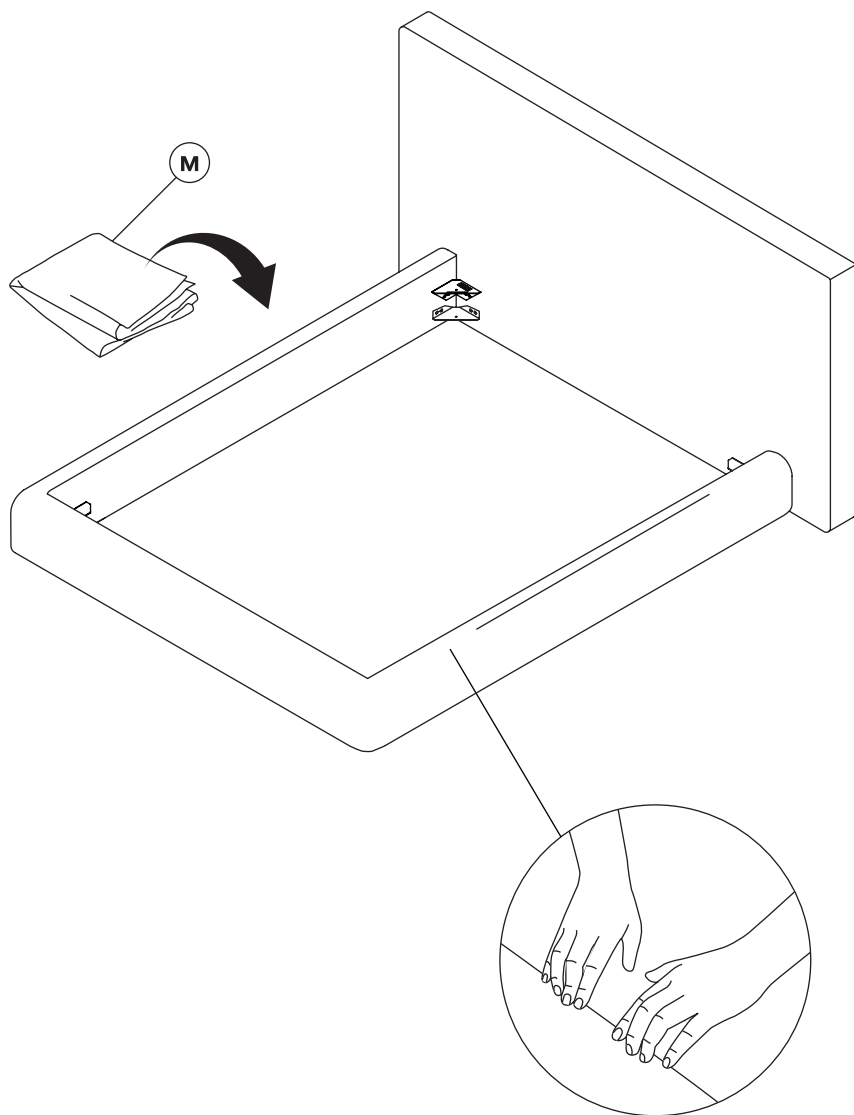


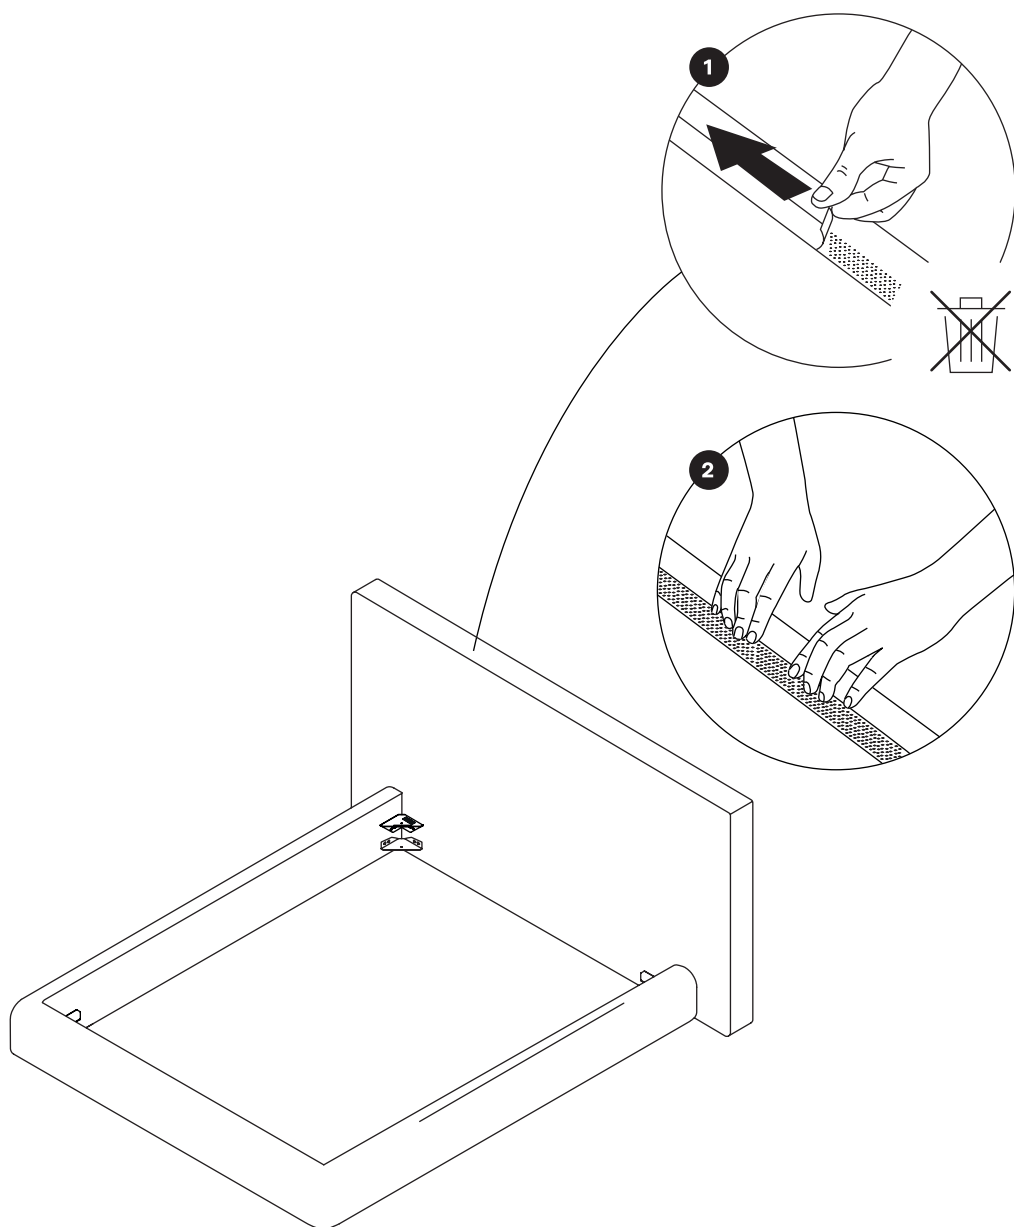


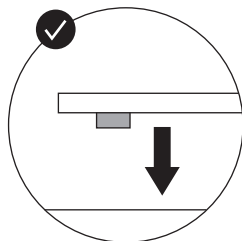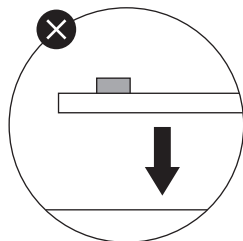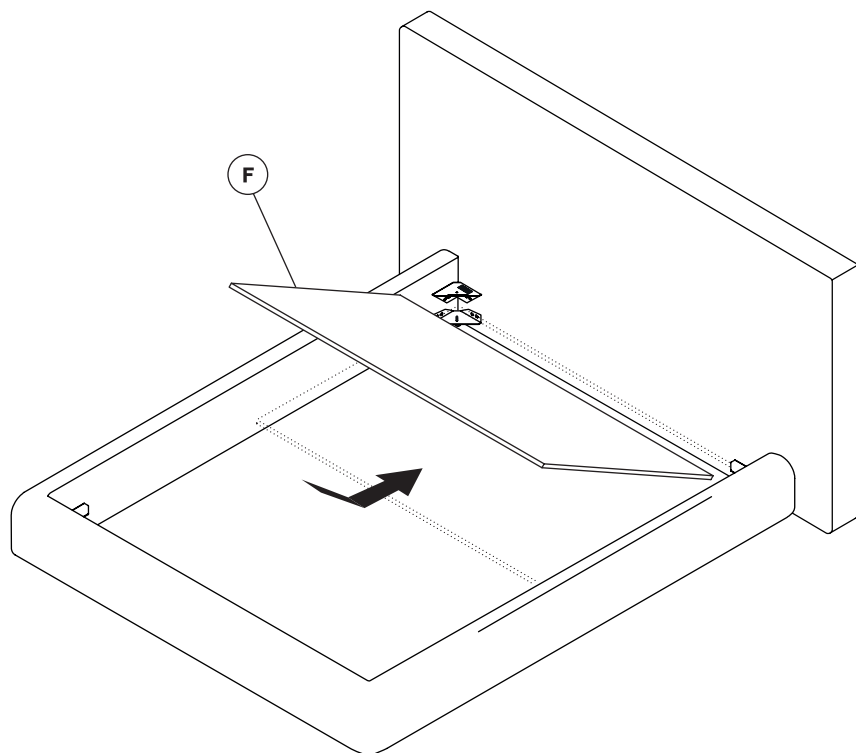


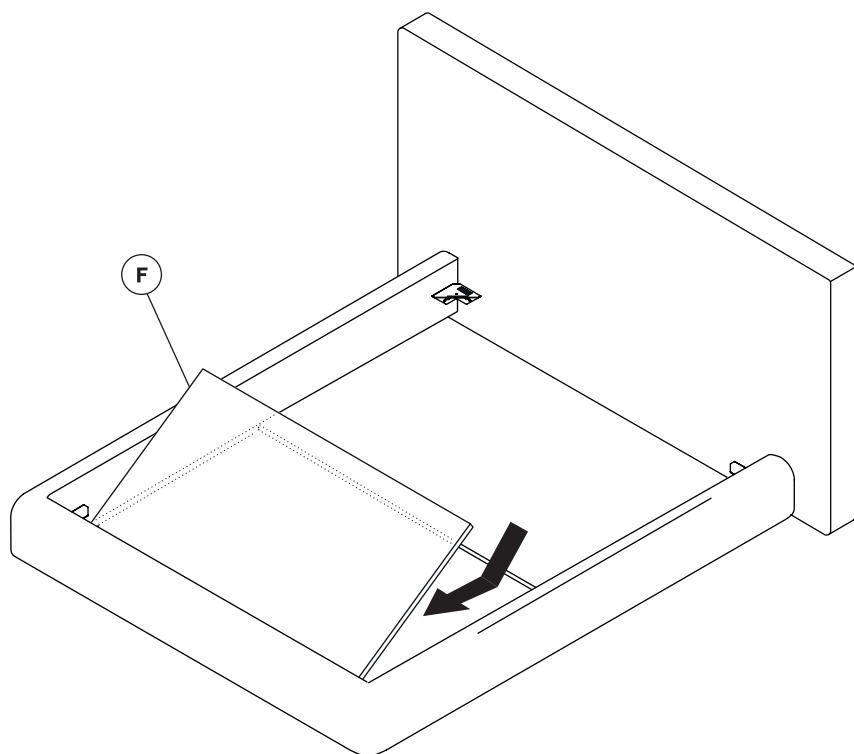


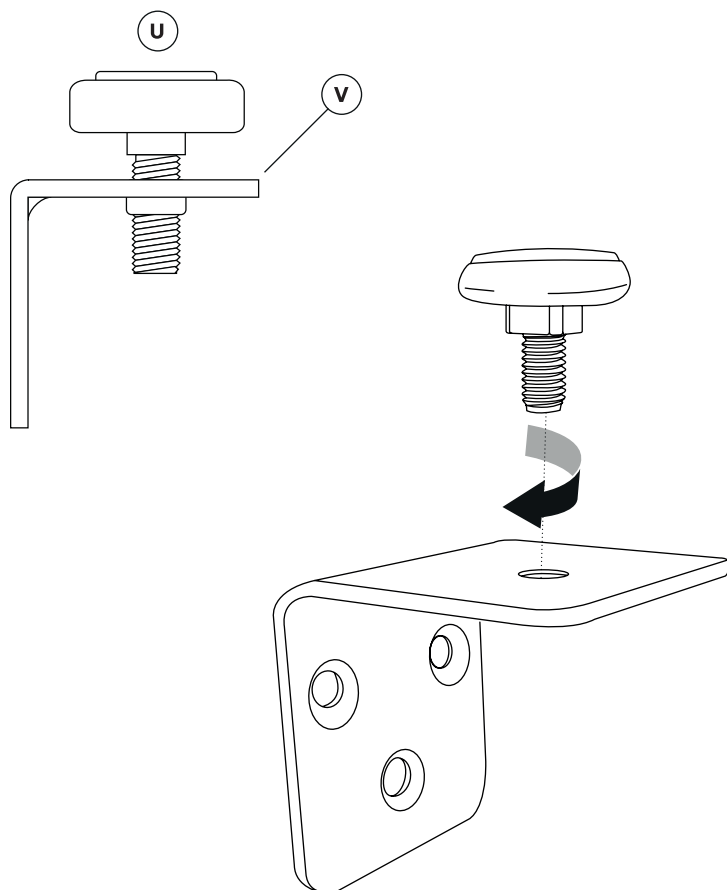


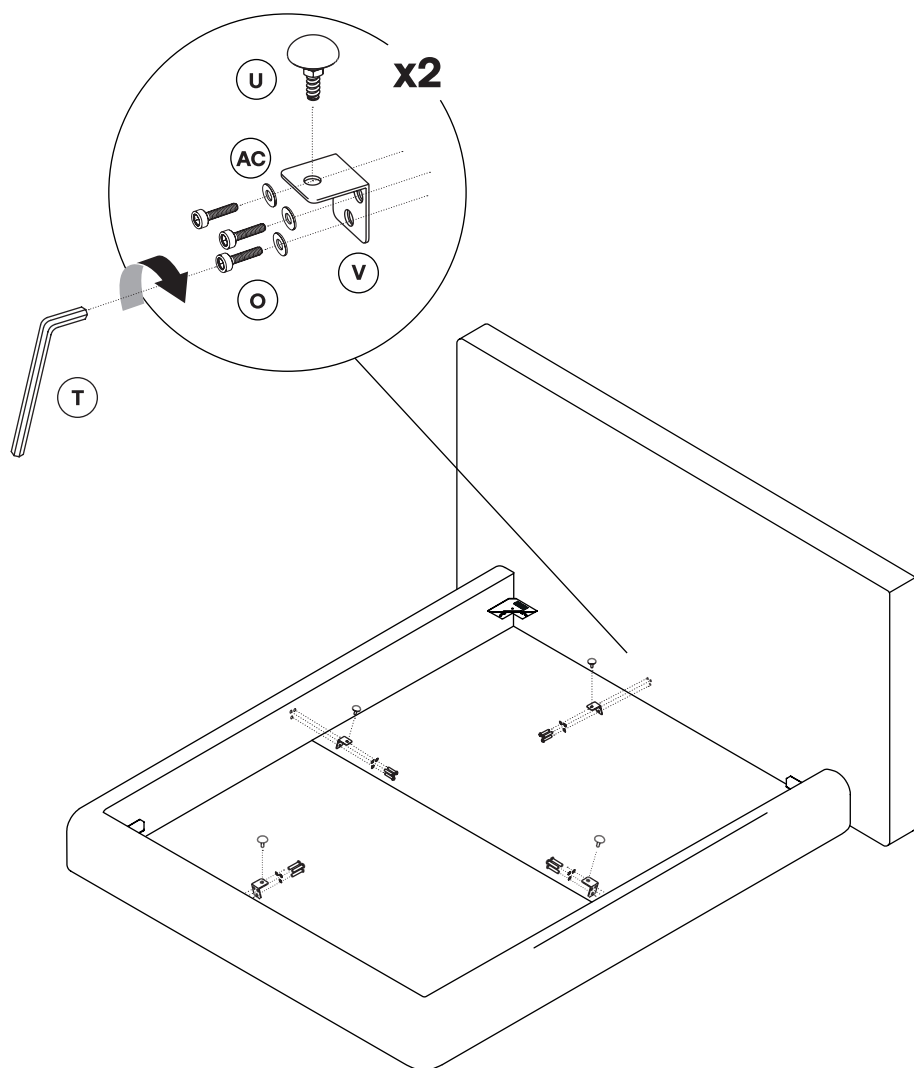


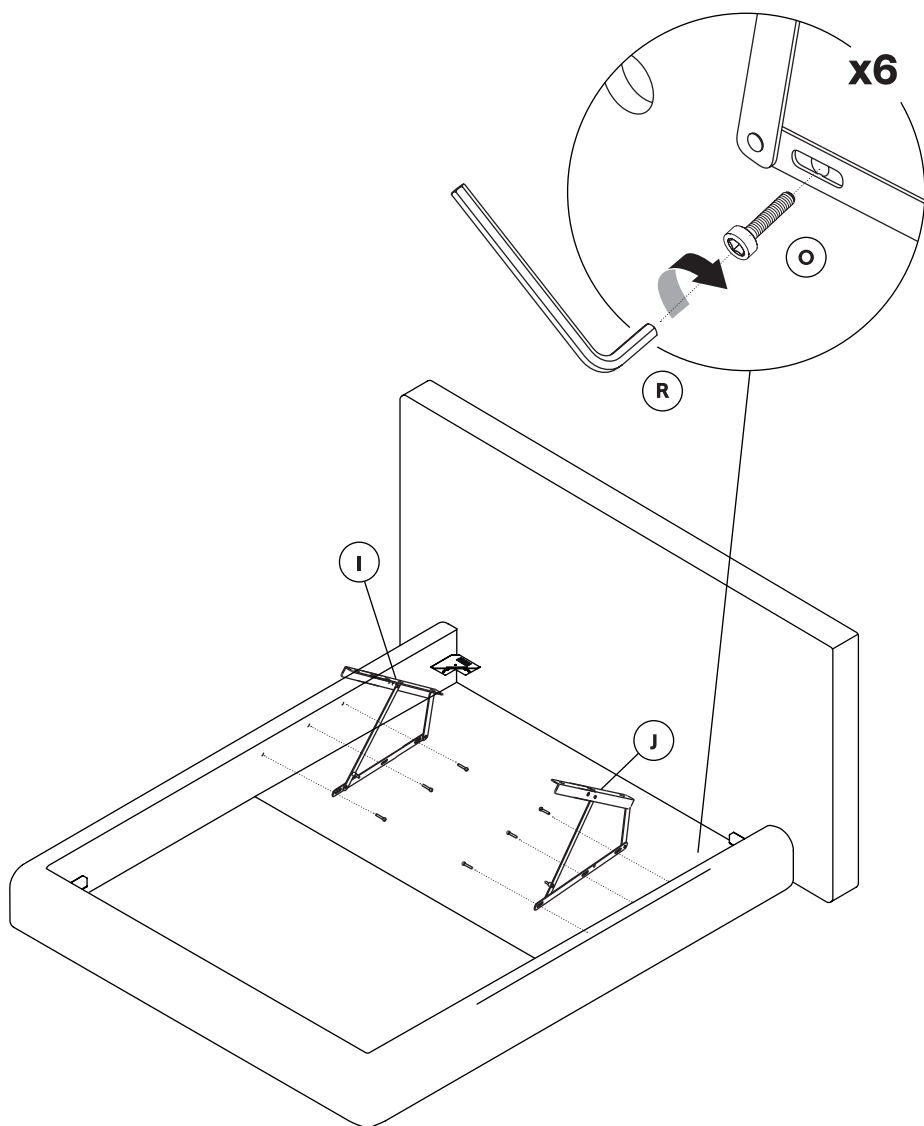

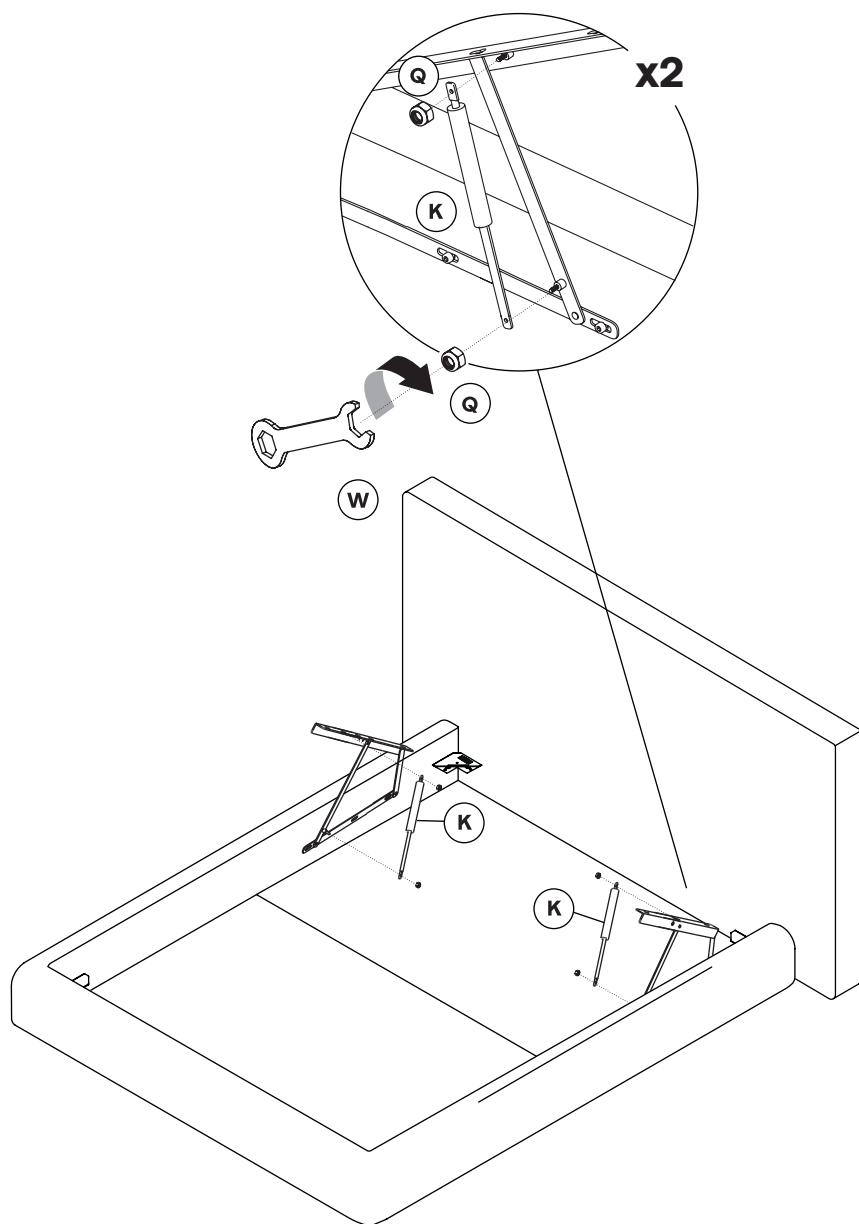


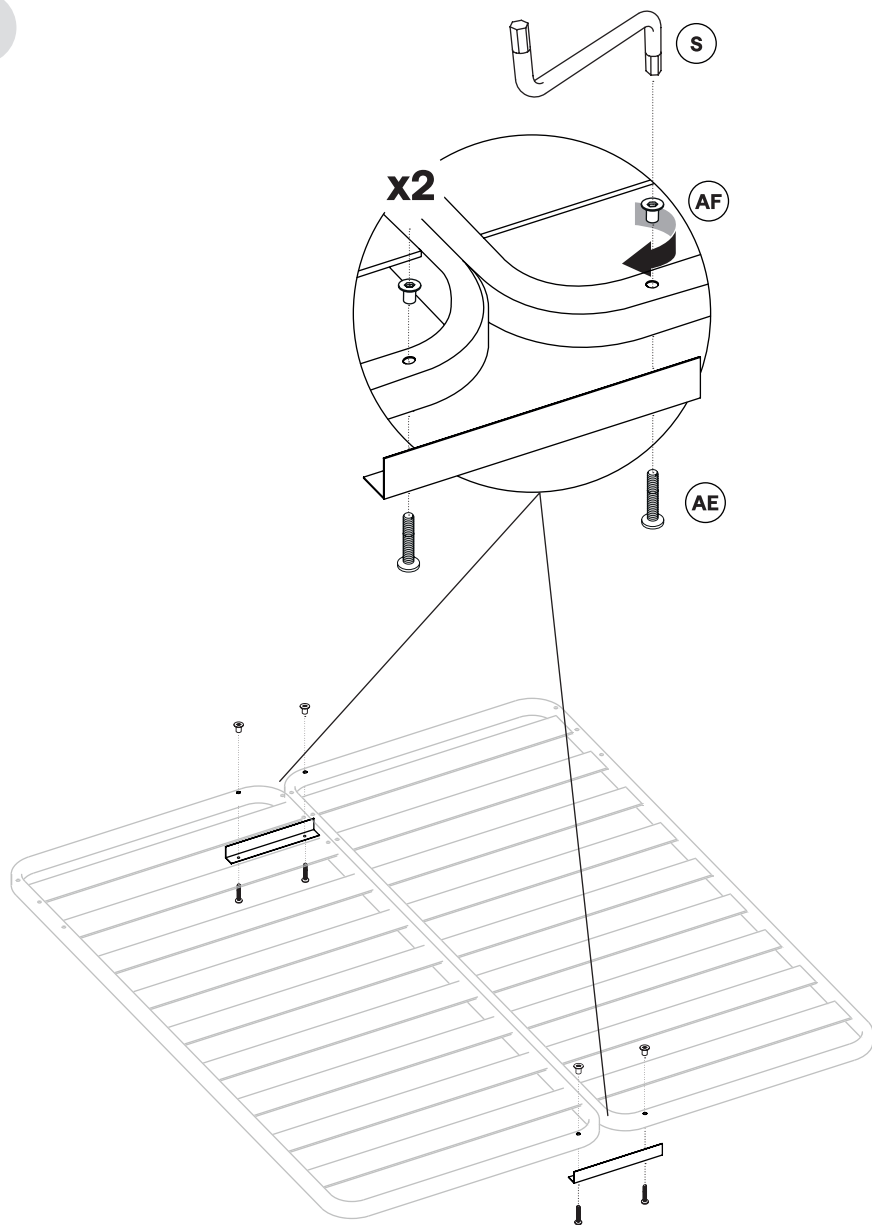

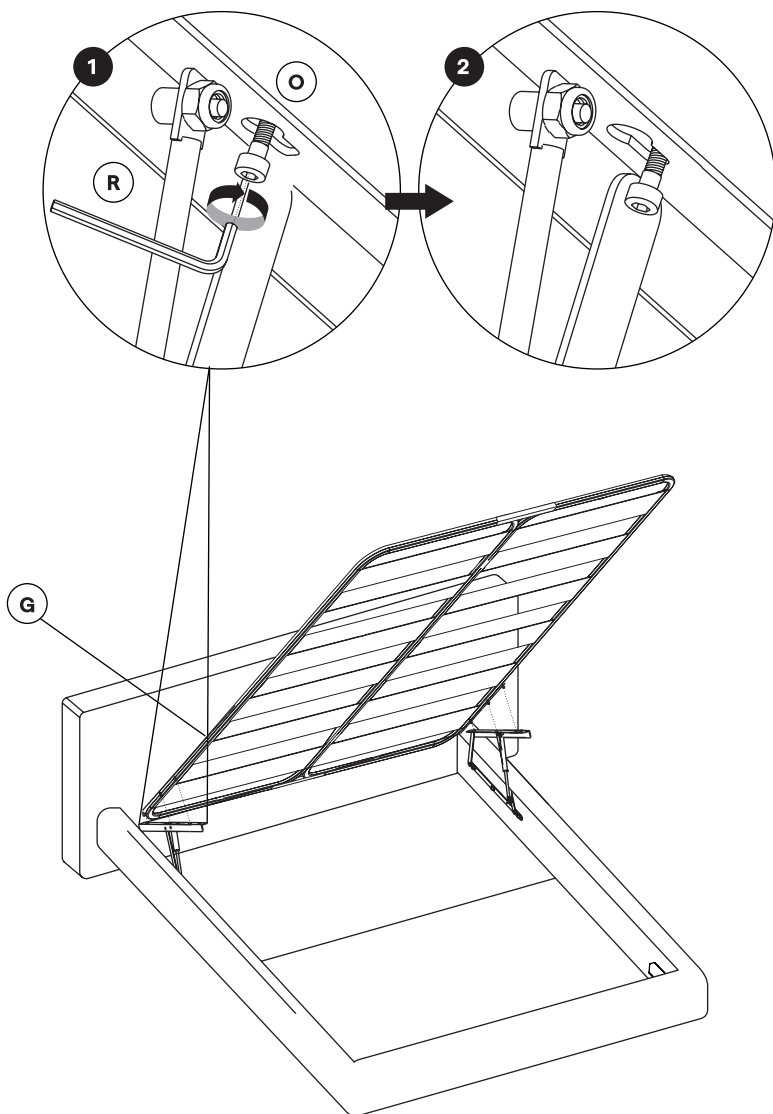
**i****x2**


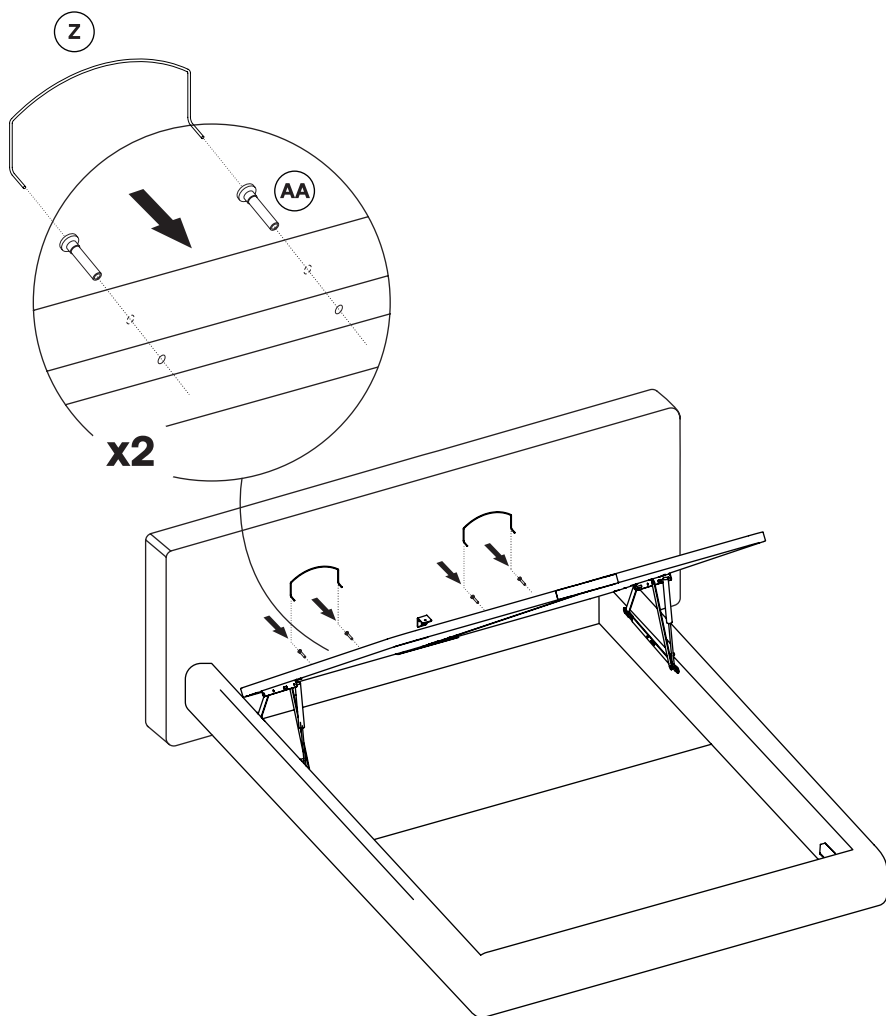







20

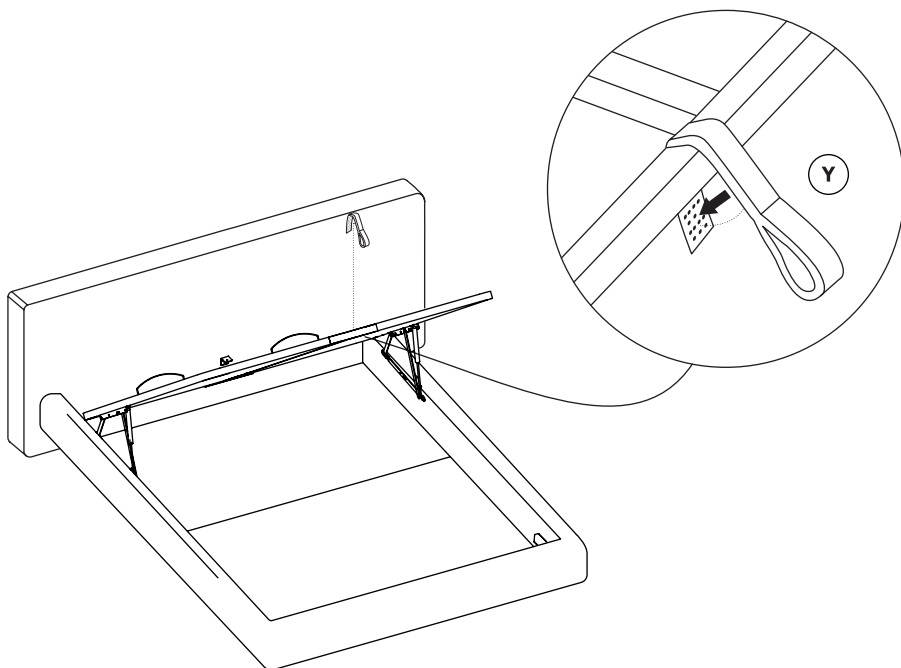

21

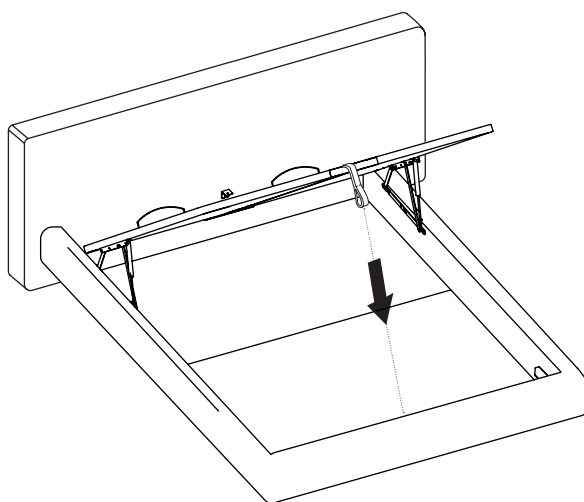

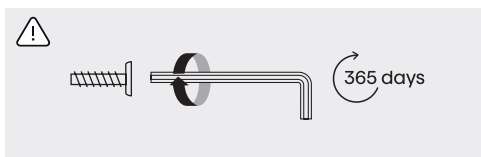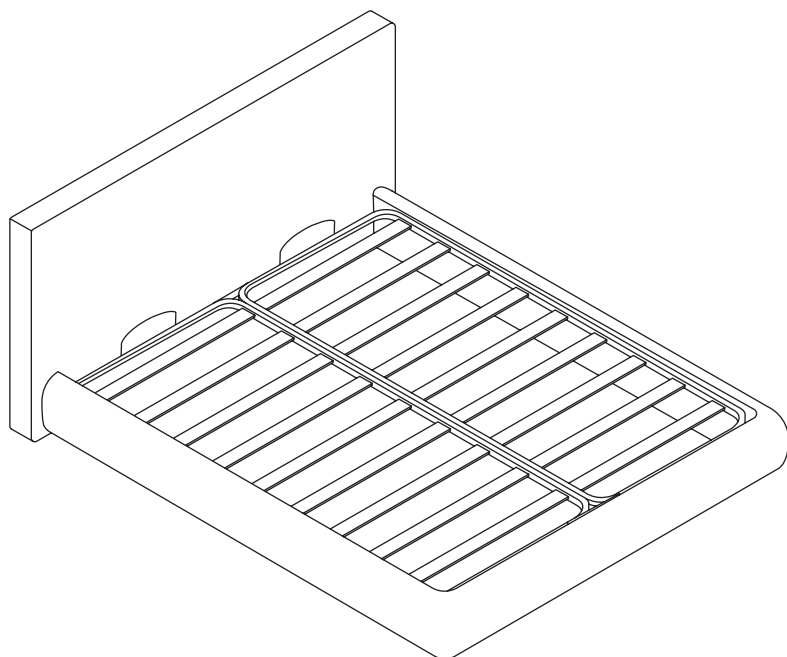

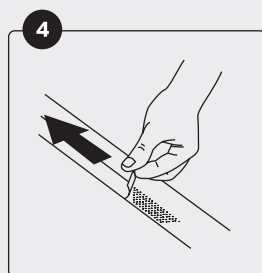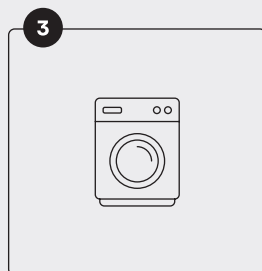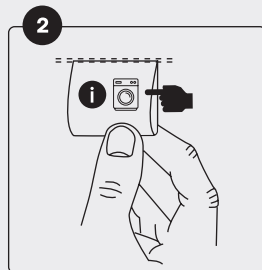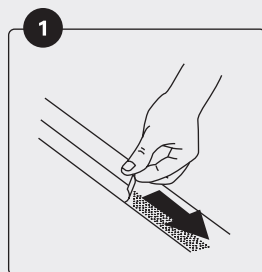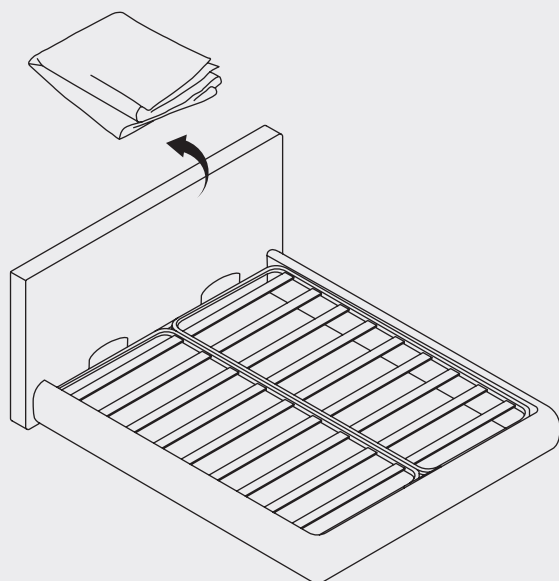

# Kave

**Julià Grup Furniture Solutions S.L.**

B-17616277

Pol. Ind. Bosc d'en Cuca  
C/ Tallers, 14. 17410 Sils, Spain  
[contact@kavehome.com](mailto:contact@kavehome.com)



IT: PAP 22. Carta.  
Verifica le disposizioni del tuo comune.